



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on a high-voltage system	1
1.2 Safety precautions when working in vicinity of high-voltage components	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
2 Repair instructions	3
2.1 Contact corrosion	3
2.2 Routing and attachment of lines	3
2.3 Rules for cleanliness when working on high-voltage system	3
3 Hazard classification of high-voltage system	5
93 - Electric drive systems	12
1 High-voltage components	12
1.1 Overview of fitting locations – high-voltage components	12
1.2 Testing high-voltage components and high-voltage cables	14
2 Warning stickers	15
2.1 Checking warning stickers	15
3 High-voltage battery unit	20
3.1 Assembly overview – high-voltage battery	20
3.2 Visual inspection of high-voltage battery 1 AX2	25
3.3 Diagnosis of high-voltage battery 1 AX2	26
3.4 Removing and installing high-voltage battery 1 AX2	26
3.5 Raising high-voltage battery 1 AX2	33
3.6 Leak test of high-voltage battery 1 AX2	36
3.7 Searching for leaks from high-voltage battery	37
3.8 Opening high-voltage battery 1 AX2	37
3.9 Voltage and insulation measurement	43
3.10 Opening electrical circuit	47
3.11 Closing high-voltage battery 1 AX2	49
3.12 Removing and installing module monitor control unit for batteries J497	53
3.13 Removing and installing switching unit for high-voltage battery SX6	55
3.14 Removing and installing battery regulation control unit J840	60
3.15 Removing and installing charge voltage control unit for high-voltage battery J966	62
3.16 Removing and installing high-voltage battery 1 AX2 wiring guide	63
3.17 Visual check of wiring harness	65
3.18 Removing and installing test lead for high-voltage battery 1 AX2	66
3.19 Discharging and charging capacitor	67
3.20 Removing and installing condenser	68
3.21 Charging and discharging battery modules	69
3.22 Removing and installing battery modules	71
4 Power and control electronics for electric drive	106
4.1 Assembly overview – power and control electronics for electric drive	106
4.2 Assembly overview - bracket for power and control electronics for electric drive	108
4.3 Removing and installing power and control electronics for electric drive JX1	108
4.4 Removing and installing bracket for power and control electronics for electric drive JX1	113
4.5 Removing and installing high-voltage system fuse 3 S353	114
5 Electric drive motor	117
5.1 General description - power and control electronics for electric drive	117
5.2 Assembly overview – electric drive motor	117
5.3 Removing and installing engine compartment cover	119
5.4 Removing and installing three-phase current drive VX54	120



5.5	Renewing three-phase current drive VX54	130
5.6	Calibrating three-phase current drive VX54	130
5.7	Removing and installing gearbox	131
5.8	Removing and installing drive motor temperature sender G712	131
5.9	Removing and installing drive motor rotor position sender 1 G713	133
6	Engine/motor control unit	137
6.1	Assembly overview - engine/motor control unit	137
6.2	Removing and installing engine control unit J623	139
6.3	Removing and installing bracket for engine/motor control unit J623	142
7	High-voltage cables	144
7.1	General description - electric drive motor	144
7.2	Overview of fitting locations – high-voltage cables	144
7.3	Removing and installing high-voltage wiring harness for drive motor PX2	146
8	Cooling system/coolant	150
8.1	Overview of fitting locations – cooling system	150
8.2	Connection diagram - coolant hoses	152
8.3	Checking cooling system for leaks	154
8.4	Draining and adding coolant	156
9	Coolant pump, regulation of cooling system	163
9.1	Assembly overview - coolant regulator unit	163
9.2	Removing and installing power and control electronics for electric drive V508	165
9.3	Removing and installing coolant pump for high temperature circuit V467	166
9.4	Removing and installing temperature sender after electric drive motor G788	167
10	Radiator, radiator fan	169
10.1	Assembly overview - radiator and radiator fan	169
10.2	Removing and installing radiator	171
10.3	Removing and installing radiator cowl with radiator fan	174
10.4	Removing and installing radiator fan V7	175
11	Removing and installing high voltage heater (PTC)	177
12	Air conditioner compressor	178
13	De-energising high-voltage system	179
14	Re-energising high-voltage system	181
15	Potential equalisation lines	182
15.1	Overview of fitting locations – potential equalisation lines	182
15.2	Potential equalisation lines - high-voltage battery 1 AX2	184
15.3	Potential equalisation lines - power and control electronics for electric drive JX1	185
15.4	Potential equalisation lines - charging unit 1 for high-voltage battery AX4	185
15.5	Potential equalisation lines - three-phase current drive VX54	186
15.6	Potential equalisation lines - high-voltage heater (PTC) Z115	186
15.7	Potential equalisation lines - electrical air conditioner compressor V470	187
16	Charging socket	188
16.1	Assembly overview – charging socket	188
16.2	Removing and installing high-voltage battery charging socket 1 UX4	190
16.3	Removing and installing actuator for high-voltage charging socket lock 1 F498	195
16.4	Manual release mechanism for charging socket	198
17	Charging unit for high-voltage battery	200
17.1	Assembly overview – charging unit for high-voltage battery	200
17.2	Removing and installing charging unit 1 for high-voltage battery AX4	201
17.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	205
18	Vehicle noise/engine sound	207
18.1	Overview of fitting locations – vehicle noise/engine sound	207
18.2	Removing and installing engine sound generator control unit J943	208
18.3	Removing and installing actuator 1 for engine sound generator R257	209



19 Accelerator pedal	212
19.1 Assembly overview - accelerator module	212
19.2 Removing and installing accelerator pedal module GX2	212