



Contents

00 - Technical data	1
1 Technical Data	1
1.1 Brake PR number correspondence	1
1.2 Brake technical data	2
45 - Anti-lock brake system	4
1 General information on the Bosch 5.7 anti-lock braking system (ABS)	4
1.1 ABS Bosch 5.7	4
2 General information for the anti-lock braking system (ABS) Bosch 8.0	5
3 General information on the Bosch 8.2 anti-lock braking system (ABS)	7
4 General information on the Bosch 9.0 anti-lock braking system (ABS)	8
5 Information on repair works on the ABS	9
6 Connect Vehicle diagnostic, testing and information system VAS 5051A /52 and select functions	10
7 Electrical/electronic components and installing locations	11
7.1 ABS Bosch 5.7	11
7.2 ABS Bosch 8.0 (ABS/ESP)	13
7.3 ABS Bosch 8.2	15
7.4 ABS Bosch 9.0	16
8 Hydraulic unit, brake servo/brake master cylinder - assembly overview (Bosch 5.7)	18
8.1 Hydraulic unit connections	20
8.2 Command unit for hydraulic unit - remove and install	20
8.3 Brake pressure sensor 1 G201 - remove and install	25
9 Hydraulic unit, brake servo/brake master cylinder - assembly overview (Bosch 8.0 / 8.2)	26
9.1 Hydraulic unit connections	28
9.2 ABS control unit J104 on ABS hydraulic unit N55 - remove and install	28
10 Fault indication via control lights	35
10.1 Control lights	35
11 ABS system components on the front and rear axles - remove and install	37
11.1 ABS system components on the front axle - remove and install	37
11.2 Front axle speed sensor - remove and install	37
11.3 Bosch 5.7 front speed sensor cables - remove and install	38
11.4 Bosch 8.0 / 8.2 front speed sensor cables - remove and install	41
11.5 ABS system components on rear axle (vehicles with drum brakes) - remove and install ..	42
11.6 Speed sensor on rear axle (drum brake) - remove and install	43
11.7 Rear speed sensor cables - remove and install	44
12 ESP system components - remove and install	46
12.1 Lateral tilting intensity sensor G202 and Lateral acceleration sensor G200 - remove and install	46
12.2 Steering angle sensor G85 - remove and install	47
46 - Brakes - mechanism	48
1 Front wheel brake - repair	48
1.1 Front brake - Brake caliper FS II - assembly overview	48
1.2 Brake pads - remove and install	50
1.3 FS II brake caliper - remove and install	52
1.4 Front wheel brake - FS II brake caliper - repair	55
1.5 Brake pads, FS III disc brake cylinder - remove and install	56
1.6 FS III brake caliper - remove and install	58
1.7 Brake disc - remove and install	60
1.8 Brake disc - check (disc knocking)	61



1.9	Brake disc with visual check - check	62
2	Rear wheel brake (drum brake) - repair	65
2.1	Rear wheel brake - assembly overview	65
2.2	Brake drum - repair	67
2.3	Brake drum - remove and install	69
2.4	Brake shoes - remove and install	70
2.5	Rear wheel brake cylinder - remove and install	73
3	Handbrake - assembly overview	74
3.1	Handbrake cable - adjust	74
3.2	Handbrake cable (drum brake) - remove and install	76
3.3	Handbrake lever handle - remove and install	81
3.4	Handbrake lever - remove and install	82
3.5	Handbrake switch - remove and install	84
4	Brake pedal - assembly overview	85
4.1	Brake pedal - separate	86
4.2	Pedal set - remove and install	87
4.3	Brake pedal - remove and install	88
4.4	Brake pedal switch F47 - remove and install	89
47 - Brakes - hydraulics		90
1	Assembly overview: Brake servo/brake master cylinder	90
1.1	Master cylinder - remove and install	92
1.2	Inspect the non-return valve	93
1.3	Brake servo - remove and install	93
1.4	Vacuum pump for 4-cylinder diesel engines and with distribution injector pump (diesel vehicles) - remove and install	97
2	Vacuum system - Check	99
2.1	Test instructions	99
2.2	Servo brake vacuum measurement device VAS 6721 - connect	100
2.3	Vacuum generation control	101
2.4	Leak control	101
2.5	Vacuum generation with the manual vacuum pump VAS 6213	103
3	Front brake caliper, FS II brake caliper - repair	104
3.1	Plunger for front brake caliper - remove and install	105
4	Front brake caliper, FS II brake caliper - repair	107
4.1	Front brake caliper plunger - remove and install	107
5	Vehicles without braking power adjustment - assembly overview	110
6	Braking power adjustment - assembly overview	111
6.1	Braking power adjustment - adjust	112
6.2	Braking power adjustment - check	112
7	Bleed the brake system	114
7.1	Bleed the brake system with the filling and bleeding equipment	114
7.2	Brake system, only vehicles with ABS/EDS/ASR - bleed when the reservoir is empty	116