



Contents

| | |
|--|----------|
| 00 - Technical data | 1 |
| 1 General notes on rims and tyres (passenger vehicles) | 1 |
| 1.1 Technical conditions for combining rims and tyres | 2 |
| 1.2 Miscellaneous | 2 |
| 1.3 Remove the tyre from the arch | 4 |
| 1.4 Install the tyre in the arch | 4 |
| 1.5 Protecting the wheel centering seat against corrosion | 5 |
| 2 Curiosities about rims and tyres (passenger vehicles) | 6 |
| 2.1 Wear/tyre mileage | 6 |
| 2.2 Rolling noises coming from the tyres | 15 |
| 2.3 Drive instability due to rim/tyre | 18 |
| 2.4 The vehicle deviates to one side | 25 |
| 2.5 Damages on the tyres | 29 |
| 2.6 Useful notes related to tyres and wheels | 36 |