



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Battery A - disconnect and connect	2
1.2 Battery A - remove and install	4
1.3 Battery A console - remove and install	6
1.4 Tightening torques - battery	8
2 Starting motor	9
2.1 Starter B - remove and install	9
2.2 Starter B - (Manufacturer Valeo) - disassemble and assemble	10
2.3 Starter B - (Manufacturer Bosch) - disassemble and assemble	14
2.4 Tightening torques - Starter	27
3 Alternator	28
3.1 Generator (Alternator) C - fastening cable (B+)	28
3.2 Generator (Alternator) C - check Poly-V belt	29
3.3 Generator (Alternator) C for 1.0 and 1.6-litre (CCNA, CCRA, CFZA) engines - assembly overview	29
3.4 Generator (Alternator) C for 1.0 and 1.6-litre (BJE, BNX, BAH, BPA) engines - assembly overview	35
3.5 Generator (Alternator) C for 1.4-litre diesel (BNM) engine - assembly overview	39
3.6 Generator (Alternator) C for 1.9-litre (ASY) diesel engine - assembly overview	43
3.7 Generator (Alternator) C for 1.4-litre (BKR) engine - assembly overview	46
3.8 Generator (Alternator) C for 1.2-litre (BMD) engine - assembly overview	49
3.9 Generator (Alternator) C - replace Poly-V belt pulley	52
3.10 Voltage regulator C1 (Manufacturer Bosch) - disassemble and assemble	54
3.11 Voltage regulator C1 (Manufacturer Valeo) - disassemble and assemble	55
3.12 Tightening torques - Alternator	56
90 - Gauges, instruments	57
1 Combined instrument	57
1.1 Locating defects and indicating faults	57
1.2 Combined instrument K - replace	58
1.3 Combined instrument K - remove and install	60
1.4 Combined instrument K - connector pinout	61
1.5 Combined instrument K - control light symbols	61
1.6 Combined instrument K - replace control light lamps	65
1.7 Tightening torque - Combined instrument	66
2 Indication of Service Interval	67
2.1 Service interval indication - reset to zero	67
92 - Windscreen wash/wipe system	68
1 Windscreen wiper system	68
1.1 Windscreen wiper system - assembly overview	68
1.2 Windscreen wiper blade - remove and install	70
1.3 Windscreen wiper blade and arm set - remove and install	71
1.4 Windscreen wiper mechanism - remove and install	72
1.5 Windscreen wiper motor V - disassemble and assemble	74
1.6 Windscreen wiper blade resting position - adjust	77
1.7 Blade application angle on windscreen - adjust	78
1.8 Tightening torques - Windscreen wiper system	79
2 Windscreen washer system	80
2.1 Windscreen washer system - assembly overview	80
2.2 Reservoir for the windscreen washer system - remove and install	81



2.3	Windscreen washer pump V5 and/or Rear window washer pump V13 - remove and install	82
2.4	Windscreen washer system spray nozzles - replace	82
2.5	Windscreen washer system spray nozzles - adjust	83
2.6	Tightening torque - windscreen and rear window washer system	84
3	Rear window wiper system	85
3.1	Rear window wiper and washer system - overview	85
3.2	Rear window wiper arm - remove and install	86
3.3	Rear window wiper motor V12 - remove and install	87
3.4	Rear window wiper blade resting position - adjust	88
3.5	Rear window wiper blade - remove and install	88
3.6	Tightening torques - rear window wiper system	89
4	Rear window washer system	90
4.1	Rear window washer system - assembly overview	90
4.2	Spray nozzle - replace	91
4.3	Rear window washer system spray nozzle - adjust	91
94	Lights, bulbs, switches - exterior	93
1	Main headlights	93
1.1	Main headlights - assembly overview	93
1.2	Main Headlights - remove and install	95
1.3	Left headlight beam reach control motor V48 and/or Right headlight beam reach control motor V49 - remove and install	96
1.4	Main headlights (single) - change lamps	97
1.5	Main headlights (dual) - change lamps	99
1.6	Main headlights (Europe) - change lamps	100
1.7	Main headlights - repair fastening taps	102
1.8	Adapting main headlights to right-side traffic (Europe)	104
1.9	Tightening torque - Main headlights	106
2	Fog lights	107
2.1	Fog lights - assembly overview	107
2.2	Fog lights - remove and install	108
2.3	Tightening torque - fog lights	109
3	Auxiliary headlights	110
3.1	Auxiliary headlights (► 04/07) - assembly overview	110
3.2	Auxiliary lights (05/07 ►) - assembly overview	111
3.3	Auxiliary headlights - remove and install	111
3.4	Auxiliary headlights - replace lamps	112
4	Headlights - check adjustment	113
4.1	Check headlight adjustment (with the new inspection display without 15° adjustment line).	114
4.2	Headlights - adjust	115
5	Side indicator lights	117
5.1	Side indicator lights - remove and install	117
6	Tail lights	118
6.1	Tail lights - assembly overview	118
6.2	Tail light - remove and install	119
6.3	Tail light lamp support - remove and install	120
6.4	Tightening torque - tail lights	120
7	License plate light	121
7.1	License plate light - remove and install	121
7.2	License plate light X - replace the lamp	122
8	Additional brake light	123
8.1	Auxiliary brake light - remove and install	123
8.2	Tightening torque - auxiliary brake light	124



9	Switch set	125
9.1	Indicator and wiper/washer switches - remove and install	125
9.2	Connectors pinout in the switch set for turn lights and window wipers/washers	126
9.3	Tightening torque - switch set	126
10	Steering lock set	127
10.1	Steering lock set - remove and install	127
11	Ignition/starter switch and key cylinder	129
11.1	Key cylinder - remove and install	129
11.2	Ignition switch D - remove and install	131
11.3	Ignition switch D - pinout	132
96	Lights, bulbs, switches - interior	133
1	Internal lights and switches	133
1.1	Light switch E1 - remove and install	133
1.2	Dashboard switches - remove and install	133
1.3	Switches in dashboard (vehicles - EU) - remove and install	135
1.4	Seat heating switch E73 (Europe vehicles) - remove and install	135
2	Front door lights and switches	137
2.1	Front internal lighting switch (door contact) E459 - remove and install	137
2.2	Left front power window drive switch E40 and/or Right front power window drive switch E41 - remove and install	138
2.3	Rear-view mirror adjustment switch E43 with Switch for rear-view mirror adjustment E48 - removal and installation	138
2.4	Rear-view mirror adjustment switch E43 with Switch for rear-view mirror adjustment E48 (Europe vehicles) - remove and install	139
3	Lights and switches in luggage compartment	140
3.1	Luggage compartment lighting switch F5 - remove and install	140
3.2	Luggage compartment lighting - remove and install	141
3.3	Luggage Compartment lighting fixture W3 - replace	141
4	Roof lining lights and switches	143
4.1	Internal front light W1	143
4.2	Front internal light W1 with reading light	145
4.3	Front internal light W1 with sunroof (Europe vehicles)	148
4.4	Make-up mirror lighting - remove and install	151
5	Horns	153
5.1	Treble tone horn H2 - assembly overview	153
5.2	Treble tone horn H2 (Europe vehicles) - assembly general view	155
5.3	Horn actuator H	156
6	Immobilizer	157
6.1	Immobilizer control unit J362 (IMMO 3) for Europe vehicles - remove and install	157
6.2	Immobilizer control unit J362 (IMMO 2) - remove and install	157
6.3	Immobilizer reading coil D2 - remove and install	158
6.4	Ignition key - variable code transponder	158
6.5	Ignition key - adapt to immobilizer	158
6.6	Ignition key - replace battery	159
7	Alarm System	160
7.1	Locating defects and indicating faults	160
7.2	Anti-theft alarm system - activate and deactivate	160
7.3	Ultra-sound sensor for alarm system G209 - remove and install	161
7.4	Alarm system horn H8 (vehicles with mechanical steering) - assembly overview	162
7.5	Alarm system horn H8 (vehicles with power steering) - assembly overview	164
7.6	Alarm system horn H8 (Diesel vehicles) - assembly overview	165
7.7	Alarm system horn H8 (Diesel vehicles with right-hand steering wheel) - assembly general view	167



97 - Wiring	169
1 Fuse and relay support	169
1.1 Fuse and relay support - remove and install	169
2 Coupling stations and multi-pin connector	170
2.1 Coupling station - A pillar	170
2.2 Coupling station - B pillar	170
2.3 Multi-pin connector in the fire wall	170
3 Fuse box	174
3.1 Fuse box - remove and install	174
4 Control units	177
4.1 Control unit for the on-board electrical system J519	177
4.2 Central control unit for the convenience system J393	178