



Contents

27 - Starter, current supply, CCS	1
1 Battery A	1
1.1 Important information concerning battery A	1
1.2 Battery A types	2
1.3 Warning notes and safety norms	3
1.4 Battery A connection terminals	4
2 Battery A - check	6
2.1 Battery A checking sequence	6
2.2 Check visually	6
2.3 Check the battery A with inspection window	7
2.4 Check the battery A with battery inspection window "3 colours"	7
2.5 Check the battery A with battery inspection window "2 colours"	8
2.6 Checking the low-maintenance battery A	9
2.7 Check the charge of the Battery A	12
2.8 Charge acceptance test	23
2.9 Check the resting current of the battery	25
2.10 Check the final battery charge	28
2.11 Checking the resting voltage of batteries (unused or stored vehicles)	30
3 Battery A - charging	32
3.1 Battery charger VAS 5095A	32
3.2 Battery charger VAS 5900	37
3.3 Battery charger VAS 5900A	48
3.4 Battery charger VAS 5903	50
3.5 Battery charger VAS 5906	61
3.6 Completely flat batteries	63
3.7 Battery (Delphi) - charging procedure	64
4 Speed regulator (GRA)	67
4.1 Speed regulator (GRA) - activating/deactivating	67
92 - Windscreen wash/wipe system	68
1 Washer hoses - connecting and disconnecting	68
2 Washer hoses - repair	69
2.1 Repairing smooth hoses	69
2.2 Repairing wrinkled hoses	69
94 - Lights, bulbs, switches - exterior	71
1 Adhere to the safety warnings and the application of gas-discharge lamps	71
97 - Wiring	74
1 Vehicle diagnostic, testing and information system	74
1.1 Vehicle Diagnosis, Measurement and Information System - connect	74
2 Harness and connection repairs	77
2.1 Harness repair kits	77
2.2 Description of tools	78
2.3 General notes on repair work on the electrical system of the vehicle	80
2.4 Harness repair	81
2.5 Repairing connector terminals and connectors	90
2.6 Unlocking and disassembling the terminals	94