



Contents

| | |
|--|-----------|
| 68 - Internal Equipment | 1 |
| 1 Internal rearview mirror | 1 |
| 1.1 Internal rearview mirror - removing and installing | 1 |
| 1.2 Internal rearview mirror support plate - glue | 1 |
| 1.3 Internal rearview mirror with automatic anti-glare - general assembling overview | 2 |
| 1.4 Internal rearview mirror with automatic anti-glare - remove and install | 4 |
| 1.5 Mirror fastening support (with automatic anti-glare) - install | 6 |
| 2 Object compartment, covers and lids | 8 |
| 2.1 Center console - remove and install | 8 |
| 2.2 Cup holder on seat cushion (Europe only)- assembly overview | 9 |
| 2.3 Parking brake lever handle - remove and install | 10 |
| 2.4 Tray at the passenger's side (instrument panel without glove compartment) - remove and install | 11 |
| 2.5 Glove compartment (Europe only) | 11 |
| 2.6 Central frame on the instrument panel (instrument panel without glove compartment) | 12 |
| 2.7 Central frame on instrument panel (with glove compartment - Europe only) | 14 |
| 2.8 Luggage retaining net | 16 |
| 2.9 Parasol - removal and installation | 18 |
| 3 Roof's Safety Handles | 20 |
| 3.1 Roof safety handle - remove and install | 20 |
| 4 Door sill's trims | 21 |
| 4.1 Door sill's trims (2 doors) | 21 |
| 4.2 Door sill trims (4 doors) | 23 |
| 69 - Passenger protection | 29 |
| 1 safety belts - general information | 29 |
| 1.1 Safety measures for belt pre-tensioner | 29 |
| 1.2 Belt pre-tensioner - check | 29 |
| 1.3 Pre-tensioner units - elimination | 29 |
| 2 Safety belts - checking | 30 |
| 2.1 Check points | 30 |
| 2.2 Mooring points of the children's seat (ISOFIX) - checking after accidents | 33 |
| 3 Front safety belts | 34 |
| 3.1 Front seat belt „2-door“ (with pre-tensioner) - assembly overview | 34 |
| 3.2 Front seat belt „2-door“ (with pre-tensioner) - remove and install | 35 |
| 3.3 Front seat belt „2-door“ (without pre-tensioner) - assembly overview | 36 |
| 3.4 Front seat belt „2-door“ (without pre-tensioner) - remove and install | 38 |
| 3.5 Front seat belt „4-door“ (without pre-tensioner) - assembly overview | 38 |
| 3.6 Front seat belt „4-door“ (without pre-tensioner) - remove and install | 40 |
| 3.7 Belt height adjustment „2 and 4-door“ - remove and install | 41 |
| 3.8 Fastening point of the front belt - removal and installation | 42 |
| 3.9 Front seat belt latch (Europe only) - remove and install | 43 |
| 3.10 Fastening of the front belt - removal and installation | 44 |
| 4 Rear safety belts | 46 |
| 4.1 Rear seat belt (with automatic inertia reel) - assembly overview | 46 |
| 4.2 External rear seat belt (with automatic inertia reel) - remove and install | 46 |
| 4.3 Rear seat belts (without automatic inertia reels) - assembly overview | 47 |
| 4.4 External rear seat belts (without automatic inertia reels) - remove and install | 48 |
| 4.5 Lower fastening point of the rear belt - removal and installation | 49 |
| 4.6 Lap belt with dual latch „2 and 4-door“ (rear seat without longitudinal adjustment) - remove and install | 50 |
| 4.7 Lap belt with dual latch „2 and 4-door“ (rear seat with longitudinal adjustment) - remove and install | 54 |



| | | |
|-----------|---|------------|
| 4.8 | Single latch„2-door“ (split rear set with longitudinal adjustment - Europe only) - remove and install | 55 |
| 5 | Airbag | 57 |
| 5.1 | Installation locations - assembly overview | 57 |
| 5.2 | Safety measures for working with Airbags | 57 |
| 5.3 | Airbag ignition devices after an accident - replacing | 58 |
| 5.4 | Ignition device for driver's airbag N95 (steering wheel with 3 spokes) - removal and installation | 59 |
| 5.5 | Ignition device for driver's airbag N95 (steering wheel with 4 spokes) - removal and installation | 61 |
| 5.6 | Connector of the airbag coil and return spring with sliding ring F138 - remove and install | 64 |
| 5.7 | Trigger 1 for front passenger's airbag N131 - remove and install | 65 |
| 5.8 | Driver's/passenger's side airbag trigger N199 / N200 - remove and install | 67 |
| 5.9 | Control unit for the airbag J234 - removal and installation | 69 |
| 5.10 | Passenger's side airbag crash sensor G180 and Driver's side airbag crash sensor G179 - remove and install | 70 |
| 5.11 | Components - adapting/verifying | 72 |
| 6 | Deactivation of the airbag | 73 |
| 6.1 | Ignition device 1 for the front passenger airbag N131 - blocking or activation | 73 |
| 70 | Finishing/insulation | 74 |
| 1 | Instrument panel | 74 |
| 1.1 | Tools | 74 |
| 1.2 | Instrument panel - remove and install | 74 |
| 1.3 | Instrument panel (with glove compartment - exclusive Europe) - remove and install | 77 |
| 1.4 | Cross support/Instruments panel - removal and installation | 80 |
| 1.5 | Instrument panel cover - remove and install | 86 |
| 1.6 | Steering column covering - remove and install | 87 |
| 1.7 | Steering column covering with adjustment - remove and install | 89 |
| 2 | Doors' linings (2 doors) | 93 |
| 2.1 | Tools | 93 |
| 2.2 | Driver's side front door lining - remove and install | 93 |
| 2.3 | Front passenger's side door lining - remove and install | 95 |
| 3 | Doors' linings (4 doors) | 98 |
| 3.1 | Tools | 98 |
| 3.2 | Front door lining - assembly overview | 98 |
| 3.3 | Front door lining - remove and install | 99 |
| 3.4 | Rear door lining - general overview of assembly | 101 |
| 3.5 | Rear door lining - remove and install | 102 |
| 4 | Lining of columns and sides | 104 |
| 4.1 | Tools | 104 |
| 4.2 | Column A lining - remove and install | 104 |
| 4.3 | Column B lining (2 doors) - removal and installation | 106 |
| 4.4 | Column B linings (4 doors) - assembly overview | 107 |
| 4.5 | Column B lining (4 doors) - removal and installation | 108 |
| 4.6 | Column B lining (4 doors) - removal and installation | 110 |
| 4.7 | Column C lining (2 doors) - removal and installation | 111 |
| 4.8 | Pillar C lining (4 doors) - assembly overview | 114 |
| 4.9 | Column C lining (4 doors) - removal and installation | 114 |
| 4.10 | Side lining (2 doors) - removal and installation | 115 |
| 5 | Linings of the luggage compartment | 118 |
| 5.1 | Tools | 118 |
| 5.2 | Rear lid lining - remove and install | 118 |
| 5.3 | Luggage compartment cover - removal and installation | 121 |
| 5.4 | Lower lining and cover of the rear panel - removal and installation | 122 |



| | | |
|-------------|---|------------|
| 5.5 | Luggage compartment side lining - remove and install | 122 |
| 6 | Bonnet noise insulation | 124 |
| 6.1 | Bonnet noise insulation - remove and install | 124 |
| 7 | Roof linings (2 ports) | 126 |
| 7.1 | Pre-molded overhead lining - removal and installation | 126 |
| 7.2 | Pre-molded roof lining (sunroof) - removal and installation | 128 |
| 8 | Roof lining (4 ports) | 132 |
| 8.1 | Pre-molded overhead lining - general overview of assembly | 132 |
| 8.2 | Pre-molded overhead lining - removal and installation | 132 |
| 9 | Noise insulation | 134 |
| 9.1 | Tools | 134 |
| 9.2 | Assembly overview | 134 |
| 9.3 | Floor lining - remove and install | 144 |
| 72 - | Seat Structure | 146 |
| 1 | Front seats | 146 |
| 1.1 | Left front seat - remove and install | 146 |
| 1.2 | Right front seat - remove and install | 150 |
| 1.3 | Front seat cover - assembly overview | 154 |
| 1.4 | Front seat cover (with parallel height regulation) - removal and installation | 155 |
| 1.5 | Fire extinguisher support - removal and installation | 156 |
| 1.6 | Front seat head rest - assembly overview | 157 |
| 1.7 | Front seat backing - removal and installation | 158 |
| 1.8 | Front seat backrest (Europe only) - remove and install | 160 |
| 1.9 | Parallel height adjustment - removal and installation | 161 |
| 1.10 | Cable for unlocking the backing - assembly overview | 162 |
| 1.11 | Cable for unlocking the backing - removal and installation | 163 |
| 1.12 | Front seat head rest guide - removal and installation | 165 |
| 1.13 | Object holder under the driver's seat - removal and installation | 166 |
| 2 | Rear seats | 167 |
| 2.1 | Back seat - remove and install | 167 |
| 2.2 | Rear seat (one-piece, without longitudinal adjustment) - assembly overview | 168 |
| 2.3 | Backing (one-piece, without longitudinal adjustment) - removal and installation | 169 |
| 2.4 | Rear seat (one-piece, with longitudinal adjustment) - assembly overview | 171 |
| 2.5 | Backing (one-piece, with longitudinal adjustment) - removal and installation | 172 |
| 2.6 | Folding protection assembly on rear seat (one-piece, with longitudinal adjustment) - assembly overview | 174 |
| 2.7 | Folding protection assembly on rear seat (one-piece, with longitudinal adjustment) - remove and install | 174 |
| 2.8 | Rear seat (two-piece, with longitudinal adjustment) - assembly overview | 177 |
| 2.9 | Backing (two-piece) - removal and installation | 178 |
| 2.10 | Rear seat (split, with longitudinal adjustment - Europe only) - assembly overview | 179 |
| 2.11 | Backrest (split - Europe only) - assembly overview | 181 |
| 2.12 | Backrest (split - Europe only) - remove and install | 181 |
| 2.13 | Seat rail - removal and installation | 182 |
| 2.14 | Seat backing stop (without longitudinal adjustment) - assembly overview | 184 |
| 2.15 | Seat backing stop (without longitudinal adjustment) - removal and installation | 185 |
| 2.16 | Back seat head rest - assembly overview | 186 |
| 2.17 | Rear seat head rest - removal and installation | 187 |
| 2.18 | Rear seat head rest guide - removal and installation | 188 |
| 2.19 | Rear seat rest unlocking button - removal and installation | 189 |
| 74 - | Seat lining and upholstery | 190 |
| 1 | Linings, stuffing of front seats | 190 |
| 1.1 | Tools | 190 |



| | | |
|----------|---|------------|
| 1.2 | Front seat backing lining and stuffing - removal and installation | 190 |
| 1.3 | Lining and stuffing of the front backing - assembly overview | 192 |
| 1.4 | Front seat backing lining and stuffing - removal and installation | 193 |
| 2 | Front seat heating | 196 |
| 2.1 | Driver / passenger seat cushion heating Z6 / Z8 - remove and install | 196 |
| 2.2 | Driver / passenger seat backrest heating Z7 / Z9 - remove and install | 196 |
| 2.3 | Lining and stuffing of the front seat head rest - removal and installation | 197 |
| 3 | Linings and stuffing of front seats | 199 |
| 3.1 | Tools | 199 |
| 3.2 | Lining and stuffing of back seat (without longitudinal adjustment) - assembly overview | 199 |
| 3.3 | Lining and stuffing of back seat (without longitudinal adjustment) - removal and installation | 200 |
| 3.4 | Lining and stuffing of back seat (with longitudinal adjustment) - assembly overview | 201 |
| 3.5 | Lining and stuffing of back seat (with longitudinal adjustment) - removal and installation | 203 |
| 3.6 | Rear seat cushion lining and filling (with longitudinal adjustment and cup holder - Europe only) - assembly overview | 203 |
| 3.7 | Rear seat cushion lining and filling (with longitudinal adjustment and cup holder - Europe only) - remove and install | 204 |
| 3.8 | Lining and stuffing of the back seat (one-piece) backing - assembly overview | 205 |
| 3.9 | Lining and stuffing of the back seat (one-piece) backing - removal and installation | 206 |
| 3.10 | Lining and stuffing of the back seat (two-piece) backing - assembly overview | 208 |
| 3.11 | Lining and stuffing of the back seat (two-piece) backing - removal and installation | 209 |
| 3.12 | Rear seat backrest lining and filling (split - Europe only) - assembly overview | 210 |
| 3.13 | Rear seat backrest lining and filling (split - Europe only) - removal and installation | 211 |