



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Chassis number - anti-corrosion protection	1
1.3 Destructive labels (only for Brazil) - VIS	1
1.4 Destructible labels (only for Brazil) - VIS - replacement	3
1.5 Identification plate (exclusive for European market)	3
1.6 Vehicle identification tag	4
2 Foam part/support	5
3 Zinc-coated body parts	9
4 High-resistance body plate	10
5 Laser welding	12
6 Body clearance dimensions	13
6.1 Front body section	13
6.2 Rear body section	19
7 Body dimensions	36
7.1 Body - front section	36
7.2 Body - central section	40
7.3 Body - rear section	48
7.4 Body - lower front section	52
7.5 Body - lower central section	56
7.6 Body - lower rear section	57
8 Alignment platform	61
8.1 Overview	61
8.2 General view of the front section alignment platform positions	63
8.3 General view of the central section alignment platform positions	67
8.4 General view of the rear section alignment platform positions	68
50 - Body - front	72
1 Engine support (right side) - replace	72
1.1 Tools	72
1.2 Remove	72
1.3 Install	73
2 Suspension shims (Crossfox ▶ 05.13 and Space Cross / Suran Cross) - replace	75
2.1 Tools	75
2.2 Remove	75
2.3 Install	76
3 Auxiliary frame support - replace	78
3.1 Tools	78
3.2 Remove	78
3.3 Install	79
4 Wheel arch upper longitudinal member - replace	81
4.1 Tools	81
4.2 Remove	81
4.3 Install	83
5 Wheel arch upper longitudinal member reinforcement - replace	85
5.1 Tools	85
5.2 Remove	85
5.3 Install	87
6 Front wheel arch - replace	89
6.1 Tools	89



6.2	Remove	89
6.3	Install	90
7	Front wheel arch (partial part) - replace	92
7.1	Tools	92
7.2	Remove	92
7.3	Install	93
8	Auxiliary frame support thread - repair	95
8.1	Tools	96
8.2	Thread repair	97
9	Front longitudinal member - replace	100
9.1	Tools	100
9.2	Remove	100
9.3	Install	101
10	Front longitudinal member (partial part) - replace	103
10.1	Tools	103
10.2	Remove	103
10.3	Install	104
11	Front bumper support - replace	107
11.1	Tools	107
11.2	Remove	107
11.3	Install	109
51 - Body - centre		111
1	Roof (with and without sunroof - replace)	111
1.1	Tools	111
1.2	Remove	111
1.3	Install	113
2	Roof (Spacefox) - replace	123
2.1	Tools	123
2.2	Remove	123
2.3	Install	125
3	Front roof cross member - replace	135
3.1	Tools	135
3.2	Remove	135
3.3	Install	136
4	Central roof cross member - replace	138
4.1	Tools	138
4.2	Remove	138
4.3	Install	139
5	Rear roof cross member (Fox) - replace	141
5.1	Tools	141
5.2	Remove	141
5.3	Install	143
6	Rear roof cross member (Spacefox) - replace	145
6.1	Tools	145
6.2	Remove	145
6.3	Install	147
7	A-pillar (external section) - replace	150
7.1	Tools	150
7.2	Remove	150
7.3	Install	152
8	A-pillar (internal section) - replace	155
8.1	Remove	155
8.2	Install	157



9	B-pillar (4 doors - external section) - replace	160
9.1	Tools	160
9.2	Remove	160
9.3	Install	162
10	B-pillar (2 doors - internal section) - replace	164
10.1	Tools	164
10.2	Remove	164
10.3	Install	166
11	B-pillar (4 doors - internal section) - replace	169
11.1	Tools	169
11.2	Remove	169
11.3	Install	171
12	Lower longitudinal member (2 doors - external section) - replace	173
12.1	Tools	173
12.2	Remove	173
12.3	Install	175
13	Lower longitudinal member reinforcement (2 doors) - replace	177
13.1	Tools	177
13.2	Remove	177
13.3	Install	179
14	Lower longitudinal member (4 doors - external section) - replace	181
14.1	Tools	181
14.2	Remove	181
14.3	Install	183
15	Front floor - partial part - replace	186
15.1	Tools	186
15.2	Remove	186
15.3	Install	189
16	Lower longitudinal member reinforcement (4 doors) - replace	192
16.1	Tools	192
16.2	Remove	192
16.3	Install	193
53 - Body - rear		196
1	Back panel (2 and 4-door Fox) - replace	196
1.1	Tools	196
1.2	Remove	196
1.3	Install	198
2	Back panel (Spacefox) - replace	203
2.1	Tools	203
2.2	Remove	203
2.3	Install	205
3	Rear cross member - replace	207
3.1	Tools	207
3.2	Remove	207
3.3	Install	209
4	Rear cross member - replace	210
4.1	Tools	210
4.2	Remove	210
4.3	Install	212
5	Tail light housing - replace	214
5.1	Tools	214
5.2	Remove	214
5.3	Install	216



6	Tail light housing (Spacefox) - replace	217
6.1	Tools	217
6.2	Remove	217
6.3	Install	219
7	Tow hook - replace	222
7.1	Tools	222
7.2	Remove	222
7.3	Install	223
8	Rear longitudinal member (Fox - partial part) - replace	225
8.1	Tools	225
8.2	Remove	225
8.3	Install	227
9	Rear longitudinal member (Spacefox - partial part) - replace	229
9.1	Tools	229
9.2	Remove	229
9.3	Install	231
10	External side panel (2 doors - partial part) - replace	235
10.1	Tools	235
10.2	Remove	235
10.3	Install	237
11	External side panel (4 doors - partial part) - replace	240
11.1	Tools	240
11.2	Remove	240
11.3	Install	242
12	External side panel (Spacefox - partial part) - replace	245
12.1	Tools	245
12.2	Remove	245
12.3	Install	247
13	Wheel arch (2 doors - external section) - replace	251
13.1	Tools	251
13.2	Remove	251
13.3	Install	253
14	Wheel arch (4 doors - external section) - replace	255
14.1	Tools	255
14.2	Remove	255
14.3	Install	257
15	Wheel arch (Spacefox - external section) - replace	259
15.1	Tools	259
15.2	Remove	259
15.3	Install	262
16	Spare wheel housing (Fox) - replace	265
16.1	Tools	265
16.2	Remove	265
16.3	Install	267
17	Spare wheel housing (Spacefox) - replace	269
17.1	Tools	269
17.2	Remove	269
17.3	Install	271
18	Spare wheel housing (partial part) - replace	274
18.1	Tools	274
18.2	Remove	274
18.3	Install	275
19	Spare wheel housing (Spacefox - partial part) - replace	277



19.1	Tools	277
19.2	Remove	277
19.3	Install	279