



## Contents

<b>00 - Technical data</b>	1
1 <b>Technical Data</b>	1
1.1    Engine number	1
1.2    Engine characteristics	1
<b>10 - Removing and installing engine</b>	3
1 <b>Engine - remove and install</b>	3
1.1    Removal - recommendations	6
1.2    Engine - fasten to assembly stand	11
1.3    Installation notes	12
1.4    Tightening torques	13
1.5    Engine and gearbox support set - align	14
1.6    Power-drive group supports, (torque)	16
1.7    Additional notes and installation works in vehicles with air conditioning	17
<b>13 - Crankshaft group</b>	19
1 <b>Engine - assembly and disassembly</b>	19
1.1    Seal lid - replace	24
1.2    Poly-V belt - remove and install	24
1.3    Poly-V belt (elastic) - remove and install	28
2 <b>Crankshaft and flywheel flanges - assembly overview</b>	32
2.1    Flywheel - remove and install	33
2.2    Crankshaft seal (pulley side) - replace	34
2.3    Crankshaft flange (flywheel side) - replace	36
3 <b>Crankshaft - remove and install</b>	47
3.1    Identifying engine bearing shells	48
3.2    Colour codes	48
3.3    Crankshaft - dimensions	48
4 <b>Pistons and connecting rods - removal and installation</b>	50
4.1    Piston and cylinder - dimensions	53
<b>15 - Cylinder head, valve gear</b>	55
1 <b>Cylinder head - assembly overview</b>	55
1.1    Toothed belt semi-automatic tensioning pulley - check	58
1.2    Toothed belt - remove and install, adjust	59
1.3    Cylinder head - remove and install	64
1.4    Compression - check	69
2 <b>Camshaft - assembly overview</b>	73
2.1    Camshaft - check axial clearance	75
2.2    Valve seat - trim	76
2.3    Camshaft seal - replace	78
2.4    Camshaft and cylinder head cover - removal and installation	81
2.5    Valve guides - check	85
2.6    Valve stem sealant - replace	85
<b>17 - Lubrication</b>	89
1 <b>Lubrication system components</b>	89
1.1    Lubricating system components - assembly overview	89
1.2    Engine oil	91
1.3    Oil pan- remove and install	92
1.4    Oil filter - replace	94
1.5    Oil pump - remove and install	96



1.6	Oil pressure switch F1 - remove and install .....	99
1.7	Oil pressure and Oil pressure switch F1 - check .....	100
<b>19 - Cooling</b>	.....	<b>103</b>
1	<b>Cooling system components - remove and install</b> .....	<b>103</b>
1.1	Cooling system components on the body side - assembly overview .....	103
1.2	Cooling system components on the engine side - assembly overview .....	105
1.3	Hose connection diagram for cooling system .....	107
1.4	Cooling system - drainage and replenishment .....	110
1.5	Cooling system - check air-tightness .....	117
1.6	Radiator - remove and install .....	119
1.7	Water pump - remove and install .....	122
<b>20 - Fuel supply system</b>	.....	<b>125</b>
1	<b>Fuel supply system components - removal and installation</b> .....	<b>125</b>
1.1	Fuel tank components with accessories and fuel filter - assembly overview .....	125
1.2	Safety measures regarding work on the fuel supply systems .....	128
1.3	Cleaning rules .....	129
1.4	Quick connection "Pop Top" - disconnection and connection .....	129
1.5	Fuel pump for cold start V263 - removal and installation .....	131
1.6	Fuel pump (pre-supply pump) G6 - remove and install .....	135
1.7	Fuel gauge sensor G - remove and install .....	138
1.8	Fuel reservoir - remove and install .....	138
1.9	Fuel pump (pre-supply pump) G6 - check .....	141
2	<b>Engine power electronic adjustment (electronic accelerator) - check</b> .....	<b>150</b>
2.1	Electronic accelerator system operation .....	150
3	<b>Activated charcoal filter system</b> .....	<b>152</b>
3.1	Operation .....	152
3.2	Activated charcoal filter system components - repair .....	152
3.3	Fuel tank ventilation - check .....	153
<b>24 - Mixture preparation - injection</b>	.....	<b>155</b>
1	<b>Injection system - repair</b> .....	<b>155</b>
1.1	General instructions regarding the injection system .....	155
1.2	Component location .....	155
1.3	Injection components - remove and install .....	159
1.4	Intake manifold - remove and install .....	165
1.5	Fuel distributor with injectors - removal and installation .....	166
1.6	Air filter - disassembly and assembly .....	166
1.7	Safety measures .....	170
1.8	Cleaning rules .....	171
1.9	Technical Data .....	171
2	<b>Component checks</b> .....	<b>173</b>
2.1	Injection valves - check .....	173
2.2	Residual pressure and fuel pressure regulator - check .....	175
3	<b>READINESS code</b> .....	<b>180</b>
3.1	Creating and Interpreting the READINESS code .....	180
4	<b>Engine control unit J623</b> .....	<b>181</b>
4.1	Engine control unit J623 - remove and install .....	181
4.2	Components - adjust .....	182
4.3	Event memory in Engine control unit J623 - reference and erase .....	182
<b>26 - Exhaust system</b>	.....	<b>185</b>
1	<b>Removing and installing exhaust system parts</b> .....	<b>185</b>
1.1	Intake manifold, front exhaust tube with catalytic converter and installation parts .....	185



---

1.2	Muffler with supports .....	188
<b>28 - Ignition system</b>	.....	<b>190</b>
1	<b>Ignition system: repair</b> .....	190
1.1	General instructions regarding the ignition system .....	190
1.2	Ignition system components - remove and install .....	190
1.3	Safety measures .....	191
1.4	Test data, spark plugs .....	192