



## Contents

<b>00 - Technical data</b>	1
1 <b>Technical data</b>	1
1.1    Engine number	1
1.2    Engine characteristics	1
<b>10 - Removing and installing engine</b>	2
1 <b>Engine - remove and install</b>	2
1.1    Removal - recommendations	4
1.2    Engine - fasten to assembly stand	6
1.3    Installation notes	7
1.4    Tightening torques	8
1.5    Power-drive group supports, (torque)	8
1.6    Additional information and removal instructions for vehicles with air conditioning	9
<b>13 - Crankshaft group</b>	10
1 <b>Engine - assembly and disassembly</b>	10
1.1    Poly-V belt - remove and install	15
2 <b>Crankshaft flanges and flywheel - remove and install</b>	18
2.1    Oil crankshaft seal, pulley side - replace	19
2.2    Crankshaft seal flange - replace	21
3 <b>Balance shaft and mounting frame - remove and install</b>	24
3.1    Balance shaft - remove and install	26
4 <b>Crankshaft - remove and install</b>	30
4.1    Crankshaft dimensions	31
5 <b>Pistons and bearing rods - disassemble and assemble</b>	33
5.1    Piston and cylinder dimensions	37
<b>15 - Cylinder head, valve gear</b>	38
1 <b>Cylinder head - remove and install</b>	38
1.1    Toothed belt - remove and install, adjust	42
1.2    Cylinder head - remove and install	46
1.3    Compression - check	49
2 <b>Valve command - repair</b>	52
2.1    Camshaft - check axial clearance	54
2.2    Valve seat - trim	55
2.3    Valve guides - check	57
2.4    Valve rod sealant - replace	57
2.5    Camshaft - remove and install	59
<b>17 - Lubrication</b>	64
1 <b>Lubrication system components - remove and install</b>	64
1.1    Oil pan- remove and install	71
1.2    Check the oil pressure and the oil pressure switch.	72
<b>19 - Cooling</b>	75
1 <b>Cooling system components - remove and install</b>	75
1.1    Cooling system components on the body	75
1.2    Cooling system components, engine	77
1.3    Hose connection diagram for cooling system	78
1.4    Cooling system - drainage and replenishment	79
1.5    Radiator - remove and install	82
1.6    Water pump - remove and install	83



---

1.7 Thermostat - remove and install .....	84
<b>20 - Fuel supply system .....</b>	<b>87</b>
1 <b>Fuel supply system components - removal and installation .....</b>	<b>87</b>
1.1 Fuel tank components with accessories - remove and install .....	87
1.2 Fuel filter - repair .....	89
1.3 Safety measures for working on fuel supply system .....	91
1.4 Cleaning rules .....	91
1.5 Fuel reservoir - remove and install .....	92
1.6 Fuel pump - remove and install .....	94
1.7 Fuel gauge sensor - remove and install .....	95
1.8 Fuel pump - check .....	96
1.9 Accelerator mechanism - repair .....	97
1.10 Auxiliary pump - check .....	98
1.11 Auxiliary pump - remove and install .....	100
<b>21 - Turbocharging/supercharging .....</b>	<b>104</b>
1 <b>Supercharging system with turbocharger .....</b>	<b>104</b>
1.1 Safety measures .....	104
1.2 Rules for cleaning .....	104
1.3 Turbocharger - remove and install .....	104
1.4 Intake air cooling system components (intercooler) - remove and install .....	107
<b>23 - Mixture preparation - injection .....</b>	<b>109</b>
1 <b>Direct injection Diesel system maintenance .....</b>	<b>109</b>
1.1 Installation places - overview .....	109
1.2 Safety measures .....	110
1.3 Cleaning rules .....	111
1.4 Intake manifold valve - repair .....	111
1.5 Injectors - repair .....	112
1.6 Injectors seal ring - remove and install .....	113
1.7 Nozzles - remove and install .....	114
2 <b>Engine command unit .....</b>	<b>118</b>
2.1 Engine command unit - remove and install .....	118
2.2 Check the event memory in the engine command unit and delete it .....	118
2.3 Adjust functions and components .....	120
<b>26 - Exhaust system .....</b>	<b>122</b>
1 <b>Exhaust system components - remove and install .....</b>	<b>122</b>
2 <b>Exhaust gases recirculation system .....</b>	<b>124</b>
2.1 Exhaust gas recirculation system components - removal and installation .....	124
2.2 Vacuum hose connection diagram .....	125
<b>28 - Ignition system .....</b>	<b>126</b>
1 <b>Preheating system - check .....</b>	<b>126</b>
1.1 Checking heating plugs .....	127