



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine characteristics	1
10 - Removing and installing engine	2
1 Engine - remove and install	2
1.1 Notes on removal	3
1.2 Engine - fasten to assembly stand	6
1.3 Notes on installation	7
1.4 Tightening torques	8
1.5 Power-drive unit supports	8
1.6 Additional notes and installation works in vehicles with air conditioning	9
13 - Crankshaft group	11
1 Engine - assembly and disassembly	11
1.1 Poly-V belt - remove and install	15
1.2 Toothed belt semi-automatic tensioning pulley - check	17
2 Crankshaft and flywheel seal - remove and install	18
2.1 Crankshaft seal (pulley side) - replace	20
2.2 Crankshaft flanges (flywheel side) - removal and installation	22
3 Crankshaft - remove and install	26
3.1 Crankshaft measurements	27
4 Pistons and connecting rods - removal and installation	28
4.1 Piston protrusion - check	31
4.2 Piston and cylinder dimensions	32
15 - Cylinder head, valve gear	33
1 Cylinder head - assembly and disassembly	33
1.1 Toothed belt - remove and install, adjust	36
1.2 Cylinder head - remove and install	41
1.3 Compression - check	47
2 Valve command - repair	50
2.1 Valve seat - trim	52
2.2 Valve guides - check	54
2.3 Valve rod sealant - replacement	54
2.4 Camshaft - remove and install	56
2.5 Hydraulic tappets - check	59
17 - Lubrication	61
1 Lubrication system components - remove and install	61
1.1 Crankcase - remove and install	65
1.2 Oil pump - remove and install	67
1.3 Oil pressure and Oil pressure switch F1 - check	68
19 - Cooling	71
1 Cooling system components - remove and install	71
1.1 Cooling system components, body	71
1.2 Cooling system components, engine	73
1.3 Cooling hose connection diagram	74
1.4 Cooling system - drain and fill	75
1.5 Water pump - remove and install	78



1.6	Radiator - remove and install	80
1.7	Thermostat valve - removal and installation	82
20	- Fuel supply system	85
1	Fuel supply system components - removal and installation	85
1.1	Fuel tank with accessories - remove and install	85
1.2	Fuel filter - repair	89
1.3	Safety measures when working on supply system	91
1.4	Cleaning rules	91
1.5	Fuel reservoir - remove and install	92
1.6	Fuel level indicator sensor G	93
1.7	Fuel level gauge - remove and install	96
1.8	Engine power electronic adjustment (electronic accelerator): check	97
23	- Mixture preparation - injection	98
1	Diesel direct injection system - repair	98
1.1	Safety measures	98
1.2	Cleaning rules	98
1.3	Injection pump - repair	99
1.4	Intake manifold - remove and install	101
1.5	Injection pump - remove and install	102
1.6	Nozzles - remove and install	106
1.7	Injectors - check	108
1.8	Sealing ring of the cap of injection adjuster - replace	109
2	Control unit of Diesel direct injection system J248	110
2.1	Control unit of Diesel direct injection system J248 - remove and install	110
2.2	Event memory of Control unit of Diesel direct injection system J248 - check and erase	110
2.3	Functions and components - adapt	111
26	- Exhaust system	113
1	Removing and installing exhaust system parts	113
1.1	Exhaust system - remove and install	113
2	Exhaust gas return system	117
2.1	Exhaust gas return system components - removal and installation	117
2.2	Vacuum hose connection diagram	118
2.3	Check the exhaust gas return valve	118
28	- Ignition system	120
1	Preheating system - check	120
1.1	Glow plugs - check	120