

001 - 1,6 l - Motronic/ 74kW, engine code BJA	1-18
1. 1,6 l - Motronic/ 74kW, engine code BJA	1
2. Battery, Starter, Alternator, Voltage regulator	2
3. Ignition/starter switch, Fuel gauge sender, Fuel pump (pre-supply pump)	3
4. Fuel pump relay	4
5. Clutch pedal switch, Speedometer sender (hall sender on gearbox)	5
6. Cruise control system/diesel direct injection system brake pedal switch	6
7. X contact relief relay	7
8. Handbrake warning switch, Immobilizer control unit, Terminal 30a wiring junction	8
9. Brake fluid level warning contact	9
10. Radiator fan 2nd speed relay, Fresh air blower and radiator fan relay	10
11. Cold start device relay, Cold start valve, Activated charcoal filter system solenoid valve (pulsed), Radiator fan, right, Fuel pump (cold start)	11
12. Coolant temperature sender, Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender	12
13. Throttle valve drive, Throttle valve drive angle sender -1- (electric power control), Throttle valve drive angle sender -2- (electric power control), Injector, cylinder 1 Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	13
14. Speedometer, Ignition transformer, Spark plug connector, Spark plug	14
15. Lambda probe, Accelerator pedal position sender, Accelerator pedal position sender -2-, Immobilizer control unit	15
16. Motronic control unit	16
17. Fuel gauge, Dash panel insert, Coolant temperature/coolant shortage warning lamp, Reserve fuel warning lamp	17
18. Oil pressure switch (0.3 bar), Front passenger door open switch, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Electronic power control fault lamp	18
002 - 1,0 l - 4BV/53 kW, engine code BJE	19-33
1. 1,0 l - 4BV/53 kW, engine code BJE	19
2. Battery, Starter, Alternator, Voltage regulator	20
3. Ignition/starter switch	21
4. Coolant temperature sender, Coolant temperature sender, X contact relief relay, 4BV (injection system) control unit, Terminal 30a wiring junction	22
5. Engine speed sender, Hall sender, Intake air temperature sender, Intake manifold pressure sender, 4BV (injection system) control unit	23
6. Knock sensor I, Throttle valve drive (electric power control), Throttle valve drive angle sender -1- (electric power control), Throttle valve drive angle sender -2- (electric power control), Ignition transformer, Spark plug connector, Spark plug	24
7. Accelerator pedal position sender, Accelerator pedal position sender -2-, Cold start device relay, 4BV (injection system) control unit, Cold start valve	25
8. Speedometer sender (hall sender on gearbox), Lambda probe, 4BV (injection system) control unit	26
9. High pressure sender, 4BV (injection system) control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	27
10. Radiator fan 2nd speed relay, Radiator fan 2nd speed relay, 4BV (injection system) control unit	28
11. Brake light switch, Clutch pedal switch, Cruise control system/diesel direct injection system brake pedal switch, 4BV (injection system) control unit	29
12. Fuel pump relay	30
13. Fuel gauge sender, Fuel pump (pre-supply pump)	31
14. Fuel gauge, Speedometer, Dash panel insert, Alternator warning lamp, Coolant temperature/coolant shortage warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	32
15. Oil pressure switch (0.3 bar), Dash panel insert, Oil pressure warning lamp, Radiator fan, right	33
003 - Convenience system	34-49
1. Convenience system	34
2. Battery, starter, alternator, voltage regulator	35
3. Ignition/starter switch, terminal 30a wiring junction	36
4. Driver door contact switch, front passenger door contact switch, rear left door contact switch, rear right door contact switch	37
5. Driver side interior locking switch, convenience system central control unit, interior lock switch illumination bulb, rear left window regulator motor, rear right window regulator motor	38
6. Front left window regulator switch, window regulator switch in front passenger door, convenience system central control unit, window regulator switch illumination bulb	39
7. Driver door exterior handle switch for anti-theft alarm system, driver door central locking motor, front passenger door central locking motor	40
8. Anti-theft alarm and vermin repellent system contact switch, anti-theft alarm system horn, convenience system central control unit	41
9. Anti-theft alarm ultrasonic sensor, convenience system central control unit, driver side window regulator motor, front passenger side window regulator motor	42

10. Luggage compartment light switch, contact switch in lock cylinder for rear lid, anti-theft alarm system, central locking system, front left turn signal bulb, front right turn signal bulb	43
11. Rear lid release switch, remote release switch illumination bulb, rear lid lock motor	44
12. Rear left window regulator switch, in door, window regulator switch illumination bulb, rear left central locking motor	45
13. Rear left window regulator switch, in door, window regulator switch illumination bulb	46
14. Rear window regulator isolation switch, rear left window regulator switch, in driver door, rear right window regulator switch, in driver door	47
15. Mirror adjustment switch, mirror adjustment change-over switch, mirror adjustment switch illumination bulb	48
16. Driver side mirror adjustment motor, front passenger side mirror adjustment, front interior light, luggage compartment light	49
004 - Light switch	50-58
1. Light switch	50
2. Battery, starter, alternator, voltage regulator	51
3. Ignition/starter switch, terminal 30 wiring junction	52
4. Number plate light	53
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, dipped beam relay	54
6. Headlight main beam relay, X-contact relief relay	55
7. Right tail light bulb, left tail light bulb, left brake light bulb, right brake light bulb, left reversing light bulb, right reversing light bulb	56
8. Fuses	57
9. Left headlight twin filament bulb/left sealed beam insert, right headlight twin filament bulb/right sealed beam insert, front left side marker bulb, front right side marker bulb	58
005 - 1.6 l/74 kW Motronic, engine code BAH	59-74
1. 1.6 l/74 kW Motronic, engine code BAH	59
2. Battery, starter, alternator, voltage regulator	60
3. Ignition/starter switch, fuel gauge sender, fuel system pressurisation pump	61
4. Fuel pump relay	62
5. Brake light switch, clutch pedal switch, brake pedal switch, speedometer sender	63
6. X-contact relief relay	64
7. Handbrake warning switch, terminal 30 wiring junction	65
8. Brake fluid level warning contact	66
9. Radiator fan 2nd speed relay, fresh air blower and radiator fan relay	67
10. Coolant temperature display sender, engine speed sender, Hall sender, intake air temperature sender, coolant temperature display sender	68
11. Throttle valve drive for electric throttle (EPC), throttle valve drive angle sender 1 for electric throttle (EPC), injector, cylinder 1, injector, cylinder 2, injector, cylinder 3, injector, cylinder 4	69
12. Knock sensor 1, engine control unit, ignition transformer, spark plug connector, spark plugs, right radiator fan	70
13. Lambda probe, accelerator position sender, accelerator position sender 2, engine control unit	71
14. Engine control unit, activated charcoal filter system solenoid valve 1	72
15. Fuel gauge, control unit in dash panel insert, coolant temperature and coolant shortage warning lamp, reserve fuel warning lamp	73
16. Oil pressure switch, dash panel insert, alternator warning lamp, oil pressure warning lamp, electronic power control fault lamp	74
006 - 1.0 l - 4BV/ 52 kW, engine code AQZ	75-89
1. 1.0 l - 4BV/ 52 kW, engine code AQZ	75
2. Battery, starter, alternator, voltage regulator	76
3. Ignition/starter switch, X-contact relief relay	77
4. Coolant temperature display sender, coolant temperature sender, 4MV injection system control unit control unit, terminal 30a wiring junction	78
5. Engine speed sender, Hall sender, intake air temperature sender, intake manifold pressure sender, engine control unit, 4MV injection system control unit control unit	79
6. Knock sensor 1, throttle valve drive for electric throttle (EPC), 4MV injection system control unit control unit, ignition transformer, spark plug connector, spark plugs	80
7. Accelerator position sender, accelerator position sender 2, 4MV injection system control unit control unit, fuel pump for cold start	81
8. Speedometer sender, immobilizer control unit, 4MV injection system control unit control unit	82
9. 4MV injection system control unit control unit, injector, cylinder 1, injector, cylinder 2, injector, cylinder 3, injector, cylinder 4	83
10. Radiator fan 2nd speed relay, fresh air blower and radiator fan relay, 4MV injection system control unit control unit	84
11. Brake light switch. clutch pedal switch. brake pedal switch. 4MV injection system control unit	85

control unit, activated charcoal filter system solenoid valve 1	
12. Fuel pump relay	86
13. Fuel gauge sender, fuel system pressurisation pump	87
14. Fuel gauge, speedometer, control unit in dash panel insert, dash panel insert, alternator warning lamp, coolant temperature and coolant shortage warning lamp	88
15. Oil pressure switch, control unit in dash panel insert, dash panel insert, oil pressure warning lamp, right radiator fan	89
007 - Basic equipment	90-111
1. Basic equipment	90
2. Battery, starter, alternator, voltage regulator	91
3. Ignition/starter switch, X-contact relief relay	92
4. Terminal 30a wiring junction	93
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, dipped beam relay	94
6. Headlight main beam relay, automatic intermittent wash and wipe relay	95
7. Hazard warning light switch, hazard warning light relay, hazard warning light system warning lamp	96
8. Heated rear window button, fuel gauge sender, fuel system pressurisation pump, fuel pump relay, heated rear window control relay	97
9. Reversing light switch	98
10. Radiator fan 2nd speed relay, fresh air blower and radiator fan relay	99
11. Fuse 31 on fuse holder, fuse 43 on fuse holder	100
12. Number plate light	101
13. Socket illumination bulb, 12 V socket, windscreen and rear window washer pump, front interior light	102
14. Intermittent wiper switch	103
15. Heated rear window	104
16. Handbrake warning switch, brake fluid level warning contact	105
17. Driver door contact switch, front passenger door contact switch, right tail light bulb, left tail light bulb, rear left turn signal bulb	106
18. Immobilizer reader coil, brake light switch, brake pedal switch, immobilizer control unit	107
19. Left headlight twin filament bulb/left sealed beam insert, right headlight twin filament bulb/right sealed beam insert, front left side marker bulb, front right side marker bulb, windscreen wiper motor	108
20. Oil pressure switch, speedometer, horn or dual tone horn, dual tone horn relay, control unit in dash panel insert, dash panel insert, radiator fan	109
21. Fuel gauge, control unit in dash panel insert, dash panel insert, main beam warning lamp, alternator warning lamp, handbrake warning lamp	110
22. Fresh air blower switch, fresh air blower	111
008 - Airbag	112-115
1. Airbag	112
2. Battery, starter, alternator, voltage regulator	113
3. Ignition/starter switch, terminal 30a wiring junction	114
4. Airbag coil connector and return spring with slip ring, driver side airbag igniter, front passenger side airbag igniter 1	115
009 - Fog lights	116-124
1. Fog lights	116
2. Battery, starter, alternator, voltage regulator	117
3. Ignition/starter switch, terminal 30 wiring junction	118
4. X-contact relief relay	119
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch	120
6. Fuses	121
7. Front and rear fog light switch, front and rear fog light switch illumination bulb, left tail light and rear fog light bulb	122
8. Left fog light bulb, right fog light bulb	123
9. Control unit in dash panel insert, dash panel insert, rear fog light warning lamp, fog light warning lamp	124
010 - Air conditioning system	125-133
1. Air conditioning system	125
2. Battery, starter, alternator, voltage regulator	126
3. Ignition/starter switch, terminal 30 wiring junction	127
4. Air conditioning system control unit, fresh air blower, fresh air/recirculated air flap control motor	128
5. Fresh air blower switch, air conditioning system control unit, fresh air blower series resistor with overheating fuse	129
6. High-pressure sender, X-contact relief relay, fresh air blower relay and radiator fan	130
7. Radiator fan 2nd speed relav. riacht radiator fan	131

8. Air conditioning system switch-off relay, air conditioning system magnetic coupling	132
9. Control unit with display in dash panel insert, dash panel insert	133
011 - Air conditioning system	134-141
1. Air conditioning system	134
2. Battery, starter, alternator, voltage regulator	135
3. Ignition/starter switch, terminal 30 wiring junction	136
4. Air conditioning system control unit, fresh air blower, fresh air/recirculated air flap control motor	137
5. Fresh air blower switch, air conditioning system control unit, fresh air blower series resistor with overheating fuse	138
6. High-pressure sender, X-contact relief relay, fresh air blower relay and radiator fan	139
7. Radiator fan 2nd speed relay, radiator fan, right radiator fan	140
8. Air conditioning system switch-off relay, air conditioning system magnetic coupling	141
012 - Headlight washer system / heated rear window	142-148
1. Headlight washer system / heated rear window	142
2. Battery, starter, alternator, voltage regulator	143
3. Ignition/starter switch, terminal 30 wiring junction	144
4. Intermittent wiper switch, automatic intermittent wash and wipe relay	145
5. Rear window wiper motor, windscreen and rear window washer pump	146
6. X-contact relief relay, windscreen wiper motor, heated rear window	147
7. Heated rear window button, heated rear window control relay, control unit with display in dash panel insert, dash panel insert, alternator warning lamp	148
013 - Radio	149-154
1. Radio	149
2. Battery, starter, alternator, voltage regulator	150
3. Ignition/starter switch, terminal 30 wiring junction	151
4. Radio, rear left bass loudspeaker, rear right bass loudspeaker	152
5. Radio, front left treble loudspeaker, front left bass loudspeaker, front right treble loudspeaker, front right bass loudspeaker	153
6. Radio, aerial, aerial amplifier	154
014 - Multifunction steering wheel	155-161
1. Multifunction steering wheel	155
2. Battery, starter, alternator, voltage regulator	156
3. Ignition/starter switch, terminal 30 wiring junction	157
4. Radio, rear left bass loudspeaker, rear right bass loudspeaker	158
5. Radio, front left treble loudspeaker, front left bass loudspeaker, front right treble loudspeaker, front right bass loudspeaker	159
6. Radio, aerial, aerial amplifier	160
7. Multifunction buttons on left in steering wheel, multifunction buttons on right in steering wheel, airbag coil connector/return spring with slip ring, radio	161
018 - Anti-lock brake system ABS	162-167
1. Anti-lock brake system ABS	162
2. Battery, starter, alternator, voltage regulator	163
3. Ignition/starter switch, terminal 30 wiring junction	164
4. Front right speed sensor, front left speed sensor, ABS control unit, front right ABS inlet valve, front right ABS outlet valve	165
5. Rear right speed sensor, rear left speed sensor, ABS control unit, ABS return flow pump relay, ABS solenoid valve relay, ABS return flow pump	166
6. Brake light switch, brake pedal switch, ABS control unit, rear right ABS inlet valve, rear left ABS inlet valve, rear right ABS outlet valve	167
019 - Anti-lock brake system ABS	168-173
1. Anti-lock brake system ABS	168
2. Battery, starter, alternator, voltage regulator	169
3. Ignition/starter switch, terminal 30a wiring junction	170
4. Front right speed sensor, front left speed sensor, ABS control unit with EDL, front right/ left ABS inlet valve, front right/ left ABS outlet valve	171
5. Rear right speed sensor, rear left speed sensor, ABS control unit with EDL, ABS return flow pump relay, ABS solenoid valve relay, ABS return flow pump	172
6. Brake light switch, cruise control system brake pedal switch/diesel direct injection system, rear left/ right ABS inlet valve, rear right/ left ABS outlet valve	173
027 - 1.4l petrol engine , BKR,(F6G)	174-190
1. 1.4l petrol engine , BKR,(F6G)	174
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	175
3. Ignition/starter switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Terminal 30 wiring junction	176
4. Onboard supply control unit	177

5. Onboard supply control unit	178
6. X-contact relief relay, Onboard supply control unit, 4EV injection system current supply relay	179
7. Brake light switch, Clutch pedal switch, Brake pedal switch, Onboard supply control unit	180
8. Oil pressure switch, Speedometer sender, Coolant shortage indicator sender, Onboard supply control unit	181
9. Brake fluid level warning contact, Radiator fan 2nd speed relay, Fresh air blower and radiator fan relay, Onboard supply control unit, Heater element for crankcase breather	182
10. Fuel pump relay, Onboard supply control unit, Fuel supply relay	183
11. Engine speed sender, Hall sender, Intake air temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine control unit	184
12. Engine control unit	185
13. Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	186
14. Knock sensor 1, Coolant temperature sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs, Right radiator fan	187
15. Accelerator position sender, Accelerator position sender 2, Engine control unit	188
16. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Gearbox, Activated charcoal filter solenoid valve 1	189
17. Fuel gauge, Rev. counter, Immobiliser control unit, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Handbrake warning lamp, Coolant shortage warning lamp, Reserve fuel warning lamp, Immobiliser warning lamp	190
028 - Convenience system , (F6G)	191-206
1. Convenience system , (F6G)	191
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	192
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	193
4. Onboard supply control unit	194
5. Onboard supply control unit, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	195
6. Hazard warning lights button, Blocking diode, Onboard supply control unit, Button illumination bulb, Front interior light, Front passenger reading light, Driver side reading light	196
7. Driver door contact switch, Front passenger door contact switch, Onboard supply control unit, Data bus diagnostic interface	197
8. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Onboard supply control unit, Mirror adjustment switch illumination bulb	198
9. Onboard supply control unit, Driver side mirror adjustment motor, Front passenger side mirror adjustment motor, Driver side mirror adjustment motor, Front passenger side mirror adjustment motor	199
10. Convenience system central control unit, Window regulator single fuse	200
11. Front left window regulator switch, Front right window regulator switch in driver door, Driver side interior locking switch, Driver door exterior handle switch for anti-theft alarm system, Convenience system central control unit, Window regulator switch illumination bulb	201
12. Window regulator switch in front passenger door, Anti-theft alarm and vermin repellent system contact switch, Anti-theft alarm system horn, Convenience system central control unit, Window regulator switch illumination bulb	202
13. Convenience system central control unit, Rear lid central locking motor, Driver door power latching motor, Front passenger door power latching motor	203
14. Luggage compartment light switch, Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Anti-theft alarm ultrasonic sensor, Convenience system central control unit, Luggage compartment light	204
15. Convenience system central control unit, Left door warning lamp, Driver side window regulator motor, Front passenger side window regulator motor	205
16. Rev. counter, Control unit in dash panel insert, Dash panel insert, Battery charge condition warning lamp: red LED for less than 12 Volt, Left turn signal warning lamp, Right turn signal warning lamp, Immobiliser warning lamp	206
029 - 1.2 l - Simos 3PG - 40 kW, engine code BMD (Europe)	207-221
1. 1.2 l - Simos 3PG - 40 kW, engine code BMD (Europe)	207
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	208
3. Ignition/starter switch, radiator fan thermal switch, onboard supply control unit	209
4. Current supply relay, X-contact relief relay, onboard supply control unit	210
5. Brake light switch, clutch pedal switch, brake pedal switch, onboard supply control unit	211
6. Fuel gauge sender, fuel system pressurisation pump, speedometer sender, coolant shortage indicator sender, onboard supply control unit	212
7. Onboard supply control unit, terminal 30 wiring junction, radiator fan on right of radiator	213
8. Brake fluid level warning contact, onboard supply control unit, data bus diagnostic interface	214
9. Fuel pump relay, onboard power supply control unit, fuses	215
10. Engine speed sender. Hall sender. intake air temperature sender. intake manifold pressure sender.	216

onboard supply control unit, engine control unit	
11. Coolant shortage indicator sender, throttle valve drive angle sender 1 for electric throttle (EPC), injector, cylinder 1, injector, cylinder 2, injector, cylinder 3	217
12. Knock sensor 1, onboard supply control unit, engine control unit, ignition coil 1 with output stage, ignition coil 2 with output stage, spark plug connector, spark plugs	218
13. Lambda probe, accelerator position sender, lambda probe after catalytic converter, accelerator position sender 2, onboard supply control unit, engine control unit	219
14. Onboard supply control unit, engine control unit, active charcoal filter system solenoid valve 1	220
15. Immobilizer reader coil, oil pressure switch, control unit with display in dash panel insert, immobilizer control unit, dash panel insert, alternator warning lamp	221
030 - Light switch (Europe)	222-231
1. Light switch (Europe)	222
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	223
3. Ignition/starter switch, onboard supply control unit, terminal 30 wiring junction	224
4. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, headlight range control regulator	225
5. Daytime running lights relay, side and tail lights, onboard supply control unit	226
6. Onboard supply control unit, right tail light bulb, rear right turn signal bulb, right brake light bulb, right reversing light bulb	227
7. Onboard supply control unit, left headlight range control motor, right headlight range control motor	228
8. Onboard supply control unit, front left side marker bulb, front right side marker bulb, left dipped beam bulb, left main beam bulb, right dipped beam bulb, right headlight main beam bulb	229
9. Onboard supply control unit, front left turn signal bulb, front right turn signal bulb, left side mounted turn signal bulb, right side mounted turn signal bulb	230
10. Onboard supply control unit, headlight main beam relay, number plate light	231
031 - 1.4l diesel engine , BNM,(F6G)	232-247
1. 1.4l diesel engine , BNM,(F6G)	232
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	233
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	234
4. Onboard supply control unit	235
5. Low heat output relay, High heat output relay, Onboard supply control unit	236
6. Radiator fan thermal switch, X-contact relief relay, Terminal 30 voltage supply relay, Onboard supply control unit, Right radiator fan	237
7. Brake fluid level warning contact, Speedometer sender, Onboard supply control unit	238
8. Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Onboard supply control unit	239
9. Onboard supply control unit	240
10. Brake light switch, Brake pedal switch, Engine control unit	241
11. Air mass meter, Engine control unit, Exhaust gas recirculation valve, Charge pressure control solenoid valve, Intake manifold flap motor	242
12. Clutch pedal switch, Intake air temperature sender, Intake manifold pressure sender, Glow plug relay, Engine control unit, Gearbox	243
13. Engine speed sender, Accelerator position sender, Accelerator position sender 2, Fuel pump relay, Engine control unit	244
14. Engine control unit, Unit injector valve, No. 1 cyl., Unit injector valve, No. 2 cyl., Unit injector valve, No. 3 cyl., Engine glow plug	245
15. Hall sender, Coolant temperature sender, Fuel temperature sender, Engine control unit, Auxiliary air heater element	246
16. Immobiliser reader coil, Oil pressure switch, Fuel gauge, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Handbrake warning lamp	247
032 - Windscreen wiper and washer system and rear window wiper and washer system / heated rear window (Europe)	248-254
1. Windscreen wiper and washer system and rear window wiper and washer system / heated rear window (Europe)	248
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	249
3. Ignition/starter switch, onboard supply control unit, terminal 30 wiring junction	250
4. Intermittent wiper switch, onboard supply control unit	251
5. Onboard supply control unit, rear window wiper motor, windscreen and rear window washer pump, heated rear window	252
6. Automatic intermittent wash and wipe relay, X-contact relief relay, onboard supply control unit, windscreen wiper motor	253
7. Heated rear window switch, heated rear window control relay, onboard supply control unit	254
033 - Airbag systems , (F6G)	255-261
1. Airbaa svstems . (F6G)	255

2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	256
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	257
4. Airbag control unit, Onboard supply control unit	258
5. Airbag coil connector and return ring with slip ring, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	259
6. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	260
7. Front left belt switch, Control unit in dash panel insert, Dash panel insert, Airbag warning lamp, Belt switch warning lamp	261
034 - Basic equipment (Europe)	262-283
1. Basic equipment (Europe)	262
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	263
3. Ignition/starter switch, onboard supply control unit, terminal 30 wiring junction	264
4. Reversing light switch, onboard supply control unit	265
5. X-contact relief relay, onboard supply control unit	266
6. Hazard warning lights button, onboard supply control unit, cigarette lighter, 12 V socket, front interior light	267
7. Onboard supply control unit, luggage compartment light	268
8. Brake light switch, clutch pedal switch, brake pedal switch, onboard supply control unit	269
9. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, headlight range control regulator	270
10. Intermittent wiper switch, heated rear window switch, onboard supply control unit, windscreen and rear window washer pump	271
11. Fuel gauge sender, fuel system pressurisation pump, headlight main beam relay, onboard supply control unit	272
12. Onboard supply control unit	273
13. Daytime running lights relay, side and tail lights, onboard supply control unit	274
14. Onboard supply control unit, right tail light bulb, rear right turn signal bulb, right brake light bulb, right reversing light bulb, number plate light	275
15. Handbrake warning switch, brake fluid level warning contact, onboard supply control unit	276
16. Coolant shortage indicator sender, onboard supply control unit, data bus diagnostic interface	277
17. Left side repeater turn signal bulb, right side repeater turn signal bulb, windscreen wiper motor, left headlight range control motor, right headlight range control motor	278
18. Onboard supply control unit, front left turn signal bulb, front right turn signal bulb, high-level brake light bulb, heated rear window	279
19. Driver door contact switch, front passenger door contact switch, horn and dual tone horn, onboard supply control unit, rear window wiper motor	280
20. Heater control unit, fresh air blower series resistor with overheating fuse, fresh air blower, fresh air and air recirculation flap control motor	281
21. Oil pressure switch, speedometer, dash panel insert, left turn signal warning lamp, left headlight twin filament bulb, left side light bulb	282
22. Immobilizer reader coil, fuel gauge, control unit with display in dash panel insert, immobiliser control unit, dash panel insert, main beam warning lamp	283
035 - Heated rear window (Europe)	284-288
1. Heated rear window (Europe)	284
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	285
3. Ignition/starter switch, onboard supply control unit, terminal 30 wiring junction	286
4. Onboard supply control unit	287
5. Heated rear window button, onboard supply control unit, heated rear window	288
036 - Anti-lock brake system (ABS) , (F6G)	289-296
1. Anti-lock brake system (ABS) , (F6G)	289
2. Battery, Starter, Alternator, Voltage regulator	290
3. Ignition/starter switch, Terminal 30 wiring junction	291
4. Front right speed sensor, Front left speed sensor, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	292
5. Rear right speed sensor, Rear left speed sensor, ABS control unit, ABS return flow pump relay, ABS solenoid valve relay, ABS return flow pump	293
6. Onboard supply control unit	294
7. Brake light switch, Brake pedal switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, ABS warning lamp	295
8. Fuse 2 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B	296
037 - Climatic , BKR,(F6G)	297-305
1. Climatic , BKR,(F6G)	297
2. Batterv. Starter. Alternator. Voltace reulator. Onboard supply control unit	298

3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	299
4. X-contact relief relay, Onboard supply control unit	300
5. Fresh air blower switch, Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Temperature sensor blower	301
6. Fresh air and air recirculation flap switch, Potentiometer for temperature flap control motor, Potentiometer for air recirculation flap control motor, Air conditioning system control unit, Temperature flap control motor, Fresh air and air recirculation flap control motor	302
7. High-pressure sender, Air conditioning system control unit, Air conditioning system warning lamp, Fresh air and air recirculation warning lamp, Fresh air regulator illumination bulb, Air conditioner compressor regulating valve, Fresh air blower	303
8. Radiator fan control unit, Radiator fan, Right radiator fan	304
9. Ambient temperature sensor, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	305
038 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) , (F6G)	306-315
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) , (F6G)	306
2. Battery, Starter, Alternator, Voltage regulator	307
3. Ignition/starter switch, Terminal 30 wiring junction	308
4. Front right speed sensor, Front left speed sensor, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve, Rear right ABS inlet valve	309
5. Button for TCS and electronic stabilisation program, Rear right speed sensor, Rear left speed sensor, ABS control unit, Switches and instruments regulator illumination bulb, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	310
6. ABS control unit, ABS return flow pump relay, ABS solenoid valve relay, Vehicle stabilization program high-pressure valve 1, Vehicle stabilization program high-pressure valve 2, ABS return flow pump	311
7. Onboard supply control unit	312
8. Brake light switch, Brake pedal switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, ABS warning lamp, Warning lamp for electronic stabilisation program and TCS	313
9. Fuse 2 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B	314
10. Steering angle sender, Lateral acceleration sender, Yaw rate sender, Sensor unit for electronic stabilisation program	315
039 - Climatic , BMD,(F6G)	316-324
1. Climatic , BMD,(F6G)	316
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	317
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	318
4. X-contact relief relay, Onboard supply control unit	319
5. Fresh air blower switch, Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Temperature sensor blower	320
6. Fresh air and air recirculation flap switch, Potentiometer for temperature flap control motor, Potentiometer for air recirculation flap control motor, Air conditioning system control unit, Temperature flap control motor, Fresh air and air recirculation flap control motor	321
7. High-pressure sender, Air conditioning system control unit, Air conditioning system warning lamp, Fresh air and air recirculation warning lamp, Fresh air regulator illumination bulb, Air conditioner compressor regulating valve, Fresh air blower	322
8. Radiator fan thermal switch, Radiator fan control unit, Right radiator fan	323
9. Ambient temperature sensor, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	324
040 - Radio , (F6G)	325-331
1. Radio , (F6G)	325
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	326
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	327
4. Onboard supply control unit, Radio	328
5. Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	329
6. Radio, Aerial, Rear left bass loudspeaker, Rear right bass loudspeaker, Aerial amplifier	330
7. Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	331
041 - Climatic (Europe)	332-341
1. Climatic (Europe)	332
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	333
3. Ignition/starter switch. X-contact relief relay. onboard supply control unit	334

4. Fresh air blower switch, air conditioning system control unit, fresh air blower series resistor with overheating fuse, fresh air and air recirculation flap control motor	335
5. Air conditioning system switch, potentiometer for temperature selection rotary knob, air conditioning system control unit, onboard supply control unit, temperature flap control motor	336
6. High pressure sender, air conditioning system control unit, onboard power supply control unit	337
7. Air conditioning system control unit, onboard supply control unit, fresh air blower	338
8. Ambient temperature sensor, onboard supply control unit, air conditioner compressor regulating valve, radiator fan on right of radiator	339
9. Radiator fan thermal switch, radiator fan control unit, onboard supply control unit	340
10. Onboard supply control unit, terminal 30a wiring junction	341
042 - Electrohydraulic power assisted steering (Europe)	342-345
1. Electrohydraulic power assisted steering (Europe)	342
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	343
3. Ignition/starter switch, onboard supply control unit, terminal 30 wiring junction	344
4. Power steering sensor, power steering control unit, onboard supply control unit, steering hydraulics pump	345
043 - Fog lights (Crossfox)	346-352
1. Fog lights (Crossfox)	346
2. Battery, starter, alternator, voltage regulator	347
3. Ignition/starter switch, terminal 30 wiring junction	348
4. Headlight main beam relay, X-contact relief relay	349
5. Front and rear fog light switch, front and rear fog light illumination bulb, left tail light and rear fog light bulb, left additional main beam bulb	350
6. Left fog light bulb, right fog light bulb	351
7. Control unit in dash panel insert, dash panel insert, rear fog light warning lamp, fog light warning lamp	352
044 - Light switch (Crossfox)	353-361
1. Light switch (Crossfox)	353
2. Battery, starter, alternator, voltage regulator	354
3. Ignition/starter switch, terminal 30 wiring junction	355
4. Number plate light	356
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, dipped beam relay	357
6. Headlight main beam relay, X-contact relief relay	358
7. Right tail light bulb, rear left turn signal bulb, left brake light bulb, right brake light bulb, left reversing light bulb, right reversing light bulb	359
8. Fuses	360
9. Left headlight twin filament bulb/left sealed beam insert, right headlight twin filament bulb/right sealed beam insert, front left side marker bulb, front right side marker bulb, front left turn signal bulb	361
046 - Spare wheel release (Crossfox)	362-365
1. Spare wheel release (Crossfox)	362
2. Battery, starter, alternator, voltage regulator	363
3. Ignition/starter switch, terminal 30a wiring junction	364
4. Cruise control system switch, spare wheel release warning light	365
047 - Light switch with daytime running lights (Europa)	366-375
1. Light switch with daytime running lights (Europa)	366
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	367
3. Ignition/starter switch, fuel pump relay, onboard supply control unit, terminal 30 wiring junction	368
4. Light switch, turn signal switch, parking light switch, headlight range control regulator	369
5. Onboard supply control unit, daytime running lights relay, side and tail lights	370
6. Right tail light bulb, left tail light bulb, rear left turn signal bulb, rear right turn signal bulb, left brake light bulb	371
7. Onboard supply control unit, left headlight range control motor, right headlight range control motor	372
8. Onboard supply control unit, front left side marker bulb, front right side marker bulb, left dipped beam bulb, left main beam bulb, right dipped beam bulb, right headlight main beam bulb	373
9. Onboard supply control unit, front left turn signal bulb, front right turn signal bulb, left side mounted turn signal bulb, right side mounted turn signal bulb	374
10. Headlight main beam relay, onboard supply control unit, number plate light	375
048 - Sliding sunroof , (F6G)	376-383
1. Sliding sunroof , (F6G)	376
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	377
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	378
4. Onboard supply control unit	379

5. Sliding sunroof lift/lower switch, Sliding sunroof adjustment regulator, Sliding sunroof adjustment control unit, Convenience system central control unit, Onboard supply control unit, Sliding sunroof motor	380
6. Interior monitoring switch, Blocking diode, Convenience system central control unit, Deactivation of interior monitoring system switch illumination bulb, Front interior light	381
7. Anti-theft alarm ultrasonic sensor, Convenience system central control unit	382
8. Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	383
049 - Heated seats , (F6G)	384-390
1. Heated seats , (F6G)	384
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	385
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	386
4. Heated driver seat regulator, Heated front passenger seat regulator, Onboard supply control unit	387
5. Driver seat temperature sensor, Heated driver seat control unit, Onboard supply control unit, Heated seat cushion for driver seat, Heated backrest for driver seat	388
6. Front passenger seat temperature sensor, Heated front passenger seat control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	389
7. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	390
050 - Heated washer jets , (F6G)	391-395
1. Heated washer jets , (F6G)	391
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	392
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	393
4. Onboard supply control unit, Spray jet heater element for windscreen washer system	394
5. Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	395
055 - 1.6l engine , BLH,(F0A)	396-411
1. 1.6l engine , BLH,(F0A)	396
2. Battery, Starter, Alternator, Voltage regulator	397
3. Ignition/starter switch, Terminal 30 wiring junction	398
4. Fuse 26 on fuse holder B, Fuse 30 on fuse holder B, Fuse 38 on fuse holder B, Fuse 42 on fuse holder B	399
5. Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	400
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit	401
7. Oil pressure switch, Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel supply relay	402
8. Clutch pedal switch, Fuel pump relay, Radiator fan 2nd speed relay, Engine control unit, Activated charcoal filter solenoid valve 1	403
9. Fresh air blower and radiator fan relay, Engine control unit	404
10. Speedometer sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	405
11. Engine control unit, Ignition transformer, Spark plug connector	406
12. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	407
13. Coolant temperature display sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	408
14. Hall sender, Knock sensor 1, Engine control unit	409
15. Fuel system pressurisation pump, X-contact relief relay	410
16. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	411
056 - Window wash/wipe system and heated rear window , (F6G)	412-419
1. Window wash/wipe system and heated rear window , (F6G)	412
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	413
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	414
4. Heated rear window control relay, X-contact relief relay, Onboard supply control unit	415
5. Intermittent wiper switch, Onboard supply control unit	416
6. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	417
7. Heated rear window button, Automatic intermittent wash and wipe relay, Onboard supply control unit, Windscreen wiper motor, Heated rear window	418
8. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	419
057 - 1.2 l - Simos 9.1 - 40 kW, engine code BMD (Europe)	420-434
1. 1.2 l - Simos 9.1 - 40 kW, engine code BMD (Europe)	420
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	421
3. Ignition/starter switch, brake fluid level warning contact, onboard supply control unit	422
4. Current supply relay, X-contact relief relay, onboard supply control unit	423
5. Brake light switch. clutch pedal switch. brake pedal switch. onboard supply control unit	424

6. Fuel gauge sender, fuel system pressurisation pump, speedometer sender, coolant shortage indicator sender, onboard supply control unit	425
7. Radiator fan thermal switch, onboard supply control unit, terminal 30 wiring junction, radiator fan on right of radiator	426
8. Oil pressure switch, fuel pump relay, onboard supply control unit	427
9. Onboard supply control unit, engine control unit	428
10. Engine speed sender, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender, engine control unit	429
11. Throttle valve drive for electric throttle (EPC), onboard supply control unit, engine control unit, injector, cylinder 1, injector, cylinder 2, injector, cylinder 3	430
12. Knock sensor 1, onboard supply control unit, engine control unit, ignition coil 1 with output stage, ignition coil 2 with output stage, spark plug connector, spark plugs	431
13. Lambda probe, accelerator position sender, lambda probe after catalytic converter, accelerator position sender 2, onboard supply control unit, engine control unit	432
14. Onboard supply control unit, engine control unit, active charcoal filter system solenoid valve 1	433
15. Immobiliser reader coil, fuel gauge, control unit with display in dash panel insert, immobiliser control unit, alternator warning lamp, immobiliser warning lamp	434
058 - Mirror right with memory control unit for reversing	435-441
1. Mirror right with memory control unit for reversing	435
2. Battery, starter, alternator, voltage regulator	436
3. Ignition/starter switch, X-contact relief relay, terminal 30a wiring junction	437
4. Reversing light switch, driver side mirror adjustment motor	438
5. Mirror memory control unit	439
6. Potentiometer for horizontal adjustment of front passenger side mirror, potentiometer for vertical adjustment of front passenger side mirror, mirror memory control unit	440
7. Mirror adjustment switch, mirror adjustment change-over switch, mirror adjustment switch illumination bulb	441
059 - Automatic anti-dazzle interior mirror	442-445
1. Automatic anti-dazzle interior mirror	442
2. Battery, starter, alternator, voltage regulator	443
3. Ignition/starter switch	444
4. Anti-dazzle interior mirror button, reversing light switch, anti-dazzle interior mirror warning lamp, automatic anti-dazzle interior mirror	445
061 - Headlight range control (Europe)	446-450
1. Headlight range control (Europe)	446
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	447
3. Ignition/starter switch, X-contact relief relay, onboard supply control unit	448
4. Headlight range control regulator, Terminal 30 wiring junction	449
5. Onboard supply control unit, left headlight range control motor, right headlight range control motor	450
062 - Fog light , (F6G)	451-456
1. Fog light , (F6G)	451
2. Battery, Starter, Alternator, Voltage regulator	452
3. Ignition/starter switch, Terminal 30 wiring junction	453
4. Front and rear fog light switch, X-contact relief relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	454
5. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left tail light and rear fog light bulb	455
6. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Rear fog light warning lamp, Fog light warning lamp	456
065 - Fog light and twin headlight light switch	457-467
1. Fog light and twin headlight light switch	457
2. Battery, starter, alternator, voltage regulator	458
3. Ignition/starter switch, terminal 30 wiring junction	459
4. Number plate light	460
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, dipped beam relay	461
6. Headlight main beam relay, X-contact relief relay	462
7. Right tail light bulb, left tail light bulb, left brake light bulb, right brake light bulb, left reversing light bulb, right reversing light bulb	463
8. Control unit in dash panel insert, dash panel insert, alternator warning lamp, right turn signal warning lamp	464
9. Control unit in dash panel insert, dash panel insert, left turn signal warning lamp	465
10. Front left side marker bulb, front right side marker bulb, front left turn signal bulb, left headlight dipped beam bulb, left main beam bulb, right main beam bulb	466
11. Front and rear fog light switch. left fog light bulb. right fog light bulb. front and rear fog	467

light switch illumination bulb	
067 - Climatic (Europe)	468-476
1. Climatic (Europe)	468
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	469
3. Ignition/starter switch, X-contact relief relay, onboard supply control unit	470
4. Fresh air blower switch, dash panel temperature sensor, temperature sensor blower, fresh air and air recirculation flap control motor	471
5. Air conditioning system switch, footwell vent temperature sender, evaporator output temperature sender, air conditioning system control unit	472
6. Air conditioning system control unit, onboard supply control unit, terminal 30a wiring junction, fresh air blower	473
7. Ambient temperature sensor, air conditioning system control unit, onboard supply control unit, air conditioner compressor regulating valve	474
8. High pressure sender, air conditioning system control unit, onboard power supply control unit	475
9. Radiator fan control unit, onboard supply control unit, radiator fan on right	476
068 - 1.0 I - 4BV/52 kW, engine code AQZ	477-490
1. 1.0 I - 4BV/52 kW, engine code AQZ	477
2. Battery, starter, alternator, voltage regulator	478
3. Ignition/starter switch, X-contact relief relay	479
4. Coolant temperature display sender, coolant temperature sender, engine control unit	480
5. Engine speed sender, Hall sender, intake air temperature sender, intake manifold pressure sender, engine control unit	481
6. Knock sensor 1, throttle valve drive for electric throttle (EPC), throttle valve drive angle sender 1 for electric throttle (EPC), ignition transformer, spark plug connector, spark plugs	482
7. Accelerator position sender, accelerator position sender 2, engine control unit	483
8. Speedometer sender, engine control unit	484
9. Lambda probe, engine control unit, injector, cylinder 1, injector, cylinder 2, injector, cylinder 3, injector, cylinder 4	485
10. Radiator fan 2nd speed relay, fresh air blower and radiator fan relay, engine control unit	486
11. Brake light switch, clutch pedal switch, brake pedal switch, engine control unit, activated charcoal filter system solenoid valve 1	487
12. Radiator fan	488
13. Fuel gauge sender, fuel system pressurisation pump, fuel pump relay	489
14. Oil pressure switch, control unit in dash panel insert, dash panel insert, alternator warning lamp, oil pressure warning lamp	490
069 - Convenience system	491-506
1. Convenience system	491
2. Battery, starter, alternator, voltage regulator	492
3. Ignition/starter switch, terminal 30 wiring junction	493
4. Driver door contact switch, front passenger door contact switch, reversing light switch, rear left door contact switch, rear right door contact switch	494
5. Driver side interior locking switch, convenience system central control unit, interior lock switch illumination bulb, rear left window regulator motor, rear right window regulator motor	495
6. Front left window regulator switch, driver side front right window regulator switch, window regulator switch in front passenger door, convenience system central control unit	496
7. Convenience system central control unit, rear lid central locking motor, driver door central locking motor, front passenger door central locking motor	497
8. Luggage compartment light switch, driver door exterior handle switch for anti-theft alarm system, contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system	498
9. Anti-theft alarm ultrasonic sensor, convenience system central control unit, driver side window regulator motor, front passenger side window regulator motor	499
10. Rear left window regulator switch, in driver door, rear right window regulator switch, in driver door, window regulator switch illumination bulb	500
11. Rear window regulator isolation switch, window regulator lock warning lamp, rear window regulator isolation switch illumination bulb	501
12. Rear left door power latching motor, rear right power latching motor	502
13. Rear left window regulator switch, in door, rear right window regulator switch, in door, X-contact relief relay, window regulator switch illumination bulb	503
14. Mirror adjustment switch, mirror adjustment change-over switch, driver vanity mirror contact switch, mirror adjustment switch illumination bulb, luggage compartment light	504
15. Anti-dazzle interior mirror button, driver side fold-in mirror motor, front interior light	505
16. Anti-theft alarm and vermin repellent system contact switch, control unit with display in dash panel insert, main beam warning lamp, alternator warning lamp	506
070 - Convenience system , (F6G)	507-522
1. Convenience system , (F6G)	507
2. Batterv. Starter. Alternator. Voltage regulator. Onboard supply control unit	508

3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	509
4. Onboard supply control unit	510
5. Onboard supply control unit	511
6. Hazard warning lights button, Blocking diode, Onboard supply control unit, Button illumination bulb, Front interior light, Front passenger reading light, Driver side reading light	512
7. Driver door contact switch, Front passenger door contact switch, X-contact relief relay, Onboard supply control unit, Data bus diagnostic interface	513
8. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Onboard supply control unit, Mirror adjustment switch illumination bulb	514
9. Onboard supply control unit, Driver side mirror adjustment motor 2, Front passenger side mirror adjustment motor 2, Driver side mirror adjustment motor, Front passenger side mirror adjustment motor, Heated exterior mirror on driver side, Heated exterior mirror on front passenger side	515
10. Convenience system central control unit, Onboard supply control unit, Window regulator single fuse	516
11. Front left window regulator switch, Front right window regulator switch in driver door, Driver side interior locking switch, Driver door exterior handle switch for anti-theft alarm system, Convenience system central control unit, Window regulator switch illumination bulb	517
12. Window regulator switch in front passenger door, Anti-theft alarm and vermin repellent system contact switch, Anti-theft alarm system horn, Convenience system central control unit, Window regulator switch illumination bulb	518
13. Convenience system central control unit, Rear lid central locking motor, Driver door power latching motor, Front passenger door power latching motor	519
14. Luggage compartment light switch, Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Anti-theft alarm ultrasonic sensor, Convenience system central control unit, Luggage compartment light	520
15. Convenience system central control unit, Left door warning lamp, Driver side window regulator motor, Front passenger side window regulator motor	521
16. Immobiliser reader coil, Rev. counter, Speedometer, Immobiliser control unit, Dash panel insert, Battery charge condition warning lamp: red LED for less than 12 Volt, Left turn signal warning lamp, Right turn signal warning lamp, Immobiliser warning lamp	522
071 - Basic equipment (Europe)	523-544
1. Basic equipment (Europe)	523
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	524
3. Ignition/starter switch, onboard supply control unit, terminal 30 wiring junction	525
4. Reversing light switch, onboard supply control unit	526
5. X-contact relief relay, onboard supply control unit	527
6. Hazard warning light switch, brake fluid level warning contact, onboard supply control unit, cigarette lighter, front interior light	528
7. Onboard supply control unit, luggage compartment light	529
8. Brake light switch, clutch pedal switch, brake pedal switch, airbag coil connector and return ring with slip ring, horn plate, horn activation contact ring	530
9. Light switch, turn signal switch, parking light switch, headlight range control regulator, onboard supply control unit	531
10. Intermittent wiper switch, heated rear window switch, onboard supply control unit, windscreen and rear window washer pump	532
11. Fuel gauge sender, fuel system pressurisation pump, headlight main beam relay, onboard supply control unit	533
12. Onboard supply control unit	534
13. Daytime running lights relay, side and tail lights, onboard supply control unit	535
14. Onboard supply control unit, rear left turn signal bulb, left reversing light bulb, left brake and tail light bulb, number plate light	536
15. Handbrake warning switch, onboard supply control unit	537
16. Coolant shortage indicator sender, onboard supply control unit, data bus diagnostic interface	538
17. Left side repeater turn signal bulb, left headlight twin filament bulb/left sealed beam insert, windscreen wiper motor, left headlight range control motor	539
18. Onboard supply control unit, left side light bulb, front left turn signal bulb, high-level brake light bulb, heated rear window	540
19. Driver door contact switch, front passenger door contact switch, horn and dual tone horn, onboard supply control unit, rear window wiper motor	541
20. Fresh air blower switch, heater control unit, fresh air blower series resistor with overheating fuse, fresh air blower	542
21. Oil pressure switch, fuel gauge, dash panel insert, right turn signal warning lamp, reserve fuel warning lamp	543
22. Immobilizer reader coil, speedometer, control unit with display in dash panel insert, immobilizer control unit, dash panel insert	544
072 - 1.6 l - ME7.5.10 - 74 kW. engine code BAH	545-559

1. 1.6 l - ME7.5.10 - 74 kW, engine code BAH	545
2. Battery, starter, alternator, voltage regulator	546
3. Ignition/starter switch, X-contact relief relay	547
4. Coolant temperature display sender, coolant temperature sender, engine control unit, terminal 30 wiring junction	548
5. Engine speed sender, Hall sender, intake air temperature sender, intake manifold pressure sender, engine control unit	549
6. Knock sensor 1, throttle valve drive for electric throttle (EPC), throttle valve drive angle sender 1 for electric throttle (EPC), ignition transformer, spark plug connector, spark plugs	550
7. Accelerator position sender, accelerator position sender 2, engine control unit	551
8. Handbrake warning switch, brake fluid level warning contact, speedometer sender, engine control unit	552
9. Lambda probe, engine control unit, injector, cylinder 1, injector, cylinder 2, injector, cylinder 3, injector, cylinder 4	553
10. Radiator fan 2nd speed relay, fresh air blower and radiator fan relay, engine control unit	554
11. Brake light switch, clutch pedal switch, brake pedal switch, engine control unit, activated charcoal filter system solenoid valve 1	555
12. Radiator fan	556
13. Fuel gauge sender, fuel system pressurisation pump, fuel pump relay	557
14. Oil pressure switch, control unit in dash panel insert, dash panel insert, alternator warning lamp, oil pressure warning lamp	558
15. Control unit in dash panel insert, dash panel insert	559
073 - Fog light switch	560-570
1. Fog light switch	560
2. Battery, starter, alternator, voltage regulator	561
3. Ignition/starter switch, terminal 30 wiring junction	562
4. Number plate light	563
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, dipped beam relay	564
6. Headlight main beam relay, X-contact relief relay	565
7. Right tail light bulb, left tail light bulb, left brake light bulb, right brake light bulb, left reversing light bulb, right reversing light bulb	566
8. Control unit in dash panel insert, dash panel insert, alternator warning lamp, right turn signal warning lamp	567
9. Control unit in dash panel insert, dash panel insert, left turn signal warning lamp	568
10. Left headlight twin filament bulb/left sealed beam insert, right headlight twin filament bulb/right sealed beam insert, front left side marker bulb, front left turn signal bulb	569
11. Front and rear fog light switch, left fog light bulb, right fog light bulb, front and rear fog light switch illumination bulb	570
074 - Fog light switch (Crossfox)	571-581
1. Fog light switch (Crossfox)	571
2. Battery, starter, alternator, voltage regulator	572
3. Ignition/starter switch, terminal 30 wiring junction	573
4. Number plate light	574
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, dipped beam relay	575
6. Headlight main beam relay, X-contact relief relay	576
7. Right tail light bulb, left tail light bulb, left brake light bulb, right brake light bulb, left reversing light bulb, right reversing light bulb	577
8. Control unit in dash panel insert, dash panel insert, alternator warning lamp, right turn signal warning lamp	578
9. Control unit in dash panel insert, dash panel insert, left turn signal warning lamp, left additional main beam bulb, right additional main beam bulb	579
10. Left headlight twin filament bulb/left sealed beam insert, right headlight twin filament bulb/right sealed beam insert, front left side marker bulb, front left turn signal bulb	580
11. Front and rear fog light switch, left fog light bulb, right fog light bulb, front and rear fog light switch illumination bulb	581
075 - Fog light and twin headlight light switch (Crossfox)	582-592
1. Fog light and twin headlight light switch (Crossfox)	582
2. Battery, starter, alternator, voltage regulator	583
3. Ignition/starter switch, terminal 30 wiring junction	584
4. Number plate light	585
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, dipped beam relay	586
6. Headlight main beam relay, X-contact relief relay	587
7. Right tail light bulb. left tail light bulb. left brake light bulb. right brake light bulb. left	588

reversing light bulb, right reversing light bulb	
8. Control unit in dash panel insert, dash panel insert, alternator warning lamp, right turn signal warning lamp	589
9. Control unit in dash panel insert, dash panel insert, left turn signal warning lamp, left additional main beam bulb, right additional main beam bulb	590
10. Front left side marker bulb, front right side marker bulb, front left turn signal bulb, left headlight dipped beam bulb, left main beam bulb, right main beam bulb	591
11. Front and rear fog light switch, left fog light bulb, right fog light bulb, front and rear fog light switch illumination bulb	592
076 - Fog light switch (Europe)	593-603
1. Fog light switch (Europe)	593
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	594
3. Ignition/starter switch, onboard supply control unit, terminal 30 wiring junction	595
4. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, headlight range control regulator	596
5. Onboard supply control unit, daytime running lights relay, side and tail lights	597
6. Right tail light bulb, left tail light bulb, rear left turn signal bulb, rear right turn signal bulb, left brake light bulb, left reversing light bulb	598
7. Onboard supply control unit, left headlight range control motor, right headlight range control motor	599
8. Left headlight twin filament bulb/left sealed beam insert, left side light bulb, front left turn signal bulb, right side light bulb, left side mounted turn signal bulb	600
9. Front and rear fog light switch, handbrake warning switch, left fog light bulb	601
10. Headlight main beam relay, X-contact relief relay, onboard supply control unit, number plate light	602
11. Control unit with display in dash panel insert, dash panel insert, main beam warning lamp, rear fog light warning lamp, fog light warning lamp	603
077 - 1.9 l - SDI - 47 kW, engine code ASY	604-617
1. 1.9 l - SDI - 47 kW, engine code ASY	604
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	605
3. Ignition/starter switch, onboard supply control unit	606
4. X-contact relief relay, terminal 30 voltage supply relay, onboard supply control unit	607
5. Onboard supply control unit, engine control unit	608
6. Brake fluid level warning contact, onboard supply control unit, engine control unit	609
7. Glow plug relay, onboard supply control unit, engine control unit	610
8. Intake manifold temperature sender, accelerator position sender, accelerator position sender 2, onboard supply control unit	611
9. Brake light switch, clutch pedal switch, brake pedal switch, onboard supply control unit, engine control unit	612
10. Engine speed sender, coolant temperature display sender, needle lift sender, onboard supply control unit, engine control unit	613
11. Fuel temperature sender, modulating piston movement sender, onboard supply control unit, commencement of injection valve, fuel shut-off valve	614
12. Speedometer sender, onboard supply control unit, engine glow plug	615
13. Control unit in dash panel insert, onboard supply control unit, dash panel insert, alternator warning lamp, brake system warning lamp	616
14. Oil pressure switch, fuel gauge sender, fuel gauge, rev. counter, control unit in dash panel insert, dash panel insert	617
078 - Air conditioning system	618-626
1. Air conditioning system	618
2. Battery, starter, alternator, voltage regulator	619
3. Ignition/starter switch, terminal 30 wiring junction	620
4. Air conditioning system control unit, fresh air blower, fresh air/recirculated air flap control motor	621
5. Fresh air blower switch, air conditioning system control unit, fresh air blower series resistor with overheating fuse	622
6. High-pressure sender, X-contact relief relay, fresh air blower relay and radiator fan	623
7. Radiator fan 2nd speed relay, right radiator fan	624
8. Air conditioning system switch-off relay, air conditioning system magnetic coupling	625
9. Control unit with display in dash panel insert, dash panel insert	626
079 - Basic equipment	627-647
1. Basic equipment	627
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	628
3. Ignition/starter switch, onboard supply control unit	629
4. Reversing light switch, onboard supply control unit	630
5. X-contact relief relay, onboard supply control unit	631

6. Hazard warning light switch, brake fluid level warning contact, onboard supply control unit, indicator lamp for hazard warning light, front interior light	632
7. Onboard supply control unit, luggage compartment light	633
8. Brake light switch, clutch pedal switch, brake pedal switch, onboard supply control unit	634
9. Light switch, turn signal switch, headlight dipper/flasher switch, horn plate, horn activation contact ring	635
10. Intermittent wiper switch, heated rear window switch, onboard supply control unit, windscreen and rear window washer pump	636
11. Headlight main beam relay, automatic intermittent wash and wipe relay, onboard supply control unit	637
12. Onboard supply control unit, wiper motor	638
13. Left headlight twin filament bulb/left sealed beam insert, front left side marker bulb, front left turn signal bulb	639
14. Rear left turn signal bulb, left reversing light bulb, left brake and tail light bulb	640
15. Handbrake warning switch, terminal 30 voltage supply relay, onboard supply control unit	641
16. Onboard supply control unit, dipped beam relay	642
17. Horn or dual tone horn, onboard supply control unit, socket illumination bulb, 12 V socket	643
18. Luggage compartment light switch, onboard supply control unit, rear window wiper motor, heated rear window	644
19. Driver door contact switch, front passenger door contact switch, onboard supply control unit, brake light bulb	645
20. Immobilizer reader coil, oil pressure switch, rev. counter, control unit in dash panel insert, immobilizer control unit, dash panel insert, alternator warning lamp	646
21. Fuel gauge sender, fuel gauge, speedometer, main beam warning lamp, heated rear window warning lamp, left turn signal warning lamp	647
080 - Air conditioning system	648-656
1. Air conditioning system	648
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	649
3. Ignition/starter switch, onboard supply control unit	650
4. Control unit with display in dash panel insert, air conditioning system control unit, dash panel insert, fresh air blower, fresh air and air recirculation flap control motor	651
5. Fresh air blower switch, air conditioning system control unit, onboard supply control unit, fresh air blower series resistor with overheating fuse	652
6. Air conditioning system switch-off relay, onboard supply control unit, relay for air conditioning system, diesel engine	653
7. Thermal switch for air conditioning system shut-off, onboard supply control unit, air conditioning system magnetic clutch, radiator fan on right of radiator	654
8. Radiator fan thermal switch, radiator fan control unit, onboard supply control unit	655
9. High-pressure sender, X-contact relief relay, radiator fan control unit, onboard supply control unit	656
081 - Airbag	657-663
1. Airbag	657
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	658
3. Ignition/starter switch, onboard supply control unit	659
4. X-contact relief relay, onboard supply control unit	660
5. Airbag coil connector and return ring with slip ring, airbag control unit, driver side airbag igniter, front passenger side airbag igniter 1	661
6. Control unit in dash panel insert, onboard supply control unit	662
7. Control unit in dash panel insert, onboard supply control unit, dash panel insert, alternator warning lamp, airbag warning lamp	663
082 - Anti-lock brake system ABS	664-673
1. Anti-lock brake system ABS	664
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	665
3. Ignition/starter switch, onboard supply control unit	666
4. X-contact relief relay, onboard supply control unit	667
5. Front right speed sensor, front left speed sensor, ABS control unit, onboard supply control unit, front right ABS inlet valve	668
6. Rear right speed sensor, rear left speed sensor, ABS control unit, ABS return flow pump relay, ABS solenoid valve relay, ABS return flow pump	669
7. ABS control unit, onboard supply control unit	670
8. Brake light switch, brake pedal switch, ABS control unit, onboard supply control unit	671
9. Onboard supply control unit	672
10. Control unit in dash panel insert, onboard supply control unit, dash panel insert, alternator warning lamp, ABS warning lamp	673
083 - Convenience system	674-693
1. Convenience system	674

2. Battery, starter, alternator, voltage regulator, onboard supply control unit	675
3. Ignition/starter switch, onboard supply control unit	676
4. Rear window regulator isolation switch, rear left window regulator switch, in driver door, rear right window regulator switch, in driver door	677
5. Driver side interior locking switch, interior lock switch illumination bulb, rear left window regulator motor, rear right window regulator motor	678
6. Window regulator switch in front passenger door, luggage compartment light switch, contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system	679
7. Convenience system central control unit, rear lid central locking motor, driver door central locking motor, front passenger door central locking motor	680
8. Driver door exterior handle switch for anti-theft alarm system, convenience system central control unit, driver side window regulator motor, front passenger side window regulator motor	681
9. Convenience system central control unit, onboard supply control unit, window regulator single fuse	682
10. Front left window regulator switch, driver side front right window regulator switch, anti-theft alarm and vermin repellent system contact switch	683
11. Rear left window regulator switch, in door, rear right window regulator switch, in door, convenience system central control unit, onboard supply control unit	684
12. Convenience system central control unit, onboard power supply control unit	685
13. Convenience system central control unit, onboard power supply control unit	686
14. X-contact relief relay, onboard supply control unit	687
15. Onboard supply control unit, rear left door power latching motor, rear right power latching motor	688
16. Driver door contact switch, front passenger door contact switch, rear left door contact switch, rear right door contact switch	689
17. Onboard supply control unit, left door warning lamp	690
18. Mirror adjustment switch, mirror adjustment change-over switch, onboard supply control unit, driver side mirror adjustment motor	691
19. Onboard supply control unit, front passenger side mirror adjustment motor	692
20. Control unit in dash panel insert, onboard supply control unit, dash panel insert, alternator warning lamp	693
084 - Radio	694-703
1. Radio	694
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	695
3. Ignition/starter switch, onboard supply control unit	696
4. X-contact relief relay, onboard supply control unit	697
5. Onboard supply control unit, radio, rear left bass loudspeaker	698
6. Onboard supply control unit, radio, rear right bass loudspeaker	699
7. Onboard supply control unit, radio, rear left bass loudspeaker, rear right bass loudspeaker, front right treble loudspeaker, front right bass loudspeaker	700
8. Onboard supply control unit, radio, aerial, front left treble loudspeaker, front left bass loudspeaker, aerial amplifier	701
9. Multifunction buttons on left in steering wheel, multifunction buttons on right in steering wheel, Airbag coil connector/return spring with slip ring, onboard supply control unit, radio	702
10. Speedometer, control unit in dash panel insert, onboard supply control unit, dash panel insert, alternator warning lamp, coolant shortage warning lamp	703
085 - Twin headlight light switch	704-714
1. Twin headlight light switch	704
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	705
3. Ignition/starter switch, onboard supply control unit	706
4. Onboard supply control unit, number plate light	707
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, dipped beam relay	708
6. Headlight main beam relay, X-contact relief relay, onboard supply control unit	709
7. Onboard supply control unit, rear left turn signal bulb, left reversing light bulb, left brake and tail light bulb	710
8. Control unit in dash panel insert, dash panel insert, main beam warning lamp, left turn signal warning lamp	711
9. Onboard supply control unit, front right turn signal bulb, right headlight dipped beam bulb	712
10. Front left side marker bulb, front right side marker bulb, front left turn signal bulb, left headlight dipped beam bulb, left main beam bulb, right main beam bulb	713
11. Onboard supply control unit	714
086 - Electrohydraulic power assisted steering	715-719
1. Electrohydraulic power assisted steering	715
2. Battery, starter, alternator, voltage regulator, onboard supply control unit	716
3. Ignition/starter switch. onboard supply control unit	717

4. X-contact relief relay, control unit in dash panel insert, onboard supply control unit, dash panel insert, alternator warning lamp	718
5. Power steering sensor, power steering control unit, onboard supply control unit, steering hydraulics pump	719
087 - Electrohydraulic power steering , (F6G)	720-725
1. Electrohydraulic power steering , (F6G)	720
2. Battery, Starter, Alternator, Voltage regulator	721
3. Ignition/starter switch, Terminal 30 wiring junction	722
4. X-contact relief relay, Onboard supply control unit	723
5. Power steering sensor, Power steering control unit, Steering hydraulics pump	724
6. Control unit in dash panel insert, Dash panel insert, Electrohydraulic power steering warning lamp	725
088 - 1.0l engine , CCNA,(F0A)	726-745
1. 1.0l engine , CCNA,(F0A)	726
2. Battery, Starter, Alternator, Voltage regulator	727
3. Ignition/starter switch, Terminal 30 wiring junction	728
4. Fuse 26 on fuse holder B, Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 30 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B	729
5. Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 42 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	730
6. Lambda probe, Engine control unit	731
7. Brake fluid level warning contact, Accelerator position sender, Accelerator position sender 2, Engine control unit	732
8. Fresh air blower and radiator fan relay, Engine control unit, Radiator fan series resistor, Radiator fan	733
9. Cold start device relay, Radiator fan 2nd speed relay, Engine control unit, Cold start valve, Activated charcoal filter solenoid valve 1, Fuel pump for cold start	734
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine control unit	735
11. Engine control unit	736
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	737
13. Coolant temperature display sender, Coolant temperature sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	738
14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	739
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	740
16. Speedometer sender, Engine control unit	741
17. Engine control unit, Voltage supply relay 1, Ignition transformer, Spark plug connector, Spark plugs	742
18. Handbrake warning switch, Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	743
19. Oil pressure switch, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp	744
20. Fuel gauge, Control unit in dash panel insert, Dash panel insert, Reserve fuel warning lamp, Malfunction warning lamp, Electronic power control fault lamp	745
089 - 1.6l engine , CCRA,(F0A)	746-764
1. 1.6l engine , CCRA,(F0A)	746
2. Battery, Starter, Alternator, Voltage regulator	747
3. Ignition/starter switch, Terminal 30 wiring junction	748
4. Fuse 26 on fuse holder B, Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 30 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B	749
5. Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 42 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	750
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit	751
7. Brake fluid level warning contact, Accelerator position sender, Accelerator position sender 2, Engine control unit	752
8. Fresh air blower and radiator fan relay, Engine control unit, Radiator fan series resistor, Radiator fan	753
9. Cold start device relay, Radiator fan 2nd speed relay, Engine control unit, Cold start valve, Activated charcoal filter solenoid valve 1, Fuel pump for cold start	754
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine control unit	755

11. Engine control unit	756
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	757
13. Coolant temperature display sender, Coolant temperature sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	758
14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	759
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	760
16. Speedometer sender, Engine control unit	761
17. Handbrake warning switch, Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	762
18. Oil pressure switch, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp	763
19. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Reserve fuel warning lamp, Malfunction warning lamp	764
090 - Windscreen wiper and washer with windscreen heater and rear window wiper and washer with heated rear window	765-771
1. Windscreen wiper and washer with windscreen heater and rear window wiper and washer with heated rear window	765
2. Battery, starter, alternator, voltage regulator	766
3. Ignition/starter switch, terminal 30 wiring junction	767
4. Intermittent wiper switch, automatic intermittent wash and wipe relay	768
5. Rear window wiper motor, windscreen and rear window washer pump	769
6. X-contact relief relay, windscreen wiper motor, heated rear window	770
7. Heated rear window button, heated rear window control relay, control unit with display in dash panel insert, dash panel insert, heated rear window warning lamp	771
091 - Air conditioning system	772-780
1. Air conditioning system	772
2. Battery, starter, alternator, voltage regulator	773
3. Ignition/starter switch, terminal 30 wiring junction	774
4. Air conditioning system control unit, fresh air blower, fresh air/recirculated air flap control motor	775
5. Fresh air blower switch, air conditioning system control unit, fresh air blower series resistor with overheating fuse	776
6. High-pressure sender, X-contact relief relay, fresh air blower relay and radiator fan	777
7. Radiator fan 2nd speed relay, radiator fan series resistor, radiator fan	778
8. Air conditioning system switch-off relay, air conditioning system magnetic coupling	779
9. Control unit with display in dash panel insert, dash panel insert, alternator warning lamp	780
092 - Double airbag	781-784
1. Double airbag	781
2. Battery, starter, alternator, voltage regulator	782
3. Ignition/starter switch, terminal 30 wiring junction	783
4. Airbag coil connector and return ring with slip ring, airbag control unit, driver side airbag igniter, front passenger side airbag igniter 1	784
093 - 1.2l petrol engine , CHFA,CHFB,(F6G)	785-799
1. 1.2l petrol engine , CHFA,CHFB,(F6G)	785
2. Battery, Starter, Alternator, Voltage regulator	786
3. Ignition/starter switch, Radiator fan thermal switch, Terminal 30 wiring junction, Right radiator fan	787
4. Fuel gauge sender, Fuel system pressurisation pump, Current supply relay, X-contact relief relay, Onboard supply control unit	788
5. Brake fluid level warning contact, Speedometer sender, Engine control unit, Gearbox	789
6. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	790
7. Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	791
8. Knock sensor 1, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug connector, Spark plugs	792
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	793
10. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Activated charcoal filter solenoid valve 1	794
11. Brake light switch. Clutch pedal switch. Brake pedal switch. Fuel pump relay. Engine control	795

unit	
12. Fuse 26 on fuse holder B, Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 30 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B, Fuse 42 on fuse holder B	796
13. Fuse 2 on fuse holder C, Fuse 3 on fuse holder C, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	797
14. Oil pressure switch, Fuel gauge, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Handbrake warning lamp, Immobiliser warning lamp	798
15. Immobiliser reader coil, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Alternator warning lamp, Coolant shortage warning lamp, Reserve fuel warning lamp	799
094 - Basic equipment , (F6G)	800-820
1. Basic equipment , (F6G)	800
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	801
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	802
4. Onboard supply control unit	803
5. Onboard supply control unit	804
6. Onboard supply control unit	805
7. Onboard supply control unit	806
8. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Headlight range control regulator, Onboard supply control unit	807
9. Intermittent wiper switch, Heated rear window button, Onboard supply control unit, Windscreen and rear window washer pump	808
10. Hazard warning lights button, Onboard supply control unit, Cigarette lighter illumination bulb, Button illumination bulb, Cigarette lighter, Front interior light	809
11. Driver door contact switch, Front passenger door contact switch, Horn or dual tone horn, Headlight main beam relay, X-contact relief relay, Onboard supply control unit	810
12. Reversing light switch, Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb, Number plate light	811
13. Onboard supply control unit, Data bus diagnostic interface	812
14. Airbag coil connector and return ring with slip ring, Horn plate, Horn activation contact ring, Onboard supply control unit, High-level brake light bulb, Windscreen wiper motor, Rear window wiper motor, Heated rear window	813
15. Immobiliser reader coil, Oil pressure switch, Speedometer, Immobiliser control unit, Onboard supply control unit, Dash panel insert, Coolant temperature warning lamp (too cold), Battery charge condition warning lamp: red LED for less than 12 Volt	814
16. Brake fluid level warning contact, Fuel gauge, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Coolant shortage warning lamp, Reserve fuel warning lamp, Handbrake warning lamp	815
17. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Dash panel insert, Right turn signal warning lamp	816
18. Handbrake warning switch, Relay for daytime running lights, side and tail lights	817
19. Left headlight twin filament bulb, Right headlight twin filament bulb, Left headlight range control motor, Right headlight range control motor	818
20. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left turn signal repeater bulb, Right turn signal repeater bulb	819
21. Fresh air blower switch, Auxiliary heating heater element contact switch, Heater control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	820
095 - Light switch , (F6G)	821-834
1. Light switch , (F6G)	821
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	822
3. Ignition/starter switch, Fuel pump relay, Onboard supply control unit, Terminal 30 wiring junction	823
4. Onboard supply control unit	824
5. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Headlight range control regulator, Onboard supply control unit	825
6. Onboard supply control unit	826
7. Headlight main beam relay, X-contact relief relay, Onboard supply control unit	827
8. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb	828
9. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Fog light warning lamp	829
10. Immobiliser reader coil. Speedometer. Control unit in dash panel insert. Immobiliser control	830

unit, Dash panel insert, Main beam warning lamp, Rear fog light warning lamp, Handbrake warning lamp	
11. Front and rear fog light switch, Left fog light bulb, Right fog light bulb, Front and rear fog light switch illumination bulb	831
12. Handbrake warning switch, Relay for daytime running lights, side and tail lights	832
13. Left headlight twin filament bulb, Right headlight twin filament bulb, Left headlight range control motor, Right headlight range control motor	833
14. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left turn signal repeater bulb, Right turn signal repeater bulb	834
096 - Climatic , CHFA,CHFB,(F6G)	835-843
1. Climatic , CHFA,CHFB,(F6G)	835
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	836
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	837
4. X-contact relief relay, Onboard supply control unit	838
5. Fresh air blower switch, Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Temperature sensor blower	839
6. Fresh air and air recirculation flap switch, Potentiometer for temperature flap control motor, Potentiometer for air recirculation flap control motor, Air conditioning system control unit, Temperature flap control motor, Fresh air and air recirculation flap control motor	840
7. High-pressure sender, Air conditioning system control unit	841
8. Radiator fan thermal switch, Radiator fan control unit, Air conditioning system control unit, Right radiator fan	842
9. Ambient temperature sensor, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	843
097 - 1.6l petrol engine , CFZA,(F0A)	844-862
1. 1.6l petrol engine , CFZA,(F0A)	844
2. Battery, Starter, Alternator, Voltage regulator	845
3. Ignition/starter switch, Terminal 30 wiring junction	846
4. Fuse 26 on fuse holder B, Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 30 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B	847
5. Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 42 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	848
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit	849
7. Brake fluid level warning contact, Accelerator position sender, Accelerator position sender 2, Engine control unit	850
8. Fresh air blower and radiator fan relay, Engine control unit, Radiator fan series resistor, Radiator fan	851
9. Radiator fan 2nd speed relay, Engine control unit, Activated charcoal filter solenoid valve 1	852
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine control unit	853
11. Engine control unit	854
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	855
13. Coolant temperature display sender, Coolant temperature sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	856
14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	857
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	858
16. Speedometer sender, Engine control unit	859
17. Handbrake warning switch, Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	860
18. Oil pressure switch, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp	861
19. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Malfunction warning lamp, Electronic power control fault lamp	862
801 - Fitting Locations - earth points - 3	863-869
1. Fox Europa	863-869
1.1 Earth point, in engine compartment	863-865
1.2 Earth points, in interior	866-867
1.3 Earth points in rear part of vehicle	868-869
802 - Fitting Locations Fuses - 5	870-891
1. Fox	870-881
1.1 Fuse holder batterv (S)	870-872

1.1.1 Fuse colours:	870
1.1.2 Fuse holder battery (S):	871-872
1.2 Fuse holder SB and SC	873-879
1.2.1 Fuse colours:	873
1.2.2 Fuse holder (SC)	874-875
1.2.3 Fuse holder (SB)	876-879
1.3 Window regulator single fuse, on relay carrier	880-881
1.3.1 Window regulator single fuse -S37- (up to April 2009)	880
1.3.2 Window regulator single fuse -S37- (from April 2009)	881
2. Fox Europa	882-891
2.1 Fuse holder battery (S)	882-883
2.1.1 Fuse colours:	882
2.1.2 Fuse holder battery (S):	883
2.2 Fuse holder SB and SC	884-889
2.2.1 Fuse colours:	884
2.2.2 Fuse holder (SC)	885-886
2.2.3 Fuse holder (SB)	887-889
2.3 Fuses on relay carrier	890-891
2.3.1 Window regulator single fuse - S37	890
2.3.2 Heater element fuses	891
803 - Fitting Locations: Relay - 5	892-899
1. Fox	892-896
1.1 Relay, behind left dash panel	892-894
1.1.1 Designation of relay: (up to April 2009)	892-893
1.1.2 Designation of relay: (from April 2009)	894
1.2 Relay above relay carrier	895-896
1.2.1 Designation of relay:	895-896
2. Fox Europa	897-899
2.1 Relay, behind left dash panel	897-899
2.1.1 Designation of relay:	897-899
804 - Fitting Locations - control units - 3	900-931
1. Fox Europa	900-931
1.1 ABS control unit - J104 -	901-902
1.1.2 Designation of connector:	901-902
1.2 ABS control unit (right-hand drive) - J104 -	903-904
1.2.2 Designation of connector:	903-904
1.3 Heated driver seat control unit - J131 -	905-906
1.3.2 Designation of connector:	905-906
1.4 Heated front passenger seat control unit - J132 -	907-908
1.4.2 Designation of connector:	907-908
1.5 Heater control unit - J162 -	909-910
1.5.2 Designation of connector:	909-910
1.6 Airbag control unit - J234 -	911-912
1.6.2 Designation of connector:	911-912
1.7 Sliding sunroof adjustment control unit - J245 -	913-914
1.7.2 Designation of connector:	913-914
1.8 Control unit with display in dash panel insert - J285 -	915-917
1.8.2 Designation of connector:	915-917
1.9 Radiator fan control unit - J293 -	918-919
1.9.2 Designation of connector:	918-919
1.10 Air conditioning system control unit - J301 -	920-921
1.10.2 Designation of connector:	920-921
1.11 Convenience system central control unit - J393 -	922-923
1.11.2 Designation of connector:	922-923
1.12 Power steering control unit - J500 -	924-925
1.12.2 Designation of connector:	924-925
1.13 Onboard supply control unit - J519 -	926-927
1.13.2 Designation of connector:	926-927
1.14 Engine control unit (80-pin) - J623 -	928-929
1.14.2 Designation of connector:	928-929
1.15 Engine control unit (121-pin) - J623 -	930-931
1.15.2 Designation of connector:	930-931
805 - -Fitting Locations (Europe): Earth points - 3	932-938
1. Fox Europe	932-938
1.1 Engine compartment earth points	932-933
1.2 Vehicle interior earth points	934-935

1.3 Earth points in the rear vehicle area	936-938
806 - -Fitting Locations (Europe): Fuses - 3	939-948
1. Fox Europe	939-948
1.1 Battery fuse holder -S-	939-940
1.1.1 Fuse cable colours:	939
1.1.2 Battery fuse holder -S-, as of November, 2004:	940
1.2 Fuse holder -SB- and -SC-:	941-945
1.2.1 Fuse colours:	941
1.2.2 Fuse holder -SC-, as of November, 2004:	942-943
1.2.3 Fuse holder -SB-, as of November, 2004:	944-945
1.3 Relay holder fuses	946-948
1.3.1 Specific door window control fuse -S37-:	946-947
1.3.2 Heating resistance fuses	948
807 - -Fitting Locations (Europe): Relays - 3	949-951
1. Fox Europe	949-951
1.1 Relay to the left, behind the dashboard	949-951
1.1.1 Relay description:	949-951
808 - -Fitting Locations (Europe): Control Units - 3	952-983
1. Fox Europe	952-983
1.1 ABS control unit (vehicles with left-hand side steering wheel) - J104 -	954-955
1.1.2 Connector description:	954-955
1.2 ABS control unit (vehicles with right-hand side steering wheel) - J104 -	956-957
1.2.2 Connector description:	956-957
1.3 Driver seat heating control unit - J131 -	958-959
1.3.2 Connector description:	958-959
1.4 Heated front passenger seat control unit - J132 -	960-961
1.4.2 Connector description:	960-961
1.5 Heater control unit - J162 -	962-963
1.5.2 Connector description:	962-963
1.6 Airbag control unit - J234 -	964-965
1.6.2 Connector description:	964-965
1.7 Sliding sunroof adjustment control unit - J245 -	966-967
1.7.2 Connector description:	966-967
1.8 Control unit in dash panel insert - J285 -	968-969
1.8.2 Connector description:	968-969
1.9 Radiator fan control unit - J293 -	970-971
1.9.2 Connector description:	970-971
1.10 Air conditioning system control unit - J301 -	972-973
1.10.2 Connector description:	972-973
1.11 Convenience system central control unit - J393 -	974-975
1.11.2 Connector description:	974-975
1.12 Power steering control unit - J500 -	976-977
1.12.2 Connector description:	976-977
1.13 Onboard supply control unit - J519 -	978-979
1.13.2 Connector description:	978-979
1.14 Engine control unit (80-pin) - J623 -	980-981
1.14.2 Connector description:	980-981
1.15 Engine control unit (121-pin) - J623 -	982-983
1.15.2 Connector description:	982-983