

001 - Basic equipment	1-18
1. Basic equipment	1
2. Battery, Starter, Alternator, Voltage regulator	2
3. Ignition/starter switch, X-contact relief relay	3
4. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 39 on fuse holder B	4
5. Fuse 31 on fuse holder B, Fuse 32 on fuse holder B, Fuse 33 on fuse holder B, Fuse 42 on fuse holder B, Fuse 43 on fuse holder B, Fuse 48 on fuse holder B	5
6. Reversing light switch	6
7. Socket illumination bulb, 12 V socket 2	7
8. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	8
9. Fuel gauge sender, Fuel system pressurisation pump, Headlight main beam relay, Dipped beam relay	9
10. Hazard warning light switch, Hazard warning light relay, Indicator lamp for hazard warning light, Socket illumination bulb, 12 V socket, Number plate light	10
11. Driver door contact switch, Front passenger door contact switch, Handbrake warning switch, Brake fluid level warning contact, Front interior light, Glove compartment light	11
12. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	12
13. Brake light switch, Brake pedal switch, Fresh air blower and radiator fan relay, Additional brake light bulb, Radiator fan, Heated rear window	13
14. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	14
15. Airbag coil connector and return ring with slip ring, Horn plate, Horn or dual tone horn, Dual tone horn relay	15
16. Fresh air blower switch, Fresh air blower series resistor with overheating fuse, Fresh air blower	16
17. Immobiliser reader coil, Oil pressure switch, Fuel gauge, Multifunction indicator, Immobiliser control unit, Dash panel insert, Left turn signal warning lamp, Right turn signal warning lamp, Immobiliser warning lamp, Electronic power control fault lamp	17
18. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Reserve fuel warning lamp, Brake system warning lamp	18
002 - Convenience system	19-39
1. Convenience system	19
2. Battery, Starter, Alternator, Voltage regulator	20
3. Ignition/starter switch, X-contact relief relay	21
4. Convenience system central control unit, Driver side window regulator motor, Front passenger side window regulator motor	22
5. Driver door power latching system contact switch, Convenience system central control unit, Rear left window regulator motor, Rear right window regulator motor, Driver door power latching motor	23
6. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Driver side interior locking switch, Convenience system central control unit	24
7. Rear window regulator isolation switch, Mirror adjustment changeover switch, Convenience system central control unit	25
8. Window regulator switch in front passenger door, Convenience system central control unit, Window regulator switch illumination bulb, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2	26
9. Convenience system central control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2	27
10. Convenience system central control unit, Front passenger door power latching motor, Rear left power latching motor, Rear right power latching motor	28
11. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Convenience system central control unit, Window regulator switch illumination bulb	29
12. Spare wheel release button, Convenience system central control unit	30
13. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Convenience system central control unit, Front interior light, Luggage compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	31
14. Spare wheel release switch, Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Convenience system central control unit, Rear left reading light, Rear right reading light	32
15. Spare wheel release enable button, Anti-theft alarm and vermin repellent system contact switch, Open display limit switch, Horn or dual tone horn, Convenience system central control unit, Window regulator single fuse, Spare wheel lock motor	33
16. Slidina sunroof adjustment reaulator. Slidina sunroof adiustment control unit. Convenience	34

system central control unit, Sliding sunroof motor	
17. Left ultrasonic sensor for anti-theft alarm system, Right ultrasonic sensor for anti-theft alarm system, Anti-theft alarm ultrasonic sensor, Convenience system central control unit	35
18. Convenience system central control unit	36
19. Anti-dazzle interior mirror button, Reversing light switch, Anti-dazzle interior mirror warning lamp, Automatic anti-dazzle interior mirror	37
20. Rear lid release switch, Rear lid contact switch, Rear lid central locking motor	38
21. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Alarm system warning lamp	39
003 - 1.0l engine , CCNA	40-58
1. 1.0l engine , CCNA	40
2. Battery, Starter, Alternator, Voltage regulator	41
3. Ignition/starter switch	42
4. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 30 on fuse holder B, Fuse 37 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B	43
5. Fuse 26 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 42 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	44
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Voltage supply relay 1	45
7. Ambient temperature sensor, Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel pump for cold start	46
8. Fresh air blower and radiator fan relay, Engine control unit	47
9. Cold start device relay, Radiator fan 2nd speed relay, Engine control unit, Cold start valve, Activated charcoal filter solenoid valve 1	48
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine control unit	49
11. Engine control unit, Radiator fan series resistor, Radiator fan	50
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	51
13. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	52
14. Coolant temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	53
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	54
16. Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	55
17. Handbrake warning switch, Brake fluid level warning contact	56
18. Oil pressure switch, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Reserve fuel warning lamp, Immobiliser warning lamp, Brake system warning lamp, Malfunction warning lamp	57
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert	58
004 - Air conditioning system , CCNA,CCRA,CFZA	59-69
1. Air conditioning system , CCNA,CCRA,CFZA	59
2. Battery, Starter, Alternator, Voltage regulator	60
3. Ignition/starter switch, X-contact relief relay	61
4. Air conditioning system control unit, Fresh air and air recirculation flap control motor	62
5. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	63
6. Air conditioning system control unit, Fresh air and air recirculation flap control motor	64
7. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	65
8. High-pressure sender, Air conditioning system switch-off relay, Air conditioning system magnetic clutch	66
9. Radiator fan 2nd speed relay, Fresh air blower and radiator fan relay, Radiator fan series resistor, Radiator fan	67
10. Fuse 2 on fuse holder C, Fuse 15 on fuse holder C, Fuse 16 on fuse holder C, Fuse 28 on fuse holder B, Fuse 38 on fuse holder B, Fuse 42 on fuse holder B	68
11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	69
005 - Airbag systems	70-75
1. Airbag systems	70
2. Battery, Starter, Alternator, Voltage regulator	71
3. Ignition/starter switch, X-contact relief relay	72
4. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag initiator. Front passenger side airbag initiator 1	73

5. Belt tensioner switch 1, Belt tensioner switch 2, Airbag control unit	74
6. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp	75
006 - Interactive system	76-82
1. Interactive system	76
2. Battery, Starter, Alternator, Voltage regulator	77
3. Ignition/starter switch, X-contact relief relay	78
4. Multifunction display call-up button, Heated rear window button, Ambient temperature sensor, Control unit for interactive system	79
5. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	80
6. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction indicator, Control unit in dash panel insert, Dash panel insert	81
7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	82
007 - 1.6l engine , CCRA	83-101
1. 1.6l engine , CCRA	83
2. Battery, Starter, Alternator, Voltage regulator	84
3. Ignition/starter switch	85
4. Fuse 26 on fuse holder B, Fuse 30 on fuse holder B, Fuse 37 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B, Fuse 42 on fuse holder B	86
5. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	87
6. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	88
7. Ambient temperature sensor, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Fuel pump for cold start	89
8. Fresh air blower and radiator fan relay, Engine/motor control unit	90
9. Cold start device relay, Radiator fan 2nd speed relay, Engine/motor control unit, Cold start valve, Activated charcoal filter solenoid valve 1	91
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine/motor control unit	92
11. Engine/motor control unit, Radiator fan series resistor, Radiator fan	93
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	94
13. Speedometer sender, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	95
14. Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	96
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine/motor control unit	97
16. Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	98
17. Handbrake warning switch, Brake fluid level warning contact	99
18. Oil pressure switch, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp, Electronic power control fault lamp	100
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert	101
008 - Coming home/leaving home function without rain sensor	102-118
1. Coming home/leaving home function without rain sensor	102
2. Battery, Starter, Alternator, Voltage regulator	103
3. Ignition/starter switch, X-contact relief relay	104
4. Light switch, Turn signal switch, Headlight dipper and flasher switch, Control unit for lighting and wiper functions	105
5. Control unit for lighting and wiper functions, Number plate light	106
6. Fog light relay, Headlight main beam relay, Dipped beam relay	107
7. Fuse 1 on fuse holder C, Fuse 2 on fuse holder C, Fuse 3 on fuse holder C, Fuse 7 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C	108
8. Fuse 31 on fuse holder B, Fuse 32 on fuse holder B, Fuse 35 on fuse holder B, Fuse 43 on fuse holder B	109
9. Reversing light switch	110
10. Intermittent wiper switch, Rear wiper switch, Windscreen and rear window washer pump	111
11. Automatic intermittent wash and wipe relay, Windscreen wiper motor	112
12. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	113

13. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	114
14. Left fog light bulb, Right fog light bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	115
15. Brake light switch, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	116
16. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	117
17. Front and rear fog light switch, Speedometer, High-pressure sender, Control unit in dash panel insert, Dash panel insert, Front and rear fog light switch illumination bulb	118
009 - Automated manual gearbox , CCRA,CFZA	119-131
1. Automated manual gearbox , CCRA,CFZA	119
2. Battery, Starter, Alternator, Voltage regulator	120
3. Ignition/starter switch, X-contact relief relay	121
4. Automatic gearbox control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	122
5. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automatic gearbox control unit	123
6. Brake light switch, Brake pedal switch, Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automatic gearbox control unit	124
7. Driver door contact switch, Automatic gearbox control unit, Gearbox hydraulic pump relay, Selector lever sensors control unit, Hydraulic pump for gearbox	125
8. Handbrake warning switch, Brake fluid level warning contact, Automatic gearbox control unit	126
9. Starter motor relay, X contact relief relay 2, Starter motor relay 2	127
10. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	128
11. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	129
12. Fuse 2 on fuse holder C, Fuse 9 on fuse holder C, Fuse 13 on fuse holder C, Fuse 19 on fuse holder C, Fuse 21 on fuse holder C, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B, Fuse 48 on fuse holder B	130
13. Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	131
010 - Dual headlight	132-143
1. Dual headlight	132
2. Battery, Starter, Alternator, Voltage regulator	133
3. Ignition/starter switch	134
4. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	135
5. Headlight main beam relay, Dipped beam relay	136
6. Hazard warning light switch, Hazard warning light relay, Indicator lamp for hazard warning light	137
7. X-contact relief relay, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	138
8. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	139
9. Brake light switch, Reversing light switch, Brake pedal switch, Additional brake light bulb	140
10. Fuse 31 on fuse holder B, Fuse 35 on fuse holder B, Fuse 36 on fuse holder B, Fuse 40 on fuse holder B, Fuse 46 on fuse holder B, Fuse 47 on fuse holder B	141
11. Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp	142
12. Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	143
011 - Parking aid (PDC)	144-150
1. Parking aid (PDC)	144
2. Battery, Starter, Alternator, Voltage regulator	145
3. Ignition/starter switch, X-contact relief relay	146
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	147
5. Reversing light switch, Parking aid control unit	148
6. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	149
7. Control unit in dash panel insert, Dash panel insert	150
012 - Window wash/wipe system and heated rear window	151-158

1. Window wash/wipe system and heated rear window	151
2. Battery, Starter, Alternator, Voltage regulator	152
3. Ignition/starter switch, X-contact relief relay	153
4. Intermittent wiper switch, Rear wiper switch, Automatic intermittent wash and wipe relay	154
5. Windscreen wiper motor, Heated rear window	155
6. Rear window wiper motor, Windscreen and rear window washer pump	156
7. Intermittent wiper regulator, Multifunction display call-up button, Heated rear window button	157
8. Rev. counter, Speedometer, Heated rear window control relay, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Heated rear window warning lamp	158
013 - Radio	159-168
1. Radio	159
2. Battery, Starter, Alternator, Voltage regulator	160
3. Ignition/starter switch, X-contact relief relay	161
4. Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	162
5. Radio, Aerial, Rear left bass loudspeaker, Rear right bass loudspeaker, Aerial amplifier	163
6. Radio	164
7. Radio	165
8. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	166
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	167
10. Control unit in dash panel insert, Dash panel insert	168
014 - Anti-lock brake system (ABS)	169-177
1. Anti-lock brake system (ABS)	169
2. Battery, Starter, Alternator, Voltage regulator	170
3. Ignition/starter switch, X-contact relief relay	171
4. Fuse 2 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B	172
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay, Front right ABS inlet valve, Front right ABS outlet valve, ABS return flow pump	173
6. ABS control unit, Front left ABS inlet valve, Front left ABS outlet valve	174
7. Brake light switch, Brake pedal switch, ABS control unit, ABS solenoid valve relay, Rear right ABS inlet valve, Rear left ABS inlet valve	175
8. ABS control unit, Rear right ABS outlet valve, Rear left ABS outlet valve	176
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp	177
015 - Fog light	178-187
1. Fog light	178
2. Battery, Starter, Alternator, Voltage regulator	179
3. Ignition/starter switch	180
4. Fuse 1 on fuse holder C, Fuse 3 on fuse holder C, Fuse 7 on fuse holder C, Fuse 17 on fuse holder C, Fuse 32 on fuse holder B, Fuse 38 on fuse holder B	181
5. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	182
6. Front and rear fog light switch, Front and rear fog light switch illumination bulb	183
7. Fog light relay, X-contact relief relay	184
8. Rear fog light bulb, Left fog light bulb, Right fog light bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	185
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Right turn signal warning lamp	186
10. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp	187
016 - Multifunction steering wheel	188-195
1. Multifunction steering wheel	188
2. Battery, Starter, Alternator, Voltage regulator	189
3. Ignition/starter switch, X-contact relief relay	190
4. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Driver side airbag igniter	191
5. Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	192
6. Horn or dual tone horn, Dual tone horn relay	193
7. Fuse 2 on fuse holder C, Fuse 6 on fuse holder C, Fuse 21 on fuse holder C	194
8. Rev. counter. Speedometer. Multifunction indicator. Control unit in dash panel insert. Dash panel	195

insert, Alternator warning lamp	
017 - System for lowering passenger side mirror	196-205
1. System for lowering passenger side mirror	196
2. Battery, Starter, Alternator, Voltage regulator	197
3. Ignition/starter switch	198
4. Folding exterior mirror control unit	199
5. Reversing light switch, Folding exterior mirror control unit	200
6. Fuse 2 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 14 on fuse holder C	201
7. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 37 on fuse holder B, Fuse 39 on fuse holder B	202
8. Potentiometer for horizontal adjustment of front passenger side mirror, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor, Front passenger side mirror adjustment motor	203
9. Mirror adjustment changeover switch, Driver side turn signal repeater bulb, Driver side mirror adjustment motor	204
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	205
019 - 1.6l engine , CFZA	206-224
1. 1.6l engine , CFZA	206
2. Battery, Starter, Alternator, Voltage regulator	207
3. Ignition/starter switch	208
4. Fuse 26 on fuse holder B, Fuse 30 on fuse holder B, Fuse 37 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B, Fuse 42 on fuse holder B	209
5. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	210
6. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	211
7. Ambient temperature sensor, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	212
8. Engine/motor control unit, Radiator fan series resistor, Radiator fan	213
9. Radiator fan 2nd speed relay, Engine/motor control unit, Activated charcoal filter solenoid valve 1	214
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine/motor control unit	215
11. Fresh air blower and radiator fan relay, Engine/motor control unit	216
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	217
13. Speedometer sender, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	218
14. Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	219
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine/motor control unit	220
16. Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	221
17. Handbrake warning switch, Brake fluid level warning contact	222
18. Oil pressure switch, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Reserve fuel warning lamp, Immobiliser warning lamp, Brake system warning lamp, Malfunction warning lamp	223
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert	224
020 - Coming home/leaving home function with rain sensor	225-241
1. Coming home/leaving home function with rain sensor	225
2. Battery, Starter, Alternator, Voltage regulator	226
3. Ignition/starter switch, X-contact relief relay	227
4. Rain and light sensor, Control unit for lighting and wiper functions	228
5. Light switch, Turn signal switch, Headlight dipper and flasher switch, Control unit for lighting and wiper functions	229
6. Fog light relay, Control unit for lighting and wiper functions	230
7. Intermittent wiper switch, Rear wiper switch, Automatic intermittent wash and wipe control unit	231
8. Automatic intermittent wash and wipe control unit, Windscreen wiper motor, Windscreen and rear window washer pump	232
9. Fuse 1 on fuse holder C, Fuse 2 on fuse holder C, Fuse 3 on fuse holder C, Fuse 7 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C	233
10. Fuse 31 on fuse holder B, Fuse 35 on fuse holder B, Fuse 43 on fuse holder B, Fuse 46 on fuse holder B	234

11. Reversing light switch	235
12. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	236
13. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	237
14. Left fog light bulb, Right fog light bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	238
15. Brake light switch, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	239
16. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Number plate light	240
17. Front and rear fog light switch, Speedometer, High-pressure sender, Control unit in dash panel insert, Dash panel insert, Front and rear fog light switch illumination bulb	241
021 - Basic equipment	242-259
1. Basic equipment	242
2. Battery, Starter, Alternator, Voltage regulator	243
3. Ignition/starter switch, X-contact relief relay	244
4. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 33 on fuse holder B, Fuse 39 on fuse holder B	245
5. Fuse 31 on fuse holder B, Fuse 32 on fuse holder B, Fuse 42 on fuse holder B, Fuse 43 on fuse holder B, Fuse 48 on fuse holder B	246
6. Reversing light switch	247
7. Socket illumination bulb, 12 V socket 2	248
8. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	249
9. Headlight main beam relay, Dipped beam relay	250
10. Hazard warning light switch, Hazard warning light relay, Indicator lamp for hazard warning light, Socket illumination bulb, 12 V socket, Number plate light	251
11. Driver door contact switch, Front passenger door contact switch, Handbrake warning switch, Brake fluid level warning contact, Front interior light, Glove compartment light	252
12. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	253
13. Brake light switch, Brake pedal switch, Fresh air blower and radiator fan relay, Additional brake light bulb, Radiator fan, Heated rear window	254
14. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	255
15. Airbag coil connector and return ring with slip ring, Horn plate, Horn or dual tone horn, Dual tone horn relay	256
16. Fresh air blower switch, Fresh air blower series resistor with overheating fuse, Fresh air blower	257
17. Immobiliser reader coil, Oil pressure switch, Fuel gauge, Multifunction indicator, Immobiliser control unit, Dash panel insert, Left turn signal warning lamp, Right turn signal warning lamp, Electronic power control fault lamp	258
18. Fuel gauge sender, Coolant temperature gauge, Rev. counter, Fuel system pressurisation pump, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Reserve fuel warning lamp, Brake system warning lamp	259
022 - Coming home/leaving home function without rain sensor	260-276
1. Coming home/leaving home function without rain sensor	260
2. Battery, Starter, Alternator, Voltage regulator	261
3. Ignition/starter switch, X-contact relief relay	262
4. Light switch, Turn signal switch, Headlight dipper and flasher switch, Control unit for lighting and wiper functions	263
5. Control unit for lighting and wiper functions, Number plate light	264
6. Headlight main beam relay, Dipped beam relay	265
7. Fog light relay, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C, Fuse 3 on fuse holder C, Fuse 7 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C	266
8. Fuse 31 on fuse holder B, Fuse 32 on fuse holder B, Fuse 35 on fuse holder B, Fuse 43 on fuse holder B	267
9. Reversing light switch	268
10. Intermittent wiper switch, Rear wiper switch, Windscreen and rear window washer pump	269
11. Automatic intermittent wash and wipe relay, Windscreen wiper motor	270
12. Left side light bulb. Right side light bulb. Front left turn signal bulb. Front right turn	271

signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	
13. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	272
14. Left fog light bulb, Right fog light bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	273
15. Brake light switch, Brake pedal switch, Rear fog light bulb, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	274
16. Immobiliser reader coil, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	275
17. Front and rear fog light switch, Speedometer, High-pressure sender, Control unit in dash panel insert, Dash panel insert, Front and rear fog light switch illumination bulb	276
023 - Basic equipment	277-294
1. Basic equipment	277
2. Battery, Starter, Alternator, Voltage regulator	278
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	279
4. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 39 on fuse holder B	280
5. Fuse 31 on fuse holder B, Fuse 32 on fuse holder B, Fuse 33 on fuse holder B, Fuse 42 on fuse holder B, Fuse 43 on fuse holder B, Fuse 48 on fuse holder B	281
6. Reversing light switch	282
7. Socket illumination bulb, 12 V socket 2	283
8. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	284
9. Fuel gauge sender, Fuel system pressurisation pump, Headlight main beam relay, Dipped beam relay	285
10. Hazard warning light switch, Hazard warning light relay, Indicator lamp for hazard warning light, Socket illumination bulb, 12 V socket, Number plate light	286
11. Driver door contact switch, Front passenger door contact switch, Handbrake warning switch, Brake fluid level warning contact, Front interior light, Glove compartment light	287
12. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	288
13. Brake light switch, Brake pedal switch, Fresh air blower and radiator fan relay, Additional brake light bulb, Radiator fan, Heated rear window	289
14. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	290
15. Airbag coil connector and return ring with slip ring, Horn plate, Horn or dual tone horn, Dual tone horn relay	291
16. Fresh air blower switch, Fresh air blower series resistor with overheating fuse, Fresh air blower	292
17. Immobiliser reader coil, Oil pressure switch, Fuel gauge, Multifunction indicator, Immobiliser control unit, Dash panel insert, Left turn signal warning lamp, Right turn signal warning lamp, Electronic power control fault lamp	293
18. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Reserve fuel warning lamp, Brake system warning lamp	294
024 - Convenience system	295-315
1. Convenience system	295
2. Battery, Starter, Alternator, Voltage regulator	296
3. Ignition/starter switch, X-contact relief relay	297
4. Convenience system central control unit, Driver side window regulator motor, Front passenger side window regulator motor	298
5. Driver door power latching system contact switch, Convenience system central control unit, Rear left window regulator motor, Rear right window regulator motor, Driver door power latching motor	299
6. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Driver side interior locking switch, Convenience system central control unit	300
7. Rear window regulator isolation switch, Mirror adjustment changeover switch, Convenience system central control unit	301
8. Window regulator switch in front passenger door, Convenience system central control unit, Window regulator switch illumination bulb, Driver side turn signal repeater bulb, Driver side mirror adjustment motor	302
9. Convenience system central control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor	303
10. Convenience system central control unit. Front passenger door power latching motor. Rear left	304

power latching motor, Rear right power latching motor	
11. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Convenience system central control unit, Window regulator switch illumination bulb	305
12. Spare wheel release button, Convenience system central control unit	306
13. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Convenience system central control unit, Front interior light, Luggage compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	307
14. Spare wheel release switch, Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Convenience system central control unit, Rear left reading light, Rear right reading light	308
15. Spare wheel release enable button, Anti-theft alarm and vermin repellent system contact switch, Open display limit switch, Horn or dual tone horn, Convenience system central control unit, Spare wheel lock motor	309
16. Sliding sunroof adjustment regulator, Sliding sunroof adjustment control unit, Convenience system central control unit, Sliding sunroof motor	310
17. Left ultrasonic sensor for anti-theft alarm system, Right ultrasonic sensor for anti-theft alarm system, Anti-theft alarm ultrasonic sensor, Convenience system central control unit	311
18. Convenience system central control unit	312
19. Anti-dazzle interior mirror button, Reversing light switch, Anti-dazzle interior mirror warning lamp, Automatic anti-dazzle interior mirror	313
20. Rear lid release switch, Rear lid contact switch, Rear lid central locking motor	314
21. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Alarm system warning lamp	315
025 - 1.0l engine , CCNA	316-334
1. 1.0l engine , CCNA	316
2. Battery, Starter, Alternator, Voltage regulator	317
3. Ignition/starter switch, Terminal 15 relief relay	318
4. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 30 on fuse holder B, Fuse 37 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B	319
5. Fuse 26 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 42 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	320
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Voltage supply relay 1	321
7. Ambient temperature sensor, Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel pump for cold start	322
8. Fresh air blower and radiator fan relay, Engine control unit	323
9. Cold start device relay, Radiator fan 2nd speed relay, Engine control unit, Cold start valve, Activated charcoal filter solenoid valve 1	324
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine control unit	325
11. Engine control unit, Radiator fan series resistor, Radiator fan	326
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	327
13. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	328
14. Coolant temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	329
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	330
16. Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	331
17. Handbrake warning switch, Brake fluid level warning contact	332
18. Oil pressure switch, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp	333
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert	334
026 - 1.6l engine , CCRA	335-353
1. 1.6l engine , CCRA	335
2. Battery, Starter, Alternator, Voltage regulator	336
3. Ignition/starter switch, Terminal 15 relief relay	337
4. Fuse 26 on fuse holder B, Fuse 30 on fuse holder B, Fuse 37 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B, Fuse 42 on fuse holder B	338
5. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	339
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit	340
7. Ambient temperature sensor. Accelerator position sender. Accelerator position sender 2. Engine	341

control unit, Fuel pump for cold start	
8. Fresh air blower and radiator fan relay, Engine control unit	342
9. Cold start device relay, Radiator fan 2nd speed relay, Engine control unit, Cold start valve, Activated charcoal filter solenoid valve 1	343
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine control unit	344
11. Engine control unit, Radiator fan series resistor, Radiator fan	345
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	346
13. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	347
14. Coolant temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	348
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	349
16. Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	350
17. Handbrake warning switch, Brake fluid level warning contact	351
18. Oil pressure switch, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp, Electronic power control fault lamp	352
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert	353
027 - 1.6l engine , CFZA	354-372
1. 1.6l engine , CFZA	354
2. Battery, Starter, Alternator, Voltage regulator	355
3. Ignition/starter switch, Terminal 15 relief relay	356
4. Fuse 26 on fuse holder B, Fuse 30 on fuse holder B, Fuse 37 on fuse holder B, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B, Fuse 42 on fuse holder B	357
5. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	358
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit	359
7. Ambient temperature sensor, Accelerator position sender, Accelerator position sender 2, Engine control unit	360
8. Engine control unit, Radiator fan series resistor, Radiator fan	361
9. Starter motor relay, Radiator fan 2nd speed relay, Engine control unit, Activated charcoal filter solenoid valve 1	362
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel pump relay, Engine control unit	363
11. Fresh air blower and radiator fan relay, Engine control unit	364
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	365
13. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	366
14. Coolant temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	367
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	368
16. Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay	369
17. Handbrake warning switch, Brake fluid level warning contact	370
18. Oil pressure switch, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp	371
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert	372
028 - Air conditioning system	373-383
1. Air conditioning system	373
2. Battery, Starter, Alternator, Voltage regulator	374
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	375
4. Air conditioning system control unit, Fresh air and air recirculation flap control motor	376
5. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	377
6. Air conditioning system control unit, Fresh air and air recirculation flap control motor	378
7. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	379
8. High-pressure sender, Air conditioning system magnetic clutch	380
9. Radiator fan 2nd speed relav. Fresh air blower and radiator fan relav. Radiator fan series	381

resistor, Radiator fan	
10. Fuse 2 on fuse holder C, Fuse 15 on fuse holder C, Fuse 16 on fuse holder C, Fuse 28 on fuse holder B, Fuse 38 on fuse holder B, Fuse 42 on fuse holder B	382
11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	383
029 - Airbag systems	384-389
1. Airbag systems	384
2. Battery, Starter, Alternator, Voltage regulator	385
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	386
4. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	387
5. Belt tensioner switch 1, Belt tensioner switch 2, Airbag control unit	388
6. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp	389
030 - Interactive system	390-396
1. Interactive system	390
2. Battery, Starter, Alternator, Voltage regulator	391
3. Ignition/starter switch, X-contact relief relay	392
4. Multifunction display call-up button, Heated rear window button, Ambient temperature sensor, Control unit for interactive system	393
5. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	394
6. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction indicator, Control unit in dash panel insert, Dash panel insert	395
7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	396
031 - Automated manual gearbox , CCRA,CFZA	397-409
1. Automated manual gearbox , CCRA,CFZA	397
2. Battery, Starter, Alternator, Voltage regulator	398
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	399
4. Driver door contact switch, Automatic gearbox control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	400
5. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automatic gearbox control unit	401
6. Brake light switch, Brake pedal switch, Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automatic gearbox control unit	402
7. Automatic gearbox control unit, Selector lever sensors control unit, Hydraulic pump for gearbox	403
8. Handbrake warning switch, Brake fluid level warning contact, Automatic gearbox control unit	404
9. Starter motor relay, X contact relief relay 2, Starter motor relay 2	405
10. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	406
11. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	407
12. Fuse 2 on fuse holder C, Fuse 9 on fuse holder C, Fuse 13 on fuse holder C, Fuse 19 on fuse holder C, Fuse 21 on fuse holder C, Fuse 38 on fuse holder B, Fuse 40 on fuse holder B, Fuse 48 on fuse holder B	408
13. Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	409
032 - Dual headlight	410-421
1. Dual headlight	410
2. Battery, Starter, Alternator, Voltage regulator	411
3. Ignition/starter switch, Terminal 15 relief relay	412
4. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	413
5.	414
6. Hazard warning light switch, Hazard warning light relay, Indicator lamp for hazard warning light	415
7. X-contact relief relay, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	416
8. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	417
9. Brake light switch, Reversing light switch, Brake pedal switch, Additional brake light bulb	418
10. Fuse 31 on fuse holder B, Fuse 35 on fuse holder B, Fuse 36 on fuse holder B, Fuse 40 on fuse holder B. Fuse 46 on fuse holder B. Fuse 47 on fuse holder B	419

11. Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp	420
12. Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	421
033 - Parking aid (PDC)	422-428
1. Parking aid (PDC)	422
2. Battery, Starter, Alternator, Voltage regulator	423
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	424
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	425
5. Reversing light switch, Parking aid control unit	426
6. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	427
7. Control unit in dash panel insert, Dash panel insert	428
034 - Window wash/wipe system and heated rear window	429-436
1. Window wash/wipe system and heated rear window	429
2. Battery, Starter, Alternator, Voltage regulator	430
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	431
4. Intermittent wiper switch, Rear wiper switch, Automatic intermittent wash and wipe relay	432
5. Windscreen wiper motor, Heated rear window	433
6. Rear window wiper motor, Windscreen and rear window washer pump	434
7. Intermittent wiper regulator, Multifunction display call-up button, Heated rear window button	435
8. Rev. counter, Speedometer, Heated rear window control relay, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Heated rear window warning lamp	436
035 - Radio	437-446
1. Radio	437
2. Battery, Starter, Alternator, Voltage regulator	438
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	439
4. Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	440
5. Radio, Aerial, Rear left bass loudspeaker, Rear right bass loudspeaker, Aerial amplifier	441
6. Radio	442
7. Radio	443
8. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	444
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	445
10. Control unit in dash panel insert, Dash panel insert	446
036 - Anti-lock brake system (ABS)	447-455
1. Anti-lock brake system (ABS)	447
2. Battery, Starter, Alternator, Voltage regulator	448
3. Ignition/starter switch, Terminal 15 relief relay	449
4. X-contact relief relay	450
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay, Front right ABS inlet valve, Front right ABS outlet valve, ABS return flow pump	451
6. ABS control unit, Front left ABS inlet valve, Front left ABS outlet valve	452
7. Brake light switch, Brake pedal switch, ABS control unit, ABS solenoid valve relay, Rear right ABS inlet valve, Rear left ABS inlet valve	453
8. ABS control unit, Rear right ABS outlet valve, Rear left ABS outlet valve	454
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp	455
037 - Fog light	456-465
1. Fog light	456
2. Battery, Starter, Alternator, Voltage regulator	457
3. Ignition/starter switch, Terminal 15 relief relay	458
4. Fuse 1 on fuse holder C, Fuse 3 on fuse holder C, Fuse 7 on fuse holder C, Fuse 17 on fuse holder C, Fuse 32 on fuse holder B, Fuse 38 on fuse holder B	459
5. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	460
6. Front and rear fog light switch, Front and rear fog light switch illumination bulb	461
7. Fog light relay, X-contact relief relay	462
8. Rear fog light bulb, Left fog light bulb, Right fog light bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	463
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Right turn signal warning lamp	464
10. Control unit in dash panel insert. Dash panel insert. Alternator warning lamp. Left turn signal	465

warning lamp	
038 - Multifunction steering wheel	466-473
1. Multifunction steering wheel	466
2. Battery, Starter, Alternator, Voltage regulator	467
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	468
4. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Driver side airbag igniter	469
5. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	470
6. Horn or dual tone horn, Dual tone horn relay	471
7. Fuse 2 on fuse holder C, Fuse 6 on fuse holder C, Fuse 21 on fuse holder C	472
8. Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	473
039 - System for lowering passenger side mirror	474-483
1. System for lowering passenger side mirror	474
2. Battery, Starter, Alternator, Voltage regulator	475
3. Ignition/starter switch, Terminal 15 relief relay	476
4. Folding exterior mirror control unit	477
5. Reversing light switch, Folding exterior mirror control unit	478
6. Fuse 2 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 14 on fuse holder C	479
7. Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 37 on fuse holder B, Fuse 39 on fuse holder B	480
8. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor, Front passenger side mirror adjustment motor	481
9. Mirror adjustment changeover switch, Driver side turn signal repeater bulb, Driver side mirror adjustment motor	482
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	483
040 - Coming home/leaving home function with rain sensor	484-500
1. Coming home/leaving home function with rain sensor	484
2. Battery, Starter, Alternator, Voltage regulator	485
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	486
4. Rain and light sensor, Control unit for lighting and wiper functions	487
5. Light switch, Turn signal switch, Headlight dipper and flasher switch, Control unit for lighting and wiper functions	488
6. Fog light relay, Control unit for lighting and wiper functions	489
7. Intermittent wiper switch, Rear wiper switch, Automatic intermittent wash and wipe control unit	490
8. Automatic intermittent wash and wipe control unit, Windscreen wiper motor, Windscreen and rear window washer pump	491
9. Fuse 1 on fuse holder C, Fuse 2 on fuse holder C, Fuse 3 on fuse holder C, Fuse 7 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C	492
10. Fuse 31 on fuse holder B, Fuse 35 on fuse holder B, Fuse 43 on fuse holder B	493
11. Reversing light switch	494
12. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	495
13. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	496
14. Left fog light bulb, Right fog light bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	497
15. Brake light switch, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	498
16. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Number plate light	499
17. Front and rear fog light switch, Speedometer, High-pressure sender, Control unit in dash panel insert, Dash panel insert, Front and rear fog light switch illumination bulb	500
041 - Coming home/leaving home function without rain sensor	501-517
1. Coming home/leaving home function without rain sensor	501
2. Battery, Starter, Alternator, Voltage regulator	502
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	503
4. Light switch. Turn signal switch. Headlight dipper and flasher switch. Control unit for lighting	504

and wiper functions	
5. Control unit for lighting and wiper functions, Number plate light	505
6. Headlight main beam relay, Dipped beam relay	506
7. Fog light relay	507
8. Fuse 31 on fuse holder B, Fuse 32 on fuse holder B, Fuse 35 on fuse holder B, Fuse 43 on fuse holder B	508
9. Reversing light switch	509
10. Intermittent wiper switch, Rear wiper switch, Windscreen and rear window washer pump	510
11. Automatic intermittent wash and wipe relay, Windscreen wiper motor	511
12. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	512
13. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	513
14. Left fog light bulb, Right fog light bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	514
15. Brake light switch, Brake pedal switch, Rear fog light bulb, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	515
16. Immobiliser reader coil, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	516
17. Front and rear fog light switch, Speedometer, High-pressure sender, Control unit in dash panel insert, Dash panel insert, Front and rear fog light switch illumination bulb	517
042 - 1.0l engine , CPBA	518-532
1. 1.0l engine , CPBA	518
2. Battery, Starter, Alternator, Voltage regulator	519
3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay	520
4. Fuse 2 on fuse holder C, Fuse 23 on fuse holder C, Fuse 28 on fuse holder B, Fuse 30 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 40 on fuse holder B, Fuse 44 on fuse holder B, Fuse 45 on fuse holder B	521
5. Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine control unit	522
6. Lambda probe, Radiator fan 2nd speed relay, Engine control unit	523
7. Brake light switch, Brake pedal switch, High-pressure sender, Engine control unit	524
8. Cold start device relay, Fresh air blower and radiator fan relay, Engine control unit, Voltage supply relay 1, Fuel pump for cold start	525
9. Clutch pedal switch, Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Fuel pump relay, Engine control unit	526
10. Engine speed sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	527
11. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	528
12. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	529
13. Speedometer sender, Engine control unit, Cold start valve, Radiator fan series resistor, Activated charcoal filter solenoid valve 1, Radiator fan	530
14. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Coolant temperature warning lamp (too cold), Malfunction warning lamp, Electronic power control fault lamp	531
15. Handbrake warning switch, Brake fluid level warning contact, Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp	532
801 - Fitting Locations - earth points - 3	533-539
1. Earth points	533-539
1.1 Earth point, in engine compartment	533-535
1.2 Earth points, in interior	536-537
1.3 Earth points in rear part of vehicle	538-539
802 - Fitting Locations Fuses - 3	540-550
1. Fuses	540-550
1.1 Fuse holder battery (S), models with manual gearbox	540-541
1.1.1 Fuse colours:	540
1.1.2 Fuse holder battery (S):	541
1.2 Fuse holder battery (S), models with automatic gearbox	542-543
1.2.1 Fuse colours:	542

1.2.2 Fuse holder battery (S)	543
1.3 Fuse holder SB and SC	544-549
1.3.1 Fuse colours:	544
1.3.2 Fuse holder (SC)	545-546
1.3.3 Fuse holder (SB)	547-549
1.4 Window regulator single fuse, on relay carrier, up to December 2009	550
803 - Fitting Locations Relay - 3	551-554
1. Relay	551-554
1.1 Relay, behind left dash panel	551-552
1.1.1 Designation of relay:	551-552
1.2 Relay above relay carrier	553
1.2.1 Designation of relay:	553
1.3 Relay dash panel on right, behind the glove box -arrow-	554
1.3.1 Designation of relay:	554
804 - Fitting Locations - control units - 3	555-583
1. Control units	555-583
1.1 Control unit with display in dash panel insert -J285- and control unit for interactive system -J879-	556-559
1.1.2 Designation of connector control unit with display in dash panel insert -J285-	556-558
1.1.3 Designation of connector control unit for interactive system -J879 (Veículos com computador de bordo)-	559
1.2 Engine control unit -J623-	560-561
1.2.3 Designation of connector:	560-561
1.3 Automatic gearbox control unit -J217-	562-563
1.3.2 Designation of connector:	562-563
1.4 ABS control unit -J104-	564-565
1.4.2 Designation of connector:	564-565
1.5 Airbag control unit -J234-	566-567
1.5.2 Designation of connector:	566-567
1.6 Air conditioning system control unit -J301-	568-569
1.6.2 Designation of connector:	568-569
1.7 Convenience system central control unit -J393-	570-571
1.7.2 Designation of connector:	570-571
1.8 Parking aid control unit -J446-	572-573
1.8.2 Designation of connector:	572-573
1.9 Control unit for lighting and wiper functions -J917-	574-575
1.9.2 Designation of connector:	574-575
1.10 Sliding sunroof adjustment control unit -J245-	576-577
1.10.2 Designation of connector:	576-577
1.11 Folding exterior mirror control unit -J351-	578-579
1.11.2 Designation of connector:	578-579
1.12 Operating unit in steering wheel -E221-	580-581
1.12.2 Designation of connector:	580-581
1.13 Selector lever sensors control unit -J587-	582-583
1.13.2 Designation of connector:	582-583