



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Battery A - disconnect and connect	2
1.2 Battery A - remove and install	6
1.3 Battery A Console - remove and install	9
1.4 Tightening torques - Battery	10
2 Starter	11
2.1 Starter B - remove and install	11
2.2 Starter B (Manufacturer Valeo) - disassemble and assemble	12
2.3 Starter B (Manufacturer Bosch) - disassemble and assemble	16
2.4 Fox Bluemotion 3-cylinder EA211 engine starter motor - remove and install	27
2.5 Tightening torques - Starter	28
3 Alternator	29
3.1 Generator (Alternator) C - cable fastening (B+)	29
3.2 Generator (Alternator) C - check Poly-V belt	30
3.3 Generator (Alternator) C for 1.0 and 1.6 liter engines - assembly overview	30
3.4 Generator (Alternator) C - replace the Poly-V belt pulley	36
3.5 Voltage regulator C1 (Manufacturer Bosch) - disassemble and assemble	38
3.6 Voltage regulator C1 (Manufacturer Valeo) - disassemble and assemble	39
3.7 Tightening torques - Alternator	41
90 - Gauges, instruments	42
1 Combined instrument	42
1.1 Locating defects and indicating faults	42
1.2 Combined instrument K - replace	43
1.3 Combined instrument K - remove and install	44
1.4 Combined instrument K - description of rear part	46
1.5 Combined instrument K - pin assignment	47
1.6 Combined instrument K - control light symbols	48
2 Service interval indication	50
2.1 Service interval indication - reset to zero	50
3 12 Volt socket	51
3.1 12 volt socket U5 - assembly overview	51
3.2 12 volt socket U5 - remove and install	51
3.3 Electric socket 2 - 12V U18 (Fox/Crossfox) - assembly overview	54
3.4 Electric socket 2 - 12V U18 (Fox/Crossfox) - remove and install	54
3.5 Electric socket 2 - 12V U18 - replace	55
3.6 Electric socket 2 - 12V U18 (Spacefox/Suran - version 1) - assembly overview	57
3.7 Electric socket 2 - 12V U18 (Spacefox/Suran - version 1) - remove and install	57
3.8 Electric socket 2 - 12V U18 (Spacefox/Suran - version 2) - assembly overview	60
3.9 Electric socket 2 - 12V U18 (Spacefox/Suran - version 2) - remove and install	60
3.10 Electric socket 2 - 12V U18 - replace	61
92 - Windscreen wash/wipe system	63
1 Windscreen wiper system	63
1.1 Windscreen wiper system - assembly overview	65
1.2 Windscreen wiper blade (version 1) - remove and install	65
1.3 Windscreen wiper blade (version 2) - remove and install	66
1.4 Windscreen wiper blade and arm set - remove and install	66
1.5 Windscreen wiper mechanism - remove and install	69
1.6 Windscreen wiper motor V - disassemble and assemble	69
1.7 Windscreen wiper blade resting position - adjust	71



1.8	Blade application angle on windscreen - adjust	71
1.9	Rain and light sensor G397 - remove and install	72
2	Windscreen washer system	75
2.1	Windscreen washer system - assembly overview	75
2.2	Reservoir for the windscreen and rear window washer system - remove and install	76
2.3	Windscreen washer pump V5 and/or Rear window washer pump V13 - remove and install	77
2.4	Windscreen washer system spray nozzles - replace	78
2.5	Windscreen washer system spray nozzles - adjust	78
3	Rear window wiper system	80
3.1	Rear window wiper and washer system - assembly overview	80
3.2	Rear window wiper arm - remove and install	81
3.3	Rear window wiper motor V12 - remove and install	82
3.4	Rear window wiper blade resting position - adjust	83
3.5	Rear window wiper blade - remove and install	83
4	Rear window washer system	85
4.1	Rear window washer system - assembly overview	85
4.2	Rear window washer system spray nozzle - replace	86
4.3	Rear window washer system spray nozzle - adjust	87
94	Lights, bulbs, switches - exterior	88
1	Main headlights	88
1.1	Main headlights - assembly overview	88
1.2	Main Headlights - remove and install	90
1.3	Main headlight lamps (single) - replace	90
1.4	Main headlight lamps (twin) - replace	92
2	Fog lights	95
2.1	Fog lights - assembly overview	95
2.2	Fog lights - remove and install	96
2.3	Auxiliary headlights (CrossFox / Space Cross / Suran Cross) - assembly overview	97
2.4	Auxiliary headlights (CrossFox / Space Cross / Suran Cross) - remove and install	98
3	Headlights - check adjustment	101
3.1	Check headlight adjustment (with the new inspection display without 15° adjustment line).	102
3.2	Headlights - adjust	103
4	Side indicator lights	106
4.1	Side indicator lights incorporated to external rear-view mirrors	106
5	Tail lights	107
5.1	Tail lights (Fox/Crossfox) - assembly overview	107
5.2	Tail light (Fox/Crossfox) - remove and install	108
5.3	Tail light lamp support (Fox/Crossfox) - disassemble and assemble	109
5.4	Tail lights (Spacefox/Suran) - assembly overview	109
5.5	Tail light (Spacefox/Suran) - remove and install	110
5.6	Tail light lamp support (Spacefox/Suran) - disassemble and assemble	112
5.7	Centre tail light "rear lid" (Spacefox/Suran) - remove and install	112
5.8	Left rear fog light lamp L46 (Spacefox/Suran) - replace	113
6	Fog lights	114
6.1	Tail fog light (Fox/Crossfox) - remove and install	114
6.2	Tail fog light lamp L20 (Fox/Crossfox) - replace	114
7	License plate light	116
7.1	License plate light (Fox) - remove and install	116
7.2	Number plate light X (Fox) - replace bulb	117
7.3	License plate light (CrossFox) - remove and install	117
7.4	License plate light X (Crossfox) - replace lamp	117
7.5	Number plate light (Spacefox/Suran) - remove and install	118



7.6	License plate light X (Spacefox/Suran) - replace lamp	118
8	Additional brake light	119
8.1	Auxiliary brake light - remove and install	119
9	Switch set	121
9.1	Direction and wiper switches / glasses washer (version 1) - remove and install	121
9.2	Direction and wiper switches / glasses washer (version 2) - remove and install	122
9.3	Connectors pinout in the switch set for turn lights and window wipers/washers	123
10	Steering lock set	124
10.1	Steering lock set - remove and install	124
11	Ignition/starter switch and key cylinder	126
11.1	Key cylinder - remove and install	126
11.2	Ignition/starter switch D - remove and install	128
11.3	Ignition switch D - pinout	128
12	Auxiliary parking system	129
12.1	Locating defects and indicating faults	129
12.2	Auxiliary parking system - assembly general view	130
12.3	Control unit for parking aid J446 - remove and install	131
12.4	Warning buzzer for rear parking aid H15 - remove and install	132
12.5	Parking aid sensor - remove and install	133
96	Lights, bulbs, switches - interior	137
1	Internal lights and switches	137
1.1	Cabin surveillance deactivation switch E267 - remove and install	137
1.2	Dashboard switches - remove and install (version 1)	138
1.3	Dashboard switches (vehicles without radio) - remove and install (version 2)	139
1.4	Dashboard switches (vehicles with radio) - remove and install (version 3)	139
1.5	Light switch E1 - remove and install	140
1.6	Glove compartment light W6	141
2	Front door lights and switches	142
2.1	Door contact switches - remove and install	142
2.2	Front/rear window drive switches and window lock switch - remove and install	143
2.3	Rear-view mirror adjustment switch E43 with Switch for rear-view mirror adjustment E48 - remove and install	144
2.4	Driver side interior locking switch E150 - remove and install	145
3	Lights and switches in luggage compartment	146
3.1	Luggage compartment lighting switch F5 - remove and install	146
3.2	Boot light W3	147
4	Roof lining lights and switches	149
4.1	Internal front light W1	149
4.2	Internal front light W1 with reading light	151
4.3	Internal front light W1 with sun roof	154
4.4	Make-up mirror lighting - remove and install	156
4.5	Rear reading light W11 and/or W12 - remove e install	157
5	Horns	159
5.1	Treble tone horn H2 - assembly overview	159
5.2	Horn plate H	161
6	Immobilizer	162
6.1	Immobilizer control unit J362 - replace	162
6.2	Immobilizer reading coil D2 - remove and install	162
6.3	Ignition key - variable code transponder	162
6.4	Ignition key - adapt to immobilizer	162
6.5	Ignition key - replace battery	162
7	Alarm System	163
7.1	Locating defects and indicating faults	163



7.2	Anti-theft alarm system - activate and deactivate	163
7.3	Ultra-sound sensor for alarm system G209 - remove and install	164
7.4	Alarm system horn H8 - assembly overview	165
97	- Wiring	168
1	Fuse and relay support	168
1.1	Fuse and relay support - remove and install	168
2	Coupling stations and engine compartment bellows lid	169
2.1	Coupling station on A-pillar - assembly overview	169
2.2	Coupling station on B-pillar - assembly overview	170
2.3	Boot cover on engine compartment partition panel - remove and install	170
3	Fuse box	171
3.1	Fuse box - remove and install	171
4	Control units	177
4.1	Central control unit for the convenience system J393	177
4.2	Control unit of lights with windscreen wiper functions J917 (Coming Home/Leaving Home)	178
4.3	Central control unit for window activation J1015 (ZFH)	180
4.4	Control unit for the on-board system J519 (BFM)	180
4.5	Control unit for the on-board system J519 (BCM)	183