



Contents

91 - Radio, telephone, navigation	1
1 Communication Systems	1
1.1 Locating defects and indicating faults	1
2 Radio R	2
2.1 Radio R - "Concept"	2
3 CD Player R89	9
3.1 "CD player" R89 "1 Din MID"	9
3.2 "CD player" R89 "2 Din MID"	16
3.3 Radio R "2 Din"	22
4 Speakers	31
4.1 Front loudspeaker for bass sounds R21 and/or R23 ; Rear loudspeaker for bass sounds R15 and/or R17 - replace	31
4.2 Front treble speaker R20 and/or R22 (front tweeter) - replace	32
5 Multifunction steering wheel	33
5.1 Multifunction steering wheel - general information	33
5.2 Multifunction steering wheel - general assembly overview	33
5.3 Command keys - remove and install	34
5.4 Multifunction steering wheel - adjust	36
6 Antenna system	37
6.1 Antenna R11	37
6.2 Antenna R11 - remove and install	37
6.3 Antenna cable (Fox) - general assembly overview	39
6.4 Antenna cable (Fox) - remove and install	40
6.5 Antenna cable (Crossfox) - general assembly overview	41
6.6 Antenna cable (Crossfox) - remove and install	42
6.7 Antenna cable (Spacefox/Suran) - general assembly overview	43
6.8 Antenna cable (Spacefox/Suran) - remove and install	44
7 Interference suppression measures	46
8 Ambient temperature sensor G17	47
8.1 Ambient temperature sensor G17 (Fox) - general assembly overview	47
8.2 Ambient temperature sensor G17 (Crossfox) - general assembly overview	48
8.3 Ambient temperature sensor G17 (Spacefox/Suran) - general assembly overview	49
8.4 Ambient temperature sensor G17 - remove and install	49
8.5 Ambient temperature sensor G17 - check	50