



Contents

68 - Interior equipment	1
1 Interior rear-view mirror	1
1.1 Interior rear-view mirror - remove and install	1
1.2 Interior rear-view mirror support - fasten	1
1.3 Internal rearview mirror with automatic anti-glare - assembly overview	2
1.4 Internal rearview mirror with automatic anti-glare - assembly overview	4
1.5 Internal rearview mirror with automatic anti-glare - remove and install	4
1.6 Fastening support of mirror with automatic anti-glare (with rain sensor) - install	5
1.7 Internal rearview mirror with automatic anti-glare (with rain sensor) - assembly overview	7
1.8 Internal rear-view mirror with automatic anti-glare (with rain sensor) - remove and install	8
2 Object compartments, covers and lids	9
2.1 centre console - general assembly overview	9
2.2 centre console - remove and install	9
2.3 Object compartment / Cover	12
2.4 Glove box	13
2.5 Center dash panel frame	15
2.6 Airbag compartment cover	22
2.7 Combined instrument trim	22
2.8 Net partition	23
2.9 sun visor	25
3 Roof grab handles	27
3.1 Roof grab handle - remove and install	27
4 Door sill's trims	28
4.1 Door sill's trims (2 doors)	28
4.2 Door sill trims (4 doors)	29
69 - Passenger protection	36
1 Seat belts - general information	36
1.1 Safety measures for belt tensioner	37
1.2 Special seat belt tensioner indications	38
1.3 belt tensioner - check	38
1.4 Storage, transportation and disposal of tensioner units	38
2 Seat belts - check	39
2.1 Check points	39
3 Front safety belts	43
3.1 Front seat belt "2-door" (with pre-tensioner) - assembly overview	43
3.2 Front seat belt "2-door" (with pre-tensioner) - remove and install	44
3.3 Front seat belt "2-door" (without pre-tensioner) - assembly overview	45
3.4 Front seat belt "2-door" (without pre-tensioner) - remove and install	47
3.5 Front seat belt "4-door" (with pre-tensioner) - assembly overview	48
3.6 Front seat belt "4-door" (with pre-tensioner) - remove and install	49
3.7 Front seat belt "4-door" (without pre-tensioner) - assembly overview	50
3.8 Front seat belt "4-door" (without pre-tensioner) - remove and install	51
3.9 Safety belt height regulator (2 and 4 doors) - removal and installation	52
3.10 Fastening point of the front belt - removal and installation	52
3.11 Fastening of the front belt - remove and install	53
4 Rear safety belts	54
4.1 Rear seat belts "without automatic belt retractor" (Fox) - assembly overview	54
4.2 Rear seat belts "without automatic belt retractor" (Fox) - remove and install	54
4.3 Rear seat belts "with automatic belt retractor" (Fox) - assembly overview	55



4.4	Rear seat belts “with automatic belt retractor” (Fox) - remove and install	56
4.5	Rear seat belts “with automatic belt retractor” (Spacefox/Suran) - assembly overview	57
4.6	Rear seat belts “with automatic belt retractor” (Spacefox/Suran) - remove and install	58
4.7	Lower fastening point of the rear belt - removal and installation	58
4.8	Abdominal belt with double fastening (rear seat without longitudinal regulation) - removal and installation	59
4.9	Abdominal belt with double fastening (rear seat with longitudinal regulation) - removal and installation	59
5	Airbag	61
5.1	Installation locations - assembly overview	61
5.2	Safety measures for working with Airbags	62
5.3	Storage, transportation and disposal of Airbag units	64
5.4	Airbag triggers after an accident - replace	64
5.5	Triggering device for driver's airbag N95 - remove and install (version 1)	65
5.6	Triggering device for driver's airbag N95 - remove and install (version 2)	67
5.7	Triggering device for driver's airbag N95 - remove and install (version 3)	69
5.8	Triggering device for driver's airbag N95 - (version 4) - remove and install	72
5.9	Connector of the airbag coil and return spring with sliding ring F138 - remove and install (version 1)	74
5.10	Connector of the airbag coil and return spring with sliding ring F138 - remove and install (version 2)	76
5.11	Triggering device 1 for front passenger's airbag N131 - remove and install	77
5.12	Airbag control unit J234 - remove and install	79
5.13	Components - adapting/verifying	80
70	Trim, insulation	82
1	Dash panel	82
1.1	Tools	82
1.2	Dash panel - remove and install (version 1)	82
1.3	Dash panel - remove and install (version 2)	85
1.4	Cross member/Dash panel - remove and install	88
1.5	Side support for dash panel support - remove and install	92
1.6	Fixed steering column lining - removal and installation (version 1)	93
1.7	Fixed steering column lining - removal and installation (version 2)	94
1.8	Adjustable steering column lining - removal and installation (version 1)	95
1.9	Adjustable steering column lining - removal and installation (version 2)	97
2	Doors' linings (2 doors)	99
2.1	Tools	99
2.2	Front door lining - assembly overview	99
2.3	Front door lining - remove and install	100
3	Doors' linings (4 doors)	102
3.1	Tools	102
3.2	Front door lining - assembly overview	102
3.3	Front door lining - remove and install	103
3.4	Rear door lining - assembly overview	104
3.5	Rear door lining - remove and install	105
3.6	Trim collar - Remove and install	106
4	Lining of columns and sides	108
4.1	Tools	108
4.2	Column A lining - remove and install	108
4.3	Column B lining (2 doors) - removal and installation	109
4.4	Column B linings (4 doors) - assembly overview	110
4.5	Column B lining (4 doors) - removal and installation	111
4.6	Column B lining (4 doors) - removal and installation	112
4.7	C-pillar lining “2 doors” (Fox) - remove and install	113
4.8	C-pillar lining “4 doors” (Fox) - remove and install	113



4.9	C-pillar lining (Spacefox/Suran) - remove and install	114
4.10	D-pillar lining (Spacefox/Suran) - remove and install	115
4.11	Side lining (2 ports) - assembly overview	115
4.12	Side lining (2 doors) - removal and installation	116
5	Linings of the luggage compartment	118
5.1	Tools	118
5.2	Rear lid lining (Fox) - remove and install	119
5.3	Rear lid lining (Spacefox/Suran) - remove and install	119
5.4	Rear lid tail light covers (Spacefox/Suran) - remove and install	120
5.5	Luggage compartment cover (Fox) - remove and install	120
5.6	Luggage compartment cover (Spacefox/Suran) - remove and install	122
5.7	Cross member lower covering (Fox) - remove and install	123
5.8	Rear panel lower covering (Spacefox/Suran) - remove and install	123
5.9	Luggage compartment side lining (Fox) - assembly overview	123
5.10	Luggage compartment side lining (Fox) - remove and install	124
5.11	Luggage compartment side lining (Spacefox/Suran) - assembly overview	125
5.12	Luggage compartment side lining (Spacefox/Suran) - remove and install	126
6	Roof lining (2 ports)	128
6.1	Moulded headliner (Fox) "version 1" - assembly overview	128
6.2	Moulded headliner (Fox) "version 1" - remove and install	129
6.3	Moulded headliner (Fox) "version 2" - assembly overview	130
6.4	Moulded headliner (Fox) "version 2" - remove and install	130
6.5	Moulded headliner (Fox) "sunroof" - assembly overview	131
6.6	Moulded headliner (Fox) "sunroof" - remove and install	132
6.7	Moulded headliner - replace	133
7	Roof lining (4 ports)	135
7.1	Moulded headliner (Fox) "version 1" - assembly overview	135
7.2	Moulded headliner (Fox) "version 1" - remove and install	136
7.3	Moulded headliner (Fox) "version 2" - assembly overview	136
7.4	Moulded headliner (Fox) "version 2" - remove and install	137
7.5	Moulded headliner (Fox) "sunroof" - assembly overview	138
7.6	Moulded headliner (Fox) "sunroof" - remove and install	139
7.7	Moulded headliner (Spacefox/Suran) "version 1" - assembly overview	140
7.8	Moulded headliner (Spacefox/Suran) "version 1" - remove and install	141
7.9	Moulded headliner (Spacefox/Suran) "version 2" - assembly overview	142
7.10	Moulded headliner (Spacefox/Suran) "version 2" - remove and install	143
7.11	Moulded headliner - replace	144
8	Noise insulation	145
8.1	Tools	145
8.2	Assembly overview	145
8.3	Floor lining - remove and install	158
8.4	Handbrake lever cover - assembly overview	159
8.5	Handbrake lever cover - remove and install	160
72	Seat frames	161
1	Front seats	161
1.1	Front seat - remove and install	161
1.2	Front seat cover - assembly overview	163
1.3	Front seat cover (with parallel height regulation) - removal and installation	163
1.4	Fire extinguisher support - remove and install	165
1.5	Front seat head restraint - assembly overview	165
1.6	Front seat backrest - removal and installation	166
1.7	Parallel height adjustment - removal and installation	167
1.8	Backrest release mechanism cable - assembly overview	167
1.9	Backrest release mechanism cable - remove and install	168



1.10	Front seat head restraint guide - remove and install	170
1.11	Folding table - remove and install	171
1.12	Object holder under the driver's seat - removal and installation	171
2	Rear seats	173
2.1	Back seat - remove and install	173
2.2	Rear seat (one-piece, without longitudinal adjustment - version 1 - general overview of assembly	173
2.3	Rear seat (one-piece, without longitudinal adjustment - version 2 - general overview of assembly	175
2.4	Backing (one-piece, without longitudinal adjustment - version 1) - remove and install	175
2.5	Backing (one-piece, without longitudinal adjustment - version 2) - remove and install	176
2.6	Rear seat (one-piece, with longitudinal adjustment) - assembly overview	177
2.7	Backing (one-piece, with longitudinal adjustment) - removal and installation	178
2.8	Rear seat (two-piece, with longitudinal adjustment) - assembly overview	180
2.9	Backing (two-piece) - removal and installation	180
2.10	Seat rail - removal and installation	181
2.11	seat backrest stop (without longitudinal adjustment) - assembly overview	182
2.12	seat backrest stop (without longitudinal adjustment) - removal and installation	183
2.13	Back seat head rest - assembly overview	184
2.14	Rear seat head restraint - remove and install	185
2.15	Rear seat head restraint guide - remove and install	185
2.16	Rear seat backrest unlocking button - remove and install	187
74	Seat - padding, covers	188
1	Front seats lining and padding	188
1.1	Tools	188
1.2	Front seat backrest lining and padding - remove and install	188
1.3	Front backrest lining and padding - assembly overview	190
1.4	Front seat backrest lining and padding - remove and install	191
1.5	Front seat head restraint lining and padding - remove and install	193
2	Rear seat linings and paddings	194
2.1	Tools	194
2.2	Lining and padding of back seat (without longitudinal adjustment) - assembly overview	194
2.3	Lining and padding of back seat (without longitudinal adjustment) - removal and installation	195
2.4	Lining and padding of back seat (with longitudinal adjustment) - assembly overview	196
2.5	Lining and padding of back seat (with longitudinal adjustment) - removal and installation	198
2.6	Rear seat (bench) backrest lining and padding- assembly overview	198
2.7	Rear seat (bench) backrest lining and padding - remove and install	199
2.8	Rear seat (split) backrest lining and padding - assembly overview	201
2.9	Rear seat (split) backrest lining and padding - remove and install	202