



Contents

50 - Body - front	1
1 Body - front end	1
1.1 Front end with complementary parts - assembly overview	1
1.2 Front end with complementary parts - remove and install	2
1.3 Front end - service position	3
1.4 Front wing - assembly overview	4
2 Bulkhead	7
2.1 Tools	7
2.2 Auxiliary materials for Brazilian market	7
2.3 Auxiliary materials for export market	8
2.4 Matching table	8
2.5 Engine compartment partition panel - assembly overview	9
2.6 Minimum adhesive drying time	9
3 Engine compartment upper partition panel	10
3.1 Engine compartment upper partition panel - assembly overview	10
55 - Bonnet, rear lid	11
1 Bonnet	11
1.1 Bonnet - assembly overview	11
1.2 Operating cable - assembly overview	12
1.3 Operating cable - remove and install	13
1.4 Front bonnet latch and stop - assembly overview	13
1.5 Bonnet - adjust	14
1.6 Bonnet latch - remove and install	15
1.7 Bonnet hinge - remove and install	16
1.8 Bonnet striker - remove and install	17
2 Rear lid (Fox)	19
2.1 Rear lid - assembly overview	19
2.2 Rear door shock absorber - remove and install	21
2.3 Rear door shock absorber - replace	21
2.4 Rear lid trim - remove and install	21
2.5 Rear lid - remove and install	23
2.6 Rear lid hinge - remove and install	23
2.7 Rear lid - adjust	24
2.8 Rear lid lock - remove and install	25
2.9 Rear lid unlocking motor V139 - remove and install	26
2.10 Latch cylinder - assembly overview	28
2.11 Latch cylinder - remove and install	29
2.12 Latch cylinder - disassemble	29
3 Rear lid (Spacefox / Suran)	30
3.1 Rear lid - assembly overview	30
3.2 Rear door shock absorber - remove and install	31
3.3 Rear door shock absorber - replace	32
3.4 Rear lid trim - remove and install	32
3.5 Rear lid - remove and install	32
3.6 Rear lid hinge - remove and install	33
3.7 Rear lid - adjust	34
3.8 Rear lid lock - remove and install	34
3.9 Rear lid unlocking motor V139 (version 1) - remove and install	34
3.10 Rear lid unlocking motor V139 (version 2) - remove and install	35
3.11 Lock cylinder - assembly overview	35
3.12 Latch cylinder - remove and install	36



3.13	Latch cylinder - disassemble	37
3.14	Bonnet latch handle - remove and install	37
3.15	Fastening of the rear license plate - install	38
4	Fuel reservoir nozzle compartment and lid set	39
4.1	Fuel tank nozzle compartment and lid set - remove and install	39
57	Front doors, door components, central locking	40
1	Front door	40
1.1	Front door - assembly overview	40
1.2	Front door - remove and install	41
1.3	Front door - adjust	42
1.4	Front door - disassemble and assemble	44
1.5	Front door - replace	44
1.6	Door arrester - adjust	45
1.7	Door limiter - remove and install	45
1.8	Front door external handle and lock - Assembly overview	46
1.9	Lock cylinder housing - remove and install	48
1.10	Cylinder housing - disassemble and assemble	49
1.11	Cylinders and keys (Specific information for Brazil) - request	51
1.12	External door handle - remove and install	51
1.13	External door handle - replace	52
1.14	Door lock - remove and install	53
1.15	Lock button (locking rod) - remove and install	54
1.16	Lock Bowden cable - replace	55
1.17	Door sealing membrane - remove and install	55
1.18	Door sealing packings - Assembly overview	57
1.19	External door packing - remove and install	59
1.20	Internal door trim - remove and install	60
1.21	Cylinders and keys (Specific information for Brazil) - request	61
2	Central locking	62
2.1	Central locking installation location overview - 2-door Fox	62
2.2	Central locking installation location overview - 4-door Fox	63
2.3	Central locking - Spacefox / Suran - assembly locations overview	65
2.4	Central control unit for convenience system J393 / Central control unit for glass command J1015 - remove	67
2.5	Battery of key with radio remote command (articulated) - assembly overview	67
2.6	Battery of key with radio remote command (articulated) - remove and install	68
2.7	Adapting the-remote command keys by radio to the convenience system central control unit J393 ► 2013	69
2.8	Key - synchronize	71
58	Rear doors, door components	72
1	Rear passenger doors	72
1.1	Rear passenger doors - assembly overview	72
1.2	Rear passenger door - remove and install	73
1.3	Rear passenger door - adjust	74
1.4	Rear passenger door - disassemble and assemble	76
1.5	Rear door - replace	76
1.6	Door arrester - adjust	76
1.7	Door limiter - remove and install	77
1.8	Rear door external handle and lock - assembly overview	78
1.9	Cylinder housing without lock cylinder - remove and install	79
1.10	External door handle - remove and install	80
1.11	External door handle - replace	81
1.12	Rear door lock - remove and install	82
1.13	Lock Bowden cable - replace	84



1.14	Lock button (locking rod) - remove and install	84
1.15	Door sealing membrane - remove and install	85
1.16	Door sealing packings - assembly overview	87
1.17	External door packing - remove and install	88
1.18	Internal door trim - remove and install	90
60	- Sunroof	92
1	Sliding / tilting sunroof (Fox)	92
1.1	Operation	92
1.2	Sliding/tilting sunroof with glass lid - assembly overview	92
1.3	Sliding/tilting sunroof glass lid - remove	94
1.4	Glass lid for sliding/tilting sunroof - install	94
1.5	Glass lid for sliding/tilting sunroof (height adjustment) - adjust	95
1.6	Lid trim - replace	96
1.7	Air deflector - remove and install	97
1.8	Sunroof lining - remove and install	97
1.9	Sliding sunroof movement control unit J245 - remove and install	98
1.10	Sliding/tilting sunroof selector key - remove and install	99
1.11	Sliding sunroof activation motor V1 - remove and install	99
1.12	Sliding sunroof motor V1 (zero position) - adjust	100
1.13	Sliding sunroof activation motor V1 - program	100
1.14	Parallelism - check	101
1.15	Parallelism - adjust	101
1.16	Sliding guide - remove and install	102
1.17	Sunroof - remove and install	102
1.18	Guide with steel cable - remove and install	103
1.19	Drain hoses - clean	104
63	- Bumpers	106
1	Front bumper	106
1.1	Front protector - assembly overview	106
1.2	Front bumper protector - remove and install	106
1.3	Front protector support - assembly overview	107
1.4	Fastening of the front license number holder - install	108
2	Rear bumper (Fox / Crossfox)	110
2.1	Rear protector - assembly overview	110
2.2	Rear protector (Crossfox) - assembly overview	111
2.3	Rear protector (Fox) - remove and install	111
2.4	Rear protector (Crossfox) - remove and install	112
2.5	Rear protector support (Fox) - remove and install	113
2.6	Rear protector support (Crossfox) - remove and install	114
2.7	Fastening of the rear license plate - install	116
3	Rear bumper (Spacefox / Suran)	118
3.1	Rear bumper - assembly overview	118
3.2	Rear protector - remove and install	119
3.3	Rear bumper (Space Cross / Suran Cross) - assembly overview	119
3.4	Rear protector (Space Cross / Suran Cross) - remove and install	121
3.5	Rear protector support - assembly overview	121
64	- Glazing	123
1	Glasses glued with adhesive	123
1.1	Tools	123
1.2	Auxiliary materials for Brazilian market	124
1.3	Auxiliary materials for export market	125
1.4	Matching table	125
1.5	Stickers for engraving the VIS number on the windows (only for Brazil) - supply	126



1.6	Windscreen - Assembly overview	126
1.7	Windscreen - remove and install	127
1.8	Side glasses (Fox - 2-door) - assembly overview	128
1.9	Undamaged side glass (Fox - 2-door) - remove	129
1.10	Damaged side glass (Fox - 2-door) - remove	130
1.11	Side glass internal trim (Fox - 2-door) - install	130
1.12	Side glass (Fox - 2-door) - install	131
1.13	Side glass (Spacefox / Suran) - assembly overview	131
1.14	Undamaged side glass (Spacefox / Suran) - remove	133
1.15	Damaged side glass (Spacefox / Suran) - remove	133
1.16	Side glass (Spacefox / Suran) - install	133
1.17	Rear window (Fox) - assembly overview	134
1.18	Undamaged rear window (Fox) - remove	134
1.19	Damaged rear window (Fox) - remove	135
1.20	Rear window (Fox) - install	136
1.21	Rear glass (Spacefox / Suran) - assembly overview	136
1.22	Undamaged rear glass (Spacefox / Suran) - remove	136
1.23	Damaged rear glass (Spacefox / Suran) - remove	138
1.24	Undamaged glass - prepare for install	139
1.25	New glass - prepare for install	139
1.26	Body flange - prepare to install the window	140
1.27	Assembly instructions	141
1.28	Minimum adhesive drying time	142
1.29	Paint damage - repair	143
1.30	Cleaning in case of resulting adhesive residues	144
1.31	Data stickers	144
2	Door window glass	146
2.1	Front door window glass (2-door) - assembly overview	146
2.2	Front door window glass (4-door) - Assembly overview	147
2.3	Front door window glass - remove and install	147
2.4	Convenience system window drive mechanism (automatic window closing and opening mechanism) with force limiter (anti-crushing function)	148
2.5	Electrical window drive mechanism - remove and install	151
2.6	Window drive motor - remove and install	151
2.7	Front door window winder - remove and install	152
2.8	Front door window channel - remove and install	153
2.9	Front door window internal trim - remove and install	153
2.10	Front door window external trim - replace	153
2.11	Rear door window glass - assembly overview	153
2.12	Rear door window glass - remove and install	155
2.13	Rear door window power activation mechanism - remove and install	155
2.14	Rear door window drive motor - remove and install	156
2.15	Rear door window drive mechanism - remove and install	156
2.16	Door window activation crank - remove and install	157
2.17	Rear door glass rear guide rail - remove and install	158
2.18	Rear door window channel - remove and install	158
2.19	Rear door window internal trim - remove and install	158
2.20	Rear door window external trim - replace	159
2.21	Rear door fixed glass - replace	159
66	Exterior equipment	160
1	Materials used and operational care required	160
1.1	Auxiliary materials for Brazilian market	160
1.2	Auxiliary materials for export market	160
1.3	Matching table	161
1.4	Paint damage - repair	161



1.5	Cleaning in case of dirt residues resulting from handling of polyurethane adhesive (PU) ..	162
1.6	Minimum adhesive drying time	162
2	Spoiler	163
2.1	Roof spoiler (Fox) - Assembly overview	163
2.2	Spoiler (Spacefox / Suran) - remove and install	169
2.3	Assembly overview	170
2.4	Observations for the execution of the removal and installation of the spoiler	171
2.5	Remove	171
2.6	Install	173
3	Roof Rack	177
3.1	Roof rack (Crossfox) - Assembly overview	177
3.2	Roof rack (Crossfox) - remove and install	177
3.3	Roof rack fastening support (Crossfox) - Assembly overview	178
3.4	Roof rack fastening support (Crossfox) - replace	179
3.5	Roof rack (Spacefox / Suran) - remove and install	181
3.6	Roof rack fastening support (Spacefox / Suran) - Assembly overview	185
3.7	Roof rack fastening support (Spacefox / Suran) - replace	185
4	Inscriptions	187
4.1	Volkswagen Badge - replace	187
4.2	Model lettering (Fox) - replace	188
4.3	Version lettering (Fox) - replace	189
4.4	Version lettering (Fox - iMotion) - replace	190
4.5	"Total Flex" badge - replace	190
4.6	Version lettering (Bluemotion) - replace	191
4.7	"Spacefox / Suran" lettering on rear lid - replace	192
4.8	"1.6" lettering on rear lid (Spacefox / Suran) - replace	193
4.9	Version lettering (Spacefox / Suran - Imotion) - replace	194
4.10	Badge "Rock in Rio" (Gol Rock in Rio MY 12 ►) - replace	195
4.11	Badge "Rock in Rio" (Gol Rock in Rio MY 14 ►) - replace	196
4.12	"Brazilian Soccer Team" Badge (Fox Seleção MY 14 ►) - remove and install	198
4.13	"Brazilian Flag" Badge (Fox Seleção MY 14 ►) - remove and install	199
4.14	Model lettering (Fox) - replace	200
4.15	Model lettering (Crossfox) - replace	201
4.16	"Fox-shape" badge on door (Crossfox) - replace	202
4.17	"Silverfox" (Fox BlackFox) lettering on rear lid - replace	203
4.18	"BlackFox" (Fox BlackFox) Badge on rear door - replace	203
4.19	"VW Tag" (Rear window - Fox Seleção MY 14 ►) - remove and install	204
4.20	Side badge (Trend) - replace	205
4.21	Side lettering - "Silverfox", side (Fox Silverfox) - replace	206
4.22	Side badge - BlackFox version (Fox BlackFox) - replace	207
4.23	Side version lettering "ITREND" - replace	208
4.24	Badge of the "Rock in Rio" version on the front bumper (Gol Rock in Rio MY 14 ►) - replace	208
4.25	"CBF" Badge on the front bumper (Fox Seleção MY 14 ►) - remove and install	209
4.26	Decorative strip on the front and rear door (Fox Rock in Rio MY 12 ►) - replace	210
4.27	Decorative strip on the front and rear door (Fox Rock in Rio MY 14 ►) - replace	212
4.28	Decorative strip on the rear door (Fox Rock in Rio MY 12 ►) - replace	213
4.29	Decorative strip on the rear door (Fox Rock in Rio MY 14 ►) - replace	215
4.30	Decorative stripe on bumper rear protector (Fox) - replace	217
4.31	Side badge (Crossfox) - replace	219
4.32	Badge of the "Rock in Rio" version on the ashtray (Gol Rock in Rio MY 14 ►) - replace ..	220
5	Side footboard (Crossfox)	222
5.1	Rear side panel trim (Crossfox and Space Cross / Suran Cross) - replace	222
5.2	Front wing trim (Crossfox and Space Cross / Suran Cross) - replace	224
5.3	Side footboard (CrossFox and Space Cross / Suran Cross)- Assembly overview	225



5.4	Side footboard (CrossFox and Space Cross / Suran Cross) - Assembly overview - continued	225
5.5	Side footboard (Crossfox) - replace	226
5.6	Side footboard rear lining (CrossFox and Space Cross / Suran Cross) - assembly overview	231
5.7	Rear footboard lining (Crossfox and Space Cross / Suran Cross) - replace	231
5.8	Upper footboard lining (Crossfox and Space Cross / Suran Cross) - replace	232
6	External rear-view mirror	233
6.1	External rear-view mirror - assembly overview	233
6.2	Exterior rear-view mirror - remove and install	234
6.3	Mirror covering - remove	234
6.4	Mirror glass - remove and install	235
7	Side trims	236
7.1	Side trims (Fox - 2-door) - replace	236
7.2	Side trims - replace	238
7.3	Side trims (Fox Prime) - replace	240
7.4	Side trims - replace	242
7.5	Door trims (Space Cross / Suran Cross) - Assembly overview	244
7.6	Front door trim (Space Cross / Suran Cross) - replace	246
7.7	Rear door trim (Space Cross / Suran Cross and Crossfox 2013►) - replace	251
8	Front grid	257
8.1	Front bonnet - remove and install	257
8.2	Front grid (Bluemotion) - remove and install	258
8.3	Radiator grille (Crossfox and Space Cross / Suran Cross) - remove and install	261
9	Wheel arch protector	263
9.1	Front wheel arch protector - remove and install	263
9.2	Rear wheel arch protector (Fox) - remove and install	264
9.3	Rear wheel arch protector (Spacefox / Suran) - remove and install	265
10	External linings	266
10.1	Lower windscreen covering - Assembly overview	266
10.2	Windscreen lower trim - remove and install	266
10.3	Floor lower lining - assembly overview	267
10.4	Lower longitudinal member external lining - replace	268
10.5	Pillar and door external lining - replace	269
11	Spoiler grids and bumper protector trims	272
11.1	Front protector grilles - assembly overview	272
11.2	Grilles, front protector trim, spoiler (Crossfox and Space Cross / Suran Cross) - assembly overview	273
11.3	Rear protector trim, spoiler (Crossfox) - assembly overview	275
11.4	Rear protector trim, spoiler (Space Cross / Suran Cross) - assembly overview	276
12	Spare wheel support (CrossFox)	278
12.1	Spare wheel support - remove and install	278
12.2	Spare wheel support internal lining - remove and install	278
12.3	Spare wheel support external lining - remove and install	279
12.4	Knob internal lining - remove and install	280
12.5	Puller external lining - remove and install	281
12.6	Spare wheel support shock absorber - remove and install	282
12.7	Spare wheel support shock absorber - replace	282
12.8	Spare wheel lock motor V340 - remove and install	283
12.9	Spare wheel latch buffer - remove and install	284
12.10	Spare wheel latch buffer - adjust	284
12.11	Spare wheel support latch - remove and install	284
12.12	Spare wheel support latch - adjust	285
12.13	Spare wheel support bearing - remove and install	286
13	Crossfox components	287



13.1	Assembly overview	287
14	Space Cross / Suran Cross components	288
14.1	Assembly overview	288