



Contents

80 - Heating	1
1 Heating - passenger compartment components	1
1.1 Heat exchanger/engine compartment partition panel sealing	3
1.2 Fresh air blower V2	3
1.3 Fresh air blower pre-resistor with overheating cut-out N24	4
1.4 Dust and pollen filter	5
1.5 Air baffles	6
1.6 Footwell air duct	8
1.7 Demister nozzle and air distributor for central baffles	9
1.8 Fresh air intake nozzle	11
1.9 Exhaust valve	13
1.10 Ventilation adjustment mechanisms	14
1.11 Command cables	17
2 Plenum chamber (ventilation and heating) - remove and install	20
2.1 Plenum chamber - remove and install	22
3 Plenum chamber (ventilation and heating) - remove and install	27
3.1 Plenum chamber (ventilation and heating) - general overview of assembly	27
3.2 Air distribution operating mechanism - remove and install	28
3.3 Temperature adjustment mechanism - remove and install	30
3.4 Control motor for fresh air valve and recirculation valve V154 - remove and install	32
4 Heat exchanger - remove and install	33
4.1 Heat exchanger - remove and install	34
5 Plenum chamber (ventilation) - remove and install	37
5.1 Plenum chamber (ventilation) - remove and install	37
6 Plenum chamber (ventilation) - disassemble and assemble	40
6.1 Plenum chamber (ventilation) - general overview of assembly	40
87 - Air conditioning system	42
1 Notes on repairing vehicles with air conditioning system and on handling refrigerant	42
2 Ventilation adjustment mechanism (heating and air conditioning).	43
2.1 Ventilation / air conditioning adjustment mechanism power connectors	43
3 Command cables - remove and install	45
4 Service valves - location	46
5 Air conditioning with manual adjustment	48
5.1 Heating and air conditioning - passenger compartment components	48
5.2 Seals of the engine compartment partition panel	50
6 Plenum chamber (air conditioning) - remove and install	52
6.1 Plenum chamber - remove and install	54
6.2 Evaporator housing - general overview of assembly	61
6.3 Cooling gas loop (engine compartment)	62
6.4 Ambient temperature sensor G17	64
6.5 High pressure sensor G65 - remove and install	64
6.6 High pressure sensor G65 - check	65
6.7 Pressure relief valve in the compressor - check	65
7 Air conditioner compressor support	66
7.1 Air conditioning compressor support for EA111 1.0-litre and 1.6-litre engines - remove and install	67
8 Coolant gas loop	69
8.1 Refrigerant circuit - assembly overview	70
8.2 Air conditioning magnetic clutch N25 manufacturer (Delphi) - repair	75
8.3 Electromagnetic clutch (Delphi compressor) - remove and install	75



8.4	Air conditioner compressor for EA211 1.0-litre engines (Bluemotion) - general assembly overview	79
8.5	Compressor - remove and install	81
8.6	Condenser	85
8.7	Dryer filter	95
8.8	Expansion valve - remove and install	101
8.9	Quick-release coupling - remove and install	104
9	Air conditioning system hoses - remove and install	108
9.1	Air conditioning system low pressure hose - remove and install	108
9.2	Air conditioning system high pressure hose - remove and install	111
9.3	Condenser compressor hose - remove and install	114
10	Filling capacities	117
10.1	R134a refrigerant gas	117
10.2	Cooling system oil	117