



Contents

00 - Technical data	1
1 Technical data	1
1.1 Front wheel brake - FS II	1
1.2 Rear wheel brake	3
1.3 Specifications	3
45 - Anti-lock brake system	5
1 General information on the anti-lock braking system (ABS)	5
2 Information on repair works on the ABS	6
3 Connect Vehicle diagnostic, testing and information system VAS 5051A /52 and select functions	8
4 Electrical/electronic components and installing locations	9
4.1 ABS Bosch	9
5 Hydraulic unit, servo brake/master cylinder - Bosch ABS assembly overview of assembly	11
5.1 Hydraulic unit connections	13
5.2 Command unit for hydraulic unit - remove and install	14
6 Fault indication via control lights	20
7 ABS system components on the front and rear axles - remove and install	22
7.1 Remove and install the ABS system components from the front axle	22
7.2 Bosch front speed sensor cables - remove and install	23
7.3 ABS system components on the front axle - remove and install	28
8 Rear rotor - remove and install	35
8.1 Removal	35
8.2 Installation	36
46 - Brakes - mechanism	37
1 Front wheel brake disk - repair	37
1.1 FS II Disc brake cylinder - repair	37
1.2 Brake pads, FS II brake calipers - remove and install	38
1.3 FS II brake caliper - remove and install	40
1.4 Brake disc - remove and install	42
1.5 Brake disk (knocking) - check	43
1.6 Brake disc - check	44
2 Rear wheel drum brake - repair	48
2.1 Rear wheel brake - remove and install	48
2.2 Brake drum - repair	50
2.3 Brake shoes - remove and install	51
2.4 Brake shoes (only Saveiro from 2010) - remove and install	55
3 Handbrake - assembly overview	58
3.1 Handbrake lever - remove and install	59
4 Handbrake cable - repair	60
4.1 Handbrake cable - assembly overview	60
4.2 Handbrake cable - remove and install	60
4.3 Handbrake - adjust	63
4.4 Handbrake switch - remove and install	64
5 Brake pedal - assembly overview	66
5.1 Servo brake pedal - separate	66
5.2 Pedal set - remove and install	67
5.3 Brake pedal - remove and install	68
5.4 Brake pedal switch F47 - remove and install	69



47 - Brakes - hydraulics	71
1 FS II front brake caliper - repair	71
1.1 Plunger for front brake caliper - remove and install	72
2 Vehicles without braking power adjustment - assembly overview	74
3 Vehicles without braking power adjustment - general overview of assembly	75
3.1 Braking power adjustment - adjust	76
3.2 Braking power adjustment - check	76
4 Bleed the brake system	78
4.1 Bleed the brake system with the filling and bleeding equipment	78
4.2 Brake system, (vehicles with ABS) - bleed when the tank is empty	79
5 Assembly overview: Brake servo/brake master cylinder	81
5.1 Flexible vacuum tube.	82
6 Brake cylinder - remove and install	83
6.1 Vehicles with/without ABS	83
7 Brake servo - remove and install	85
7.1 Removal	86
7.2 Installation	87
8 Vacuum system - Check	89
8.1 Test instructions	89
8.2 Servo brake vacuum measurement device VAS 6721 - connect	90
8.3 Vacuum generation control	91
8.4 Leak control	91
8.5 Vacuum generation with the manual vacuum pump VAS 6213	93
8.6 Retention valve - check	93