



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Battery A - disconnect and connect	2
1.2 Battery A - remove and install	6
1.3 Battery A console - remove and install	9
1.4 Tightening torques - battery	11
2 Starting motor	12
2.1 Starter B - remove and install	12
2.2 Starter B - (Manufacturer Valeo) - disassemble and assemble	13
2.3 Starter B - (Manufacturer Bosch) - disassemble and assemble	17
2.4 Tightening torques - Starter	30
3 Alternator	31
3.1 Generator (Alternator) C - fastening cable (B+)	31
3.2 Generator (Alternator) C - check Poly-V belt	32
3.3 Generator (Alternator) C engines 1.0l and 1.6l - assembly general view	32
3.4 Generator (Alternator) C engines 1.0l and 1.6l - remove and install	35
3.5 Generator (Alternator) C - replace Poly-V belt pulley	37
3.6 Voltage regulator C1 (Manufacturer Bosch) - disassemble and assemble	39
3.7 Voltage regulator C1 (Manufacturer Valeo) - disassemble and assemble	40
3.8 Tightening torques - Alternator	42
90 - Gauges, instruments	43
1 Combined instrument	43
1.1 Locating defects and indicating faults	43
1.2 Combined instrument K - replace	44
1.3 Combined instrument K - remove and install	46
1.4 Combined instrument K - description of rear part	47
1.5 Combined instrument K - connector pinout	48
1.6 Combined instrument K - control light symbols	49
2 Indication of Service Interval	52
2.1 Reset service interval indicator	52
3 12 Volt socket	53
3.1 12 volt socket U5 - assembly overview	53
3.2 12 volt socket U5 - remove and install	53
3.3 Electric socket 2 - 12V U18 (Saveiro Cross) - assembly overview	56
3.4 Electric socket 2 - 12V U18 (Saveiro Cross) - remove and install	57
3.5 Electric socket 2 - 12V U18 (Saveiro Cross) - replace	58
92 - Windscreen wash/wipe system	61
1 Windscreen wiper system	61
1.1 Windscreen wiper system (version 1) - assembly overview	63
1.2 Windscreen wiper blade (version 1) - remove and install	63
1.3 Windscreen wiper system (version 2) - assembly overview	64
1.4 Windscreen wiper blade (version 2) - remove and install	64
1.5 Windscreen wiper blade and arm set - remove and install	65
1.6 Windscreen wiper mechanism - remove and install	67
1.7 Windscreen wiper motor V - disassemble and assemble	68
1.8 Mount (bushing) for the mechanism support - remove and install	69
1.9 Windscreen wiper blade resting position (version 1) - adjust	70
1.10 Windscreen wiper blade resting position (version 2) - adjust	71
1.11 Blade application angle on windscreen - adjust	71
1.12 Tightening torques - Windscreen wiper system	72



2	Windscreen washer system	73
2.1	Windscreen washer system - assembly overview	73
2.2	Reservoir for the windscreen and rear window washer system - remove and install	74
2.3	Windscreen washer pump V5 and/or Rear window washer pump V13 - remove and install	75
2.4	Windscreen washer system spray nozzles - replace	76
2.5	Windscreen washer system spray nozzles - adjust	76
3	Rear window wiper system	77
3.1	Rear window wiper and washer system - assembly overview	77
3.2	Rear window wiper arm - remove and install	78
3.3	Rear window wiper motor V12 - remove and install	79
3.4	Rear window wiper blade resting position - adjust	79
3.5	Rear window wiper blade - remove and install	80
3.6	Tightening torques - rear window wiper system	80
4	Rear window washer system	81
4.1	Rear window washer system - assembly overview	81
4.2	Rear window washer system spray nozzle - replace	82
4.3	Rear window washer system spray nozzle - adjust	82
94	Lights, bulbs, switches - exterior	84
1	Main headlights	84
1.1	Main headlights - assembly overview	84
1.2	Main Headlights - remove and install	86
1.3	Main headlight lamps (single) - replace	86
1.4	Main headlight lamps (twin) - replace	88
2	Fog lights	90
2.1	Fog lights - remove and install	90
2.2	Auxiliary headlights (Saveiro Cross and Gol Rallye) - assembly overview	92
2.3	Auxiliary headlights (Saveiro Cross and Gol Rallye) - remove and install	92
3	Headlights - check adjustment	95
3.1	Check headlight adjustment (with the new inspection display without 15° adjustment line).	96
3.2	Headlights - adjust	97
4	Side indicator lights	100
4.1	Side indicator lights incorporated to external rear-view mirrors	100
5	Tail lights	101
5.1	Tail lights (Gol) - assembly overview	101
5.2	Tail lights (Voyage) - assembly overview	104
5.3	Tail lights (Saveiro) - assembly overview	106
6	License plate light	109
6.1	License plate light - remove and install	109
6.2	License plate light X - replace the lamp	110
7	Additional brake light	111
7.1	Auxiliary brake light (Gol) - remove and install	111
7.2	Auxiliary brake light (Voyage) - remove and install	112
7.3	Auxiliary brake light (Saveiro) - remove and install	112
8	Switch set	114
8.1	Light switch E1 / Flashing/turn light switch E2 and Windscreen wiper timer switch (intermittent operation) E22 - remove and install	114
8.2	Connectors pinout in the switch set for turn lights and window wipers/washers	115
9	Steering lock set	116
9.1	Steering lock set - remove and install	116
10	Ignition/starter switch and key cylinder	118
10.1	Key cylinder - remove and install	118



10.2	Ignition switch D - remove and install	120
10.3	Ignition switch D - pinout	120
11	Auxiliary parking system	121
11.1	Locating defects and indicating faults	121
11.2	Auxiliary parking system - assembly general view	121
11.3	Control unit for parking aid J446 - remove and install	124
11.4	Warning buzzer for rear parking aid H15 - remove and install	125
11.5	Park Assist steering sensor (Gol) - remove and install	125
11.6	Park Assist steering sensor (Voyage) - remove and install	127
11.7	Park Assist steering sensor (Saveiro) - remove and install	128
96	- Lights, bulbs, switches - interior	131
1	Internal lights and switches	131
1.1	Switches on the center dash panel frame - remove and install	131
1.2	Warning light switch E3 - removal and install	132
1.3	Left front power window drive switch E40 and/or Right front power window drive switch E41 - remove and install	133
1.4	Switch for int. locking, driver side E150	133
1.5	Rear-view mirror adjustment switch E43 with Switch for rear-view mirror adjustment E48 - removal and installation	134
1.6	Front internal lighting switch (door contact) E459 - remove and install	134
1.7	Luggage compartment lighting switch F5 - remove and install	135
1.8	Internal lighting fixture - remove and install	135
1.9	Internal front light W1 - replace	136
1.10	Left centre reading light W39 and/or Right centre reading light W40 - replace	137
1.11	Make-up mirror lighting - remove and install	138
1.12	Make-up mirror lighting lamp L31 - replace	139
1.13	Luggage compartment lighting - remove and install	139
1.14	Luggage Compartment lighting fixture W3 - replace	140
1.15	Internal rear light W43 - remove and install	140
2	Horn	143
2.1	Treble tone horn H2 - remove and install	143
3	Immobilizer	145
3.1	Immobilizer control unit J362 - replace	145
3.2	Immobilizer reading coil D2 - remove and install	145
3.3	Ignition key - variable code transponder	145
3.4	Ignition key - adapt to immobilizer	145
3.5	Ignition key - replace battery	145
4	Alarm System	146
4.1	Locating defects and indicating faults	146
4.2	Anti-theft alarm system - activate and deactivate	146
4.3	Ultra-sound sensor for alarm system G209 - remove and install	147
4.4	Alarm system horn H8 - remove and install	147
97	- Wiring	149
1	Fuse and relay support	149
1.1	Fuse and relay support - remove and install	149
2	Boot cover of engine compartment	150
2.1	Boot cover on engine compartment partition panel - remove and install	150
3	Fuse box	152
3.1	Fuse box - remove and install	152
4	Control units	158
4.1	Central control unit for the convenience system J393	158
4.2	Interactive System control unit J879 - remove and install	158
4.3	Control unit of lights with windscreen wiper functions J917	160



4.4	Control unit for exterior mirror tilt-down J351	161
-----	---	-----