



## Contents

<b>27 - Starter, current supply, CCS</b>	<b>1</b>
<b>1 Battery A</b>	<b>1</b>
1.1 Important information concerning battery A	1
1.2 Battery A types	2
1.3 Warning notes and safety norms	3
1.4 Battery A connection terminals	6
<b>2 Battery A - check</b>	<b>7</b>
2.1 Battery A checking sequence	7
2.2 Check visually	8
2.3 Battery degassing and replacement instructions	9
2.4 Check the Battery A with inspection window	9
2.5 Checking the low-maintenance Battery	11
2.6 Current consumption - test	15
2.7 Check the charge of the Battery A	16
2.8 Charge acceptance test	28
2.9 Check the resting current of the battery	29
2.10 Check Battery A charging	32
2.11 Checking the resting voltage of batteries (unused or stored vehicles)	34
<b>3 Battery A - charging</b>	<b>36</b>
3.1 Cautions when handling Battery A chargers	36
3.2 Battery charger VAS 5095A	38
3.3 Battery charger VAS 5900	43
3.4 Battery charger VAS 5900A	55
3.5 Battery charger VAS 5903	57
3.6 Battery charger VAS 5906	68
3.7 Battery charger VAS 5908	71
3.8 Completely flat batteries	80
3.9 Battery (Delphi) - charging procedure	81
<b>4 Speed regulator (GRA)</b>	<b>85</b>
4.1 Speed regulator (GRA) - activating/deactivating	85
<b>92 - Windscreen wash/wipe system</b>	<b>86</b>
<b>1 Washer hoses - connecting and disconnecting</b>	<b>86</b>
<b>2 Washer hoses - repair</b>	<b>88</b>
2.1 Repairing smooth hoses	88
2.2 Repairing wrinkled hoses	88
<b>94 - Lights, bulbs, switches - exterior</b>	<b>91</b>
<b>1 Adhere to the safety warnings and the application of gas-discharge lamps</b>	<b>91</b>
<b>96 - Lights, bulbs, switches - interior</b>	<b>94</b>
<b>1 12-V socket</b>	<b>94</b>
1.1 12-V socket - remove and install	94
1.2 Socket box light bulb L42 - remove and install	94
<b>2 Lighter U1</b>	<b>95</b>
2.1 General description	95
2.2 Assembly overview	96
2.3 Lighter socket - remove and install	97
2.4 Cigarette lighter light bulb L28 - remove and install	100
<b>97 - Wiring</b>	<b>102</b>
<b>1 Vehicle diagnostic, testing and information system</b>	<b>102</b>



1.1	Vehicle Diagnosis, Measurement and Information System - connect .....	102
<b>2</b>	<b>Harness and connection repairs .....</b>	<b>105</b>
2.1	General notes on repair work on the electrical system of the vehicle .....	105
2.2	Harness repair kits .....	106
2.3	Description of tools .....	108
2.4	Harness repair .....	113
2.5	Fibre optic cable repairs .....	140
2.6	Aerial cable repairs .....	149
2.7	Repairing connector terminals and connectors .....	161
2.8	Unlocking and disassembling the terminals .....	167
<b>3</b>	<b>Electrical contact cleaning set VAS 6410 .....</b>	<b>175</b>
3.1	Use of the Electrical contact cleaning set VAS 6410 .....	175
<b>4</b>	<b>Lambda probe - replace .....</b>	<b>183</b>
4.1	LSF lambda probe (4 poles) - replace .....	183
4.2	LSU lambda probe (6 poles) - replace .....	184
4.3	Versions of the protection tube of unit lambda probes .....	185