



Contents

68 - Interior equipment	1
1 Interior rear-view mirror	1
1.1 Interior rear-view mirror - remove and install	1
1.2 Interior rear-view mirror support - fasten	1
2 Object compartments, covers and lids	3
2.1 Centre console (version 1) - assembly overview	3
2.2 Centre console (version 1) - remove and install	3
2.3 Centre console (version 2) - assembly overview	4
2.4 Centre console (version 2) - remove and install	5
2.5 Centre console (automated transmission) - assembly overview	6
2.6 Centre console (automated transmission) - remove and install	7
2.7 Rear console - assembly overview	8
2.8 Object compartment on B-pillar (Saveiro) - extended cab - assembly overview	10
2.9 B-pillar object compartment (Saveiro) - extended cab - remove and install	11
2.10 Glove box	12
2.11 Coat hook holder (Saveiro) extended cab	15
2.12 Dash panel centre frame - remove and install	17
2.13 Net partition	18
3 sun visor	22
3.1 Sun visor - assembly overview	22
3.2 Sun visor - remove and install	22
4 Roof grab handles	24
4.1 Roof grab handle - remove and install	24
69 - Passenger protection	25
1 Seat belts - general information	25
1.1 Safety measures for belt tensioner	26
1.2 Special seat belt tensioner indications	27
1.3 belt tensioner - check	27
1.4 Storage, transportation and disposal of tensioner units	27
2 Seat belts - check	28
2.1 Check points	28
3 Seat belts	32
3.1 Front Seat belt (Gol/Voyage with belt tensioner) - assembly overview	32
3.2 Seat belt (Gol/Voyage with belt tensioner) - remove and install	33
3.3 Front seat belt (Gol/Voyage) - assembly overview	34
3.4 Front seat belt (Gol/Voyage) - remove and install	35
3.5 Front seat belt (Saveiro) single cab - assembly overview	37
3.6 Front seat belt (Saveiro) - remove and install	38
3.7 Front seat belt (Saveiro) single cab - assembly overview	40
3.8 Front seat belt (Saveiro) extended cab - remove and install	41
3.9 Height adjuster - remove and install	43
3.10 Front seat belt lower fastening point (Gol/Voyage) - remove and install	44
3.11 Front seat belt lower fastening point (Saveiro - single cab) - remove and install	45
3.12 Front seat belt lower fastening point (Saveiro - extended cab) - remove and install	46
3.13 Fastening of the front belt - remove and install	47
3.14 Rear seat belts (Gol) - assembly overview	48
3.15 Rear automatic seat belts (Gol) - remove and install	49
3.16 Rear seat belts without automatic retractor (Gol) - remove and install	51
3.17 Rear seat belts (Voyage) - assembly overview	52
3.18 Rear automatic seat belts (Voyage) - remove and install	53
3.19 Rear seat belts without automatic retractor (Voyage) - remove and install	55



3.20	Lower fastening point of rear seat belt - remove and install	56
3.21	Lap belt with double latch - remove and install	57
4	Airbag	59
4.1	Installation locations - assembly overview	59
4.2	Safety measures for working with Airbags	59
4.3	Storage, transportation and disposal of Airbag units	61
4.4	Airbag triggers after an accident - replace	61
4.5	Ignition device for driver's airbag N95 (multifunction steering wheel) - remove and install	62
4.6	Triggering device for driver's airbag N95 (multifunction steering wheel with radio and I-System commands) - remove and install	64
4.7	Triggering device for driver's airbag N95 (3-spoke steering wheel) - remove and install	66
4.8	Connector of the airbag coil and return spring with sliding ring F138 - remove and install	69
4.9	Triggering device 1 for front passenger's airbag N131 - remove and install	69
4.10	Airbag control unit J234 - remove and install	72
4.11	Components - adapting/verifying	74
70	Trim, insulation	76
1	Dash panel	76
1.1	Dash panel - remove and install	76
1.2	Cross member/Dash panel - remove and install	78
1.3	Side support for dash panel support - remove and install	84
1.4	Steering column covering - remove and install	85
2	Door lining	87
2.1	Front door lining (4-door) - assembly overview	87
2.2	Front door lining (4-door) - remove and install	88
2.3	Front door lining (2-door) - assembly overview	89
2.4	Front door lining (2-door) - remove and install	91
2.5	Rear door lining - assembly overview	92
2.6	Rear door lining - remove and install	94
2.7	Trim collar - Remove and install	96
3	Lining of columns and sides	98
3.1	Column A lining - remove and install	98
3.2	B-pillar upper lining (Gol/Voyage) - assembly overview	98
3.3	B-pillar upper lining (Gol/Voyage) - assembly overview	99
3.4	B-pillar upper lining (Saveiro) extended cab - assembly overview	100
3.5	B-pillar upper lining (Saveiro) extended cab - remove and install	101
3.6	B-pillar lower lining (Gol/Voyage) - assembly overview	102
3.7	B-pillar lower lining (Gol/Voyage) - remove and install	103
3.8	B-pillar lower lining (Saveiro) extended cab - assembly overview	104
3.9	B-pillar lower lining (Saveiro) extended cab - remove and install	105
3.10	B-pillar lower lining (Saveiro) extended cab - assembly overview	106
3.11	B-pillar lower lining (Saveiro) extended cab - remove and install	107
3.12	C-pillar upper lining (Gol) - assembly overview	108
3.13	C-pillar upper lining (Gol) - assembly overview	109
3.14	C-pillar upper lining (Voyage) - assembly overview	113
3.15	C-pillar upper lining (Voyage) - assembly overview	113
3.16	C-pillar lower lining - assembly overview	116
3.17	C-pillar lower lining - remove and install	117
3.18	Cross member upper lining (Saveiro) extended cab - assembly overview	117
3.19	Cross member upper lining (Saveiro) extended cab - remove and install	118
3.20	Cross member lower lining (Saveiro) extended cab - assembly overview	119
3.21	Cross member lower lining (Saveiro) extended cab - remove and install	120
4	Linings of the luggage compartment	121
4.1	Rear lid lining (Gol) - assembly overview	121



4.2	Rear lid lining (Gol) - remove and install	122
4.3	Rear lid lining (Voyage) - assembly overview	123
4.4	Rear lid lining (Voyage) - remove and install	123
4.5	Rear lid lining (Saveiro) - assembly overview	124
4.6	Rear lid lining (Saveiro) - remove and install	125
4.7	Luggage compartment cover (Gol) - remove and install	126
4.8	Luggage compartment cover (Voyage) - assembly overview	128
4.9	Luggage compartment cover (Voyage) - remove and install	128
4.10	Rear panel lining - remove and install	129
4.11	Side luggage compartment lining (Gol) - assembly overview	129
4.12	Luggage compartment side lining (Gol) - remove and install	130
4.13	Luggage compartment side lining (Voyage) - assembly overview	131
4.14	Luggage compartment side lining (Voyage) - remove and install	132
5	Roof lining	134
5.1	Moulded headliner (Gol) - assembly overview	134
5.2	Moulded headliner (Gol) - assembly overview	134
5.3	Moulded headliner (Voyage) - assembly overview	135
5.4	Moulded headliner (Voyage) - remove and install	136
5.5	Moulded headliner (Saveiro) single cab - assembly overview	137
5.6	Moulded headliner (Saveiro) single cab - remove and install	138
5.7	Moulded headliner (Saveiro) extended cab - assembly overview	139
5.8	Moulded headliner (Saveiro) extended cab - remove and install	140
6	Noise insulation	142
6.1	Tools	142
6.2	Assembly overview	142
6.3	Floor covering (Gol/Voyage) - remove and install	154
6.4	Floor covering (Saveiro) single cab - remove and install	156
6.5	Floor covering (Saveiro) extended cab - remove and install	157
72	Seat frames	159
1	Front seats	159
1.1	Front seat - remove and install	159
1.2	Front seat covers- assembly overview	162
1.3	Front seat covers- remove and install	162
1.4	Fire extinguisher support - remove and install	165
1.5	Front seat head restraint - assembly overview	165
1.6	Front seat sliding guides (side) - replace	166
1.7	Front seat sliding guide (centre) - replace	167
1.8	Longitudinal adjustment lever - assembly overview	167
1.9	Front seat backrest (4-door) - remove and install	168
1.10	Front seat backrest (2-door) - remove and install	169
1.11	Backrest release mechanism cable - assembly overview	170
1.12	Backrest release mechanism cable - remove and install	171
1.13	Activation lever - remove and install	171
1.14	Front seat head restraint guide - remove and install	172
2	Rear seats	173
2.1	(Bench) rear seat - remove and install	173
2.2	Rear bench seat (split) - remove and install	174
2.3	Rear seat backrest (bench) - assembly overview	176
2.4	(Bench) back seat backrest - remove and install	177
2.5	Rear seat backrest (split) - assembly overview	178
2.6	Rear seat backrest (split) - remove and install	179
2.7	Rear seat backrest stop (version 1) - assembly overview	180
2.8	Rear seat backrest stop (version 1) - remove and install	181
2.9	Rear seat backrest stop (version 2) - assembly overview	182



2.10	Rear seat backrest stop (version 2) - remove and install	183
2.11	Rear seat head restraint - remove and install	184
2.12	Rear seat head restraint guide - remove and install	184
2.13	Rear seat backrest unlocking button - remove and install	186
74	Seat - padding, covers	187
1	Front seats lining and padding	187
1.1	Front seat lining and padding - assembly overview	187
1.2	Front seat backrest lining and padding - remove and install	187
1.3	Front backrest lining and padding - assembly overview	188
1.4	Front seat backrest lining and padding - remove and install	189
1.5	Front seat head restraint lining and padding - remove and install	190
2	Rear seat linings and paddings	192
2.1	Rear bench seat lining and padding (bench) - assembly overview	192
2.2	Rear bench seat lining and padding (bench) - remove and install	192
2.3	Rear seat lining and padding (split) - assembly overview	193
2.4	Rear seat lining and padding (split) - remove and install	194
2.5	Rear seat (bench) backrest lining and padding- assembly overview	195
2.6	Rear seat (bench) backrest lining and padding - remove and install	196
2.7	Rear seat (split) backrest lining and padding - assembly overview	197
2.8	Rear seat (split) backrest lining and padding - remove and install	198