



Contents

| | |
|---|-----------|
| 50 - Body - front | 1 |
| 1 Body - front section | 1 |
| 1.1 Front end with complementary parts - assembly overview | 1 |
| 1.2 Front end with complementary parts - remove and install | 2 |
| 1.3 Front end - service position | 3 |
| 1.4 Front wing - assembly overview | 4 |
| 1.5 Engine compartment upper partition panel - replacing | 6 |
| 1.6 Spare wheel mechanism - assembly overview | 8 |
| 55 - Bonnet, rear lid | 9 |
| 1 Bonnet | 9 |
| 1.1 Assembly overview | 9 |
| 1.2 Bonnet - remove and install | 10 |
| 1.3 Bonnet - adjust | 10 |
| 1.4 Bonnet hinge - remove and install | 11 |
| 1.5 Bonnet latch operation cable - assembly overview | 12 |
| 1.6 Bonnet latch Bowden cable - remove and install | 13 |
| 1.7 Bonnet upper latch - remove and install | 16 |
| 1.8 Bonnet lower latch - remove and install | 16 |
| 2 Rear lid (Gol) | 17 |
| 2.1 Assembly overview | 17 |
| 2.2 Rear lid shock absorber - remove | 18 |
| 2.3 Rear lid shock absorber - remove the gas | 19 |
| 2.4 Rear lid trim - remove and install | 19 |
| 2.5 Rear lid - remove and install | 19 |
| 2.6 Rear lid hinge - remove and install | 21 |
| 2.7 Rear lid - adjust | 23 |
| 2.8 Housing with latch cylinder - assembly overview | 25 |
| 2.9 Housing with Latch cylinder - remove and install | 26 |
| 2.10 Latch cylinder - remove and install | 28 |
| 2.11 Cylinder - assembly and disassembly | 28 |
| 2.12 Door latch - remove and install | 29 |
| 2.13 Rear lid unlocking motor V139 - remove and install | 31 |
| 3 Rear lid (Voyage) | 32 |
| 3.1 Assembly overview | 32 |
| 3.2 Rear lid trim - remove and install | 33 |
| 3.3 Rear lid - remove and install | 34 |
| 3.4 Rear lid hinge - remove and install | 36 |
| 3.5 Rear lid - adjust | 38 |
| 3.6 Housing with latch cylinder - assembly overview | 40 |
| 3.7 Housing with Latch cylinder - remove and install | 41 |
| 3.8 Latch cylinder - remove and install | 43 |
| 3.9 Latch cylinder - disassemble and assemble | 43 |
| 3.10 Door latch - remove and install | 43 |
| 3.11 Rear lid unlocking motor V139 - remove and install | 44 |
| 4 Tailgate (Saveiro) | 45 |
| 4.1 Tailgate buffer (►CP 122368) - adjust | 45 |
| 4.2 Tailgate buffer (CP 122369 ►) - adjust | 46 |
| 4.3 Tailgate lock (►CP 122368) - remove and install | 47 |
| 4.4 Tailgate lock (CP 122369 ►) - remove and install | 50 |
| 4.5 Rod driver - remove and install | 53 |
| 4.6 Tailgate handle with cylinder - remove and install | 56 |
| 4.7 Tailgate sustaining cable - remove and install | 57 |



| | | |
|-----------|--|------------|
| 4.8 | Latch cylinder - remove and install | 60 |
| 4.9 | Latch cylinder - disassemble and assemble | 60 |
| 4.10 | Tailgate damper - remove and install | 60 |
| 4.11 | Cargo cover damper - replace | 62 |
| 4.12 | Tailgate - remove and install | 63 |
| 4.13 | Tailgate - adjust | 65 |
| 4.14 | Bucket sealing membrane - remove and install | 65 |
| 5 | Fuel reservoir nozzle compartment and lid set | 68 |
| 5.1 | Fuel reservoir nozzle compartment lid (Gol and Voyage) - remove and install | 68 |
| 5.2 | Fuel reservoir nozzle compartment lid (Saveiro) - remove and install | 69 |
| 57 | Front doors, door components, central locking | 70 |
| 1 | Front door | 70 |
| 1.1 | Tools | 70 |
| 1.2 | Assembly overview | 71 |
| 1.3 | Door - remove and install | 72 |
| 1.4 | Door - adjust | 74 |
| 1.5 | Door - disassemble and assemble | 77 |
| 1.6 | Door - replace | 77 |
| 1.7 | Front door arrester - adjust | 77 |
| 1.8 | Door limiter - remove and install | 78 |
| 1.9 | Internal handle - replace | 79 |
| 1.10 | Front door external handle and lock - assembly overview | 79 |
| 1.11 | Lock cylinder housing - remove and install | 81 |
| 1.12 | Latch cylinder - remove and install | 82 |
| 1.13 | Latch cylinder - disassemble and assemble | 83 |
| 1.14 | Door handle - remove and install | 83 |
| 1.15 | External door handle - replace | 85 |
| 1.16 | Door lock (► 02.09) - remove and install | 85 |
| 1.17 | Door lock (Saveiro , Gol and Voyage 03.09 ►) - remove and install | 87 |
| 1.18 | Lock button (locking rod) - remove and install | 89 |
| 1.19 | Door lock - replace | 90 |
| 1.20 | Lock Bowden cable - replace | 90 |
| 1.21 | Door sealing membrane - remove and install | 91 |
| 1.22 | Internal door trim - remove and install | 93 |
| 2 | Central locking | 94 |
| 2.1 | Central locking installation locations overview | 95 |
| 2.2 | Central control unit for convenience system J393 - remove | 96 |
| 2.3 | Battery of key with radio remote command (articulated) - remove and install | 97 |
| 2.4 | Adapting radio-commanded keys to centre control unit for convenience system J393 | 98 |
| 2.5 | Key - synchronize | 100 |
| 58 | Rear doors, door components | 101 |
| 1 | Rear passenger doors | 101 |
| 1.1 | Rear passenger doors - assembly overview | 101 |
| 1.2 | Door - remove and install | 102 |
| 1.3 | Door - adjust | 103 |
| 1.4 | Rear passenger door - disassemble and assemble | 105 |
| 1.5 | Door - replace | 105 |
| 1.6 | Rear door arrester - adjust | 106 |
| 1.7 | Door limiter - remove and install | 106 |
| 1.8 | Internal handle - replace | 108 |
| 1.9 | Rear door external handle and lock - assembly overview | 108 |
| 1.10 | External handle housing - remove and install | 109 |
| 1.11 | External door handle - remove and install | 110 |
| 1.12 | External door handle - replace | 112 |



| | | |
|-----------|---|------------|
| 1.13 | Door lock - remove and install | 112 |
| 1.14 | Door lock - replace | 116 |
| 1.15 | Lock button (locking rod) - remove and install | 116 |
| 1.16 | Lock Bowden cable - replace | 117 |
| 1.17 | Door sealing membrane - remove and install | 117 |
| 1.18 | Internal door trim - remove and install | 119 |
| 61 | - Convertible roof, hardtop, canopy | 121 |
| 1 | Tonneau cover (Saveiro) | 121 |
| 1.1 | Assembly overview | 121 |
| 1.2 | Tonneau cover - remove and install | 122 |
| 63 | - Bumpers | 125 |
| 1 | Front bumper | 125 |
| 1.1 | Front protector - assembly overview | 125 |
| 1.2 | Front protector - remove and install | 125 |
| 1.3 | Front protector support - assembly overview | 128 |
| 2 | Rear bumper (Gol) | 129 |
| 2.1 | Rear protector - assembly overview | 129 |
| 2.2 | Rear protector - remove and install | 129 |
| 2.3 | Rear protector support (► 03.11) - assembly overview | 132 |
| 2.4 | Foamed rear protector support (04.11 ►) - assembly overview | 133 |
| 3 | Rear bumper (Voyage) | 134 |
| 3.1 | Rear protector - assembly overview | 134 |
| 3.2 | Rear protector - remove and install | 134 |
| 3.3 | Rear protector support (► 03.11) - assembly overview | 137 |
| 3.4 | Foamed rear protector support (04.11 ►) - assembly overview | 138 |
| 4 | Rear bumper (Saveiro) | 139 |
| 4.1 | Support and side protector - assembly overview | 139 |
| 4.2 | Side protector - remove and install | 139 |
| 4.3 | Support and central protector - assembly overview | 141 |
| 4.4 | Central protector - remove and install | 142 |
| 64 | - Glazing | 144 |
| 1 | Glasses glued with adhesive | 144 |
| 1.1 | Tools | 144 |
| 1.2 | Auxiliary materials - Brazilian market | 145 |
| 1.3 | Auxiliary materials for the export market | 146 |
| 1.4 | Matching table | 146 |
| 1.5 | Stickers for engraving the VIS number on the windows (only for Brazil) - supply | 146 |
| 1.6 | Windscreen - assembly overview | 147 |
| 1.7 | Windscreen - remove | 148 |
| 1.8 | Windscreen - install | 148 |
| 1.9 | Rear window (Gol) - assembly overview | 148 |
| 1.10 | Undamaged rear window (Gol) - remove | 149 |
| 1.11 | Damaged rear window (Gol) - remove | 150 |
| 1.12 | Rear window (Gol) - install | 151 |
| 1.13 | Rear window (Voyage) - assembly overview | 151 |
| 1.14 | Undamaged rear window (Voyage) - remove | 151 |
| 1.15 | Damaged rear window (Voyage) - remove | 152 |
| 1.16 | Rear window (Voyage) - install | 153 |
| 1.17 | Rear door fixed window - assembly overview | 153 |
| 1.18 | Undamaged fixed rear door window - remove | 154 |
| 1.19 | Damaged fixed rear door window - remove | 154 |
| 1.20 | Fixed rear door window - install | 154 |



| | | |
|-----------|--|------------|
| 1.21 | Fixed rear side window (Saveiro) - assembly overview | 154 |
| 1.22 | Undamaged fixed rear side window (Saveiro) - remove | 155 |
| 1.23 | Damaged fixed rear side window (Saveiro) - remove | 156 |
| 1.24 | Fixed rear side window (Saveiro) - install | 157 |
| 1.25 | Fixed rear side window (Saveiro - single cab) - assembly overview | 157 |
| 1.26 | Fixed rear window (Saveiro - extended cab) - assembly overview | 158 |
| 1.27 | Sliding rear window (Saveiro - single cab) - assembly overview | 159 |
| 1.28 | Sliding rear window (Saveiro - extended cab) - assembly overview | 160 |
| 1.29 | Undamaged fixed or sliding rear window (Saveiro) - remove | 160 |
| 1.30 | Rear fixed or sliding window (Saveiro) - install | 162 |
| 1.31 | Undamaged glass - prepare for install | 163 |
| 1.32 | New glass - prepare for install | 163 |
| 1.33 | Body flange - prepare to install the window | 164 |
| 1.34 | Assembly instructions | 164 |
| 1.35 | Minimum adhesive drying time | 166 |
| 1.36 | Paint damage - repair | 166 |
| 1.37 | Cleaning in case of resulting adhesive residues | 166 |
| 2 | Door window glass | 168 |
| 2.1 | Front door window glass - assembly overview | 168 |
| 2.2 | Front door window glass - remove and install | 168 |
| 2.3 | Convenience system window drive mechanism (automatic window closing and opening mechanism) with force limiter (anti-crushing function) | 169 |
| 2.4 | Window drive mechanism - remove and install | 171 |
| 2.5 | Driver/passenger window control motor V147 / V148 - remove and install | 172 |
| 2.6 | Front door window crank - remove and install | 173 |
| 2.7 | Front door window channel - remove and install | 173 |
| 2.8 | Front door window internal trim - remove and install | 174 |
| 2.9 | Front door window external trim - replace | 174 |
| 2.10 | Rear door window glass - assembly overview | 175 |
| 2.11 | Rear door window glass - remove and install | 175 |
| 2.12 | Rear door window drive mechanism - remove and install | 176 |
| 2.13 | Left/right rear window control motor V26 / V27 - remove and install | 177 |
| 2.14 | Rear door window drive crank - remove and install | 178 |
| 2.15 | Rear door window channel - remove and install | 178 |
| 2.16 | Rear door window internal trim - remove and install | 179 |
| 2.17 | Rear door window external trim - replace | 179 |
| 66 | Exterior equipment | 180 |
| 1 | Materials used and operational care required | 180 |
| 1.1 | Auxiliary materials for Brazilian market | 180 |
| 1.2 | Auxiliary materials for export market | 180 |
| 1.3 | Matching table | 180 |
| 1.4 | Paint damage - repair | 181 |
| 1.5 | Cleaning in case of dirt residues resulting from handling of polyurethane adhesive (PU) | 181 |
| 1.6 | Minimum adhesive drying time | 181 |
| 2 | Wheel arch protector | 182 |
| 2.1 | Front wheel arch protector - remove and install | 182 |
| 2.2 | Rear wheel arch protector - remove and install | 183 |
| 3 | External rear-view mirror | 184 |
| 3.1 | External rear-view mirror - assembly overview | 184 |
| 3.2 | External rearview mirror - assembly overview - continued | 185 |
| 3.3 | Exterior rear-view mirror - remove and install | 185 |
| 3.4 | Mirror glass - remove and install | 186 |
| 3.5 | Mirror glass - remove and install | 187 |
| 3.6 | Turn signal (Blinker) - remove and install | 188 |



| | | |
|----------|--|------------|
| 4 | External linings | 189 |
| 4.1 | Lower windscreen covering - assembly overview | 189 |
| 4.2 | Lower windscreen covering - remove and install | 190 |
| 4.3 | External linings on pillars and doors - replace | 191 |
| 4.4 | External B-pillar coverings (Saveiro - single cab) - replace | 193 |
| 4.5 | Footwell cover (Saveiro) - replace | 195 |
| 5 | Internal covering | 198 |
| 5.1 | Front wing side cover - remove and install | 198 |
| 6 | Side trims, roof | 199 |
| 6.1 | Side trims (Gol ► BT 003067 and Voyage ► AT 255034) - replace | 199 |
| 6.2 | Side trims (Gol BT 003068 ► and Voyage AT 255035 ►) - replace | 201 |
| 6.3 | Side trims (Saveiro Cross) - Assembly overview | 203 |
| 6.4 | Front door trim (Saveiro Cross) - replace | 203 |
| 6.5 | Rear side panel trim (Saveiro Cross) - replace | 206 |
| 6.6 | Decorative side stripe (Saveiro Trooper) - replace | 209 |
| 6.7 | Decorative stripe on the front and rear door (Gol Rallye) - replace | 210 |
| 6.8 | Decorative stripe on the front and rear door (Gol Rock in Rio) - replace | 213 |
| 6.9 | Decorative stripe on the front and rear door (Gol Rock in Rio) - replace | 214 |
| 6.10 | Rear cover trim (Voyage) - replace | 215 |
| 6.11 | Roof trim (► 07.08 - Gol and Voyage) - assembly overview | 217 |
| 6.12 | Roof trim (08.08 ► - Gol e Voyage) - assembly overview | 218 |
| 6.13 | Roof lining (Saveiro) - remove and install | 219 |
| 6.14 | Rear protector fixed window (Gol) - replace | 220 |
| 6.15 | Rear protector fixed window (Gol Vintage) - replace | 222 |
| 6.16 | Front protector fixed window (Gol Vintage) - replace | 224 |
| 6.17 | Decorative stripe and side lettering (Gol Vintage) - replace | 227 |
| 7 | Side member trim | 232 |
| 7.1 | Longitudinal member lower trim (Saveiro Cross) - assembly overview | 233 |
| 7.2 | Longitudinal member lower trim (Saveiro Cross) - replace | 233 |
| 7.3 | Longitudinal lower trim (Gol Rallye) - general overview of assembly | 237 |
| 7.4 | Longitudinal lower trim (Gol Rallye) - replace | 237 |
| 8 | Rear wing and side panel trim (Saveiro) | 242 |
| 8.1 | Front protector trim (Saveiro) - replace | 242 |
| 8.2 | Front protective trim (Gol Rallye) - remove and install | 244 |
| 8.3 | Front wing trim (Saveiro) - assembly overview | 247 |
| 8.4 | Front bumper trim (Saveiro) - replace | 248 |
| 8.5 | Front wing trim (Saveiro Cross) - assembly overview | 249 |
| 8.6 | Front wing trim (Saveiro Cross) - replace | 250 |
| 8.7 | Front wing trim (Gol Rallye) - replace | 253 |
| 8.8 | Rear side panel trim (Saveiro) - assembly overview | 258 |
| 8.9 | Rear side panel trim (Saveiro) - replace | 258 |
| 8.10 | Rear side panel trim (Saveiro Cross) - assembly overview | 260 |
| 8.11 | Rear side panel trim (Saveiro Cross) - replace | 261 |
| 8.12 | Rear side panel trim (Gol Rallye) - replace | 264 |
| 8.13 | Rear side protector trim (Saveiro) - replace | 268 |
| 8.14 | Front protective trim (Gol Rallye) - remove and install | 270 |
| 9 | Cargo compartment and frames protector (Saveiro) | 274 |
| 9.1 | Upper tailgate frame - replace | 274 |
| 9.2 | Cargo compartment upper frame - replace | 275 |
| 9.3 | Cargo compartment protection grid - remove and install | 279 |
| 9.4 | External B-pillar frame - replace | 280 |
| 9.5 | Rear window glass upper and lower frame - remove and install | 283 |
| 9.6 | Bedliner - remove and install | 285 |
| 9.7 | Cargo tying adjustable hooks track (vehicle without tonneau cover) - remove and install .. | 288 |
| 9.8 | Cargo tying adjustable hooks track (vehicle with tonneau cover) - remove and install | 289 |



| | | |
|-----------|---|------------|
| 9.9 | Cargo compartment adjustable hooks - remove and install | 291 |
| 10 | Front grid, front protector grids, rear protector frames | 292 |
| 10.1 | Front grid and front protector grids - assembly overview | 292 |
| 10.2 | Front spoiler (Saveiro Cross and Gol Rallye) - replace | 293 |
| 10.3 | Front protector central grid (Saveiro Cross and Gol Rallye) - replace | 295 |
| 10.4 | Front protector side grid (Saveiro Cross and Gol Rallye) - remove and install | 297 |
| 10.5 | Lower rear protector frame (Saveiro Cross) - replace | 299 |
| 10.6 | Lower rear side protector frame (Saveiro Cross) - replace | 302 |
| 10.7 | Rear spoiler (Gol) - replace | 304 |
| 11 | Badges | 307 |
| 11.1 | Volkswagen Badge - replace | 307 |
| 11.2 | Model badge (Gol) - replace | 308 |
| 11.3 | Model badge (Voyage) - replace | 308 |
| 11.4 | (1.6 - Gol) version distich - replace | 309 |
| 11.5 | (1.6 - Voyage) version badge - replace | 309 |
| 11.6 | "Total flex" badge - remove and install | 310 |
| 11.7 | Version badge (on door - Gol and Voyage) - replace | 311 |
| 11.8 | "TREND" Badge (Saveiro) - replace | 312 |
| 11.9 | Sticker "I Trend" (Gol 2012) - replace | 313 |
| 11.10 | Badge "Gol 25 anos" on front wing - replace | 314 |
| 11.11 | Badge "Gol 25 anos" on rear window - replace | 316 |
| 11.12 | "Saveiro" Badge and "VW" badge on tailgate - replace | 317 |
| 11.13 | "Saveiro Cross" Badge and on tailgate - replace | 319 |
| 11.14 | "Seleção" Badge (Gol Seleção) - replace | 320 |
| 11.15 | "Seleção" Side Badge (Gol Seleção) - replace | 321 |
| 11.16 | Lettering "Rallye" (Gol Rallye) - replace | 322 |
| 11.17 | Side lettering of the front wing (Gol Vintage) - replace | 322 |
| 11.18 | Lettering model "Vintage" (Gol Vintage) - replace | 324 |
| 11.19 | Sticker "Rock in Rio" (Gol Rock in Rio) - replace | 325 |
| 11.20 | "Blackgol" badge on front door (Gol Blackgol) - replace | 326 |
| 11.21 | "Blackgol" badge on rear lid (Gol Blackgol) - replace | 327 |
| 12 | Roof rack (Saveiro) | 330 |
| 12.1 | Roof rack (Single cab) - remove and install | 330 |
| 12.2 | Roof rack (Extended cab) - remove and install | 333 |
| 12.3 | Roof rack (Saveiro Cross) - remove and install | 337 |
| 12.4 | Roof rack extensor (Saveiro Cross) - remove and install | 341 |
| 12.5 | Roof rack extensor cover (Saveiro Cross) - remove and install | 344 |
| 12.6 | Cargo compartment rack (Saveiro Cross) - remove and install | 345 |
| 13 | Spoiler | 349 |
| 13.1 | Spoiler (Gol) - remove and install | 349 |
| 13.2 | Assembly overview | 349 |
| 13.3 | Observations for the execution of the removal and installation of the spoiler | 350 |
| 13.4 | Remove | 350 |
| 13.5 | Install | 351 |
| 13.6 | Spoiler (Voyage) - remove and install | 352 |
| 13.7 | Assembly overview | 353 |
| 13.8 | Observations for the execution of the removal and installation of the spoiler | 354 |
| 13.9 | Remove | 354 |
| 13.10 | Install | 355 |
| 14 | Saveiro Cross Components | 358 |
| 14.1 | Assembly overview | 358 |
| 15 | Gol Rallye Components | 359 |
| 15.1 | Assembly overview | 359 |
| 16 | Gol Vintage Components | 360 |
| 16.1 | Assembly overview | 360 |