



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Identification on the gearbox	1
1.2 Prefix, Assignment, gear ratio, filling volume	2
<b>2 Transmission assembly scheme</b>	<b>4</b>
2.1 Nomenclature	4
2.2 Gear ratios	5
<b>3 Gearbox ratio "i"</b>	<b>6</b>
3.1 Gearbox ratio "i" - calculation	6
<b>4 General repair instructions</b>	<b>7</b>
4.1 Gearbox	7
4.2 Gaskets and retainers	7
4.3 Bolts, nuts	8
4.4 Roller bearings	8
4.5 Adjustment shims	9
4.6 Synchronizer rings	9
<b>30 - Clutch</b>	<b>10</b>
<b>1 Command system</b>	<b>10</b>
1.1 Command system - component overview	10
1.2 Command pedals - assembly overview	11
1.3 Clutch pedal switch F36 - remove and install	12
1.4 Clutch pedal return spring - remove and install	13
1.5 Clutch pedal support - remove and install	14
1.6 Clutch pedal - remove install	18
1.7 Hydraulic system - assembly overview	19
1.8 Transmitting cylinder - clutch hydraulic drive - remove and install	21
<b>2 Clutch drive mechanism</b>	<b>24</b>
2.1 Clutch drive mechanism - assembly overview	24
2.2 Clutch slave cylinder - remove and install	25
2.3 Clutch system - bleed	26
<b>3 Clutch</b>	<b>28</b>
3.1 Clutch - assembly overview	28
3.2 Clutch - repair	30
<b>34 - Controls, housing</b>	<b>32</b>
<b>1 Shift mechanism</b>	<b>32</b>
1.1 Shift mechanism - installation position	32
1.2 Selector mechanism - component overview	34
1.3 Drive cables	35
1.4 Handle and boot on the gear lever - assembly overview	41
1.5 Handle and boot on the gear lever - remove and install	41
1.6 Gear shift lever and shifting mechanism - remove and install	43
1.7 Gearshift lever and mechanism - repair	46
1.8 Lever and Gear shifting mechanism - adjusting	49
1.9 Selector and lever - functional check	51
<b>2 Transmission - remove and install</b>	<b>53</b>
2.1 Transmission - remove and install	53
<b>3 Gearbox oil level</b>	<b>71</b>
3.1 Oil level - check	71
3.2 Oil level - replenish	72
<b>4 Gearbox - disassemble and assemble</b>	<b>74</b>



4.1	Gearbox - overview	74
4.2	gearbox - assembly overview	75
4.3	Gearbox housing cover and 5th gear	76
4.4	Clutch housing	77
4.5	Input shaft, planet pinion, differential, selection mechanism and selector forks	78
4.6	Input shaft, planet pinion, differential, selection mechanism and selector forks - disassemble and assemble	80
<b>5</b>	<b>Gearbox and clutch housings</b>	<b>88</b>
5.1	Transmission and clutch housings - repair	88
<b>6</b>	<b>Gear selection mechanism - adjust</b>	<b>94</b>
6.1	Gear selection mechanism - disassemble and assemble	94
<b>7</b>	<b>Selector forks - disassemble and assemble</b>	<b>97</b>
7.1	Selector forks - disassemble and assemble	97
<b>35</b>	<b>Gears, shafts</b>	<b>102</b>
<b>1</b>	<b>Input shaft</b>	<b>102</b>
1.1	Primary shaft - general overview of assembly	102
1.2	Input shaft - disassemble and assemble	105
<b>2</b>	<b>Planet pinion</b>	<b>114</b>
2.1	Pinion shaft - general overview of assembly	114
2.2	Planet pinion - disassemble and assemble	117
<b>39</b>	<b>Final drive - differential</b>	<b>123</b>
<b>1</b>	<b>Drive flange</b>	<b>123</b>
1.1	Left drive flange retainer (left side) - replace	123
1.2	Drive flange retainer (right side) - replace	126
<b>2</b>	<b>Differential</b>	<b>129</b>
2.1	Differential - general overview of assembly	129
2.2	Differential - disassemble and assemble	131
2.3	Differential - adjust	137