



Contents

00 - Technical data	1
1 Technical Data	1
1.1 Engine number	1
1.2 Engine characteristics	1
10 - Removing and installing engine	3
1 Engine - remove and install	3
1.1 Removal - recommendations	6
1.2 Engine - fasten to assembly stand	11
1.3 Installation notes	11
1.4 Tightening torques	12
1.5 Engine and gearbox support set - align	13
1.6 Power-drive unit supports	14
1.7 Additional notes and installation works in vehicles with air conditioning	15
13 - Crankshaft group	17
1 Engine - assembly and disassembly	17
1.1 Seal lid - replace	21
1.2 Poly-V belt (elastic) - remove and install	21
2 Crankshaft and flywheel flanges - assembly overview	25
2.1 Flywheel - remove and install	26
2.2 Crankshaft seal (pulley side) - replace	27
2.3 Crankshaft flange (flywheel side) with Engine speed sensor G28 rotor - replace	29
3 Crankshaft - remove and install	39
3.1 Identifying engine bearing shells	40
3.2 Colour codes	40
3.3 Crankshaft - dimensions	40
4 Pistons and connecting rods - removal and installation	42
4.1 Piston and cylinder - dimensions	45
15 - Cylinder head, valve gear	47
1 Cylinder head - assembly and disassembly	47
1.1 Toothed belt semi-automatic tensioning pulley - check	50
1.2 Toothed belt - remove and install, adjust	51
1.3 Cylinder head - remove and install	56
1.4 Compression - check	62
2 Camshaft - assembly overview	66
2.1 Camshaft - check axial clearance	69
2.2 Valve seat - trim	70
2.3 Camshaft seal - replace	72
2.4 Camshaft and cylinder head cover - removal and installation	75
2.5 Valve guides - check	78
2.6 Valve stem sealant - replace	79
17 - Lubrication	83
1 Lubrication system components	83
1.1 Lubricating system components - assembly overview	83
1.2 Engine oil	85
1.3 Crankcase - remove and install	86
1.4 Oil filter - replace	88
1.5 Oil pump - remove and install	90
1.6 Oil pressure switch F1 - remove and install	93



1.7	Oil pressure and Oil pressure switch F1 - check	94
19	- Cooling	97
1	Cooling system components - remove and install	97
1.1	Cooling system components on the body side - assembly overview	97
1.2	Cooling system components on the engine side - assembly overview	99
1.3	Hose connection diagram for cooling system	102
1.4	Cooling system - drainage and replenishment	103
1.5	Cooling system - check air-tightness	109
1.6	Radiator - remove and install	111
1.7	Water pump - remove and install	113
20	- Fuel supply system	116
1	Fuel supply system components - removal and installation	116
1.1	Fuel tank components with accessories and fuel filter - removal and installation	116
1.2	Safety measures regarding work on the fuel supply systems	119
1.3	Cleaning rules	120
1.4	Cold start system components - remove and install	120
1.5	Fuel pump (pre-supply pump) G6 - remove and install	122
1.6	Fuel gauge sensor G - remove and install	124
1.7	Fuel reservoir - remove and install	124
1.8	Fuel pump (pre-supply pump) G6 - check	126
2	Engine power electronic adjustment (electronic accelerator) - check	135
2.1	Electronic accelerator system operation	135
3	Activated charcoal filter system	137
3.1	Operation	137
3.2	Activated charcoal filter system components - repair	137
3.3	Fuel tank ventilation - check	138
24	- Mixture preparation - injection	140
1	Injection system - repair	140
1.1	General instructions regarding the injection system	140
1.2	Component location	140
1.3	Injection components - remove and install	143
1.4	Intake manifold - remove and install	146
1.5	Fuel distributor with injectors - removal and installation	147
1.6	Air filter - disassembly and assembly	147
1.7	Air filter - remove and install	148
1.8	Safety measures	149
1.9	Cleaning rules	150
1.10	Technical Data	150
2	Component checks	152
2.1	Injection valves - check	152
2.2	Residual pressure and fuel pressure regulator - check	154
3	READINESS code	159
3.1	Creating and Interpreting the READINESS code	159
4	Engine control unit J623	160
4.1	Engine control unit J623 - remove and install	160
4.2	Adjust components	161
4.3	Event memory in Engine control unit J623 - reference and erase	161
26	- Exhaust system	164
1	Exhaust system components - remove and install	164
1.1	Intake manifold with catalytic converter, front exhaust manifold, intermediate silencer and installation parts	164



1.2	Rear muffler with supports	166
28	- Glow plug system	168
1	Ignition system: repair	168
1.1	General instructions regarding the ignition system	168
1.2	Ignition system components - remove and install	168
1.3	Safety measures	170
1.4	Test data, spark plugs	170