

001 - 1.0 I - 4GV - 52-54 kW, engine code CCNA	1-16
1. 1.0 I - 4GV - 52-54 kW, engine code CCNA	1
2. Battery, starter, alternator, voltage regulator	2
3. Ignition/starter switch, terminal 30 wiring junction	3
4. Brake fluid level warning contact, speedometer sender, lambda probe, engine control unit	4
5. Accelerator position sender, accelerator position sender 2, engine control unit, activated charcoal filter system solenoid valve 1	5
6. Engine speed sender, throttle valve drive for electric throttle (EPC), throttle valve drive angle sender 1 for electric throttle (EPC), engine control unit, ignition transformer	6
7. Brake light switch, clutch pedal switch, brake pedal switch, engine control unit	7
8. Hall sender, intake air temperature sender, knock sensor 1, intake manifold pressure sender, intake manifold pressure sender, engine control unit	8
9. Electric drive main relay, engine control unit, fuel pump for cold start	9
10. Electric drive main relay, engine control unit, injector, cylinder 1, injector, cylinder 2, injector, cylinder 3, injector, cylinder 4, radiator fan	10
11. Engine control unit	11
12. Speedometer, rev. counter, control unit with display in dash panel insert, dash panel insert, alternator warning lamp, coolant temperature and coolant shortage warning lamp	12
13. Oil pressure switch, fuel gauge, dash panel insert, oil pressure warning lamp, reserve fuel warning lamp	13
14. Fuel gauge sender, fuel system pressurisation pump	14
15. Cold start valve	15
16. Radiator fan 2nd speed relay, air conditioning system magnetic clutch, radiator fan series resistor, radiator fan	16
002 - Radio	17-26
1. Radio	17
2. Battery, Starter, Alternator, Voltage regulator	18
3. Ignition/starter switch, Electric drive main relay, Terminal 30 wiring junction	19
4. Radio, Front right treble loudspeaker, Front right bass loudspeaker	20
5. Radio, Front left treble loudspeaker, Front left bass loudspeaker, Connection for external audio sources	21
6. Radio, Rear left bass loudspeaker, Rear right bass loudspeaker	22
7. Radio, Aerial, Aerial amplifier	23
8. Fuse 3 on fuse holder A, Fuse 5 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 34 on fuse holder A, Fuse 44 on fuse holder A	24
9. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	25
10. Control unit in dash panel insert, Dash panel insert	26
003 - Air conditioning system	27-33
1. Air conditioning system	27
2. Battery, starter, alternator, voltage regulator	28
3. Ignition/starter switch, terminal 30 wiring junction	29
4. Fresh air blower switch, air conditioning system control unit, fresh air blower series resistor with overheating fuse, fresh air blower	30
5. Radiator fan 2nd speed relay, air conditioning system switch-off relay, air conditioning system magnetic clutch, radiator fan series resistor, radiator fan	31
6. Pressure sensor, electric drive main relay	32
7. Control unit with display in dash panel insert, dash panel insert, alternator warning lamp	33
004 - Airbag systems	34-41
1. Airbag systems	34
2. Battery, Starter, Alternator, Voltage regulator	35
3. Ignition/starter switch, Terminal 30 wiring junction	36
4. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Driver side airbag igniter, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	37
5. Horn or dual tone horn, Dual tone horn relay, Airbag control unit, Front passenger side airbag igniter 1	38
6. Airbag control unit	39
7. Electric drive main relay	40
8. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp	41
005 - Anti-lock brake system (ABS)	42-50
1. Anti-lock brake system (ABS)	42
2. Battery, Starter, Alternator, Voltage regulator	43
3. Ignition/starter switch, Electric drive main relay, Terminal 30 wiring junction	44
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor. ABS control unit. Front right ABS inlet valve. Front right ABS outlet valve. Front left ABS	45

inlet valve, Front left ABS outlet valve	
5. ABS control unit, ABS return flow pump relay, Rear right ABS inlet valve, Rear left ABS inlet valve, ABS return flow pump	46
6. ABS control unit, ABS solenoid valve relay, Rear right ABS outlet valve, Rear left ABS outlet valve	47
7. Fuse 2 on fuse holder A, Fuse 9 on fuse holder A, Fuse 10 on fuse holder A, Fuse 34 on fuse holder A, Fuse 36 on fuse holder A, Fuse 44 on fuse holder A	48
8. Brake light switch, Handbrake warning switch, Brake fluid level warning contact, Brake pedal switch	49
9. Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Brake system warning lamp	50
006 - Basic equipment	51-65
1. Basic equipment	51
2. Battery, Starter, Alternator, Voltage regulator	52
3. Ignition/starter switch, Terminal 30 wiring junction	53
4. Hazard warning light switch, Reversing light switch, Indicator lamp for hazard warning light	54
5. Intermittent wiper switch, Windscreen wiper motor, Windscreen and rear window washer pump	55
6. Socket illumination bulb, Left side light bulb, Right side light bulb, 12 V socket, Number plate light	56
7. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Driver door contact switch, Horn plate, Horn or dual tone horn, Horn activation contact ring, Front interior light	57
8. Electric drive main relay, Radiator fan	58
9. Electric drive main relay	59
10. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Fresh air blower series resistor with overheating fuse, Fresh air blower	60
11. Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb, Additional brake light bulb, Left tail light bulb 2, Right tail light bulb 2	61
12. Left headlight twin filament bulb, Right headlight twin filament bulb, Front left turn signal bulb, Front right turn signal bulb	62
13. Immobiliser reader coil, Brake light switch, Clutch pedal switch, Brake pedal switch, Rev. counter, Speedometer, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Main beam warning lamp, Alternator warning lamp	63
14. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Electronic power control fault lamp	64
15. Control unit in dash panel insert, Dash panel insert, Left turn signal warning lamp, Right turn signal warning lamp, Immobiliser warning lamp, Malfunction warning lamp	65
007 - Fog light	66-77
1. Fog light	66
2. Battery, Starter, Alternator, Voltage regulator	67
3. Ignition/starter switch, Terminal 30 wiring junction	68
4. Fuse 31 on fuse holder A, Fuse 34 on fuse holder A, Fuse 35 on fuse holder A, Fuse 42 on fuse holder A	69
5. Fuse 17 on fuse holder A, Fuse 27 on fuse holder A, Fuse 28 on fuse holder A, Fuse 39 on fuse holder A	70
6. Rear left fog light bulb, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Right reversing light bulb, Left brake and tail light bulb, Left tail light bulb 2, Right tail light bulb 2	71
7. Front and rear fog light switch, Front and rear fog light switch illumination bulb	72
8. Electric drive main relay	73
9. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	74
10. Fog light relay, Left fog light bulb, Right fog light bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	75
11. Control unit in dash panel insert, Dash panel insert, Left turn signal warning lamp, Right turn signal warning lamp	76
12. Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Dash panel insert illumination bulb	77
008 - Interactive system	78-86
1. Interactive system	78
2. Battery, Starter, Alternator, Voltage regulator	79
3. Ignition/starter switch, Electric drive main relay, Terminal 30 wiring junction	80
4. Control unit for interactive system, Radio	81
5. Convenience system central control unit. Control unit for interactive system	82

6. Control unit for interactive system	83
7. Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 34 on fuse holder A	84
8. Multifunction display call-up button, Heated rear window button, Heated rear window control relay, Control unit in dash panel insert, Dash panel insert, Heated rear window warning lamp	85
9. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	86
009 - Window wash/wipe system and heated rear window	87-94
1. Window wash/wipe system and heated rear window	87
2. Battery, Starter, Alternator, Voltage regulator	88
3. Ignition/starter switch, Terminal 30 wiring junction	89
4. Intermittent wiper switch, Rear wiper switch, Windscreen wiper motor, Windscreen and rear window washer pump	90
5. Multifunction display call-up button, Heated rear window button, Heated rear window control relay, Rear window wiper motor, Heated rear window	91
6. Electric drive main relay	92
7. Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Heated rear window warning lamp	93
8. Fuse 2 on fuse holder A, Fuse 6 on fuse holder A, Fuse 18 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 25 on fuse holder A, Fuse 34 on fuse holder A	94
010 - Dual headlight	95-105
1. Dual headlight	95
2. Battery, Starter, Alternator, Voltage regulator	96
3. Ignition/starter switch, Terminal 30 wiring junction	97
4. Fuse 31 on fuse holder A, Fuse 32 on fuse holder A, Fuse 43 on fuse holder A	98
5. Fuse 27 on fuse holder A, Fuse 28 on fuse holder A, Fuse 34 on fuse holder A, Fuse 39 on fuse holder A, Fuse 42 on fuse holder A, Fuse 44 on fuse holder A	99
6. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	100
7. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	101
8. Electric drive main relay	102
9. Control unit in dash panel insert, Electric drive main relay, Dash panel insert, Alternator warning lamp, Dash panel insert illumination bulb	103
10. Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	104
11. Control unit in dash panel insert, Dash panel insert	105
011 - Convenience system	106-128
1. Convenience system	106
2. Battery, Starter, Alternator, Voltage regulator	107
3. Ignition/starter switch, Electric drive main relay, Terminal 30 wiring junction	108
4. Anti-theft alarm and vermin repellent system contact switch, Anti-theft alarm ultrasonic sensor, Anti-theft alarm system horn, Convenience system central control unit	109
5. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Convenience system central control unit	110
6. Childproof lock switch, Convenience system central control unit, Warning light for activated childproof lock, Front interior light, Front passenger reading light, Driver side reading light	111
7. Rear left window regulator switch, in door, Rear left window regulator switch, in driver door, Rear right window regulator switch, in door, Rear right window regulator switch, in driver door, Convenience system central control unit, Window regulator switch illumination bulb	112
8. Convenience system central control unit, Rear left window regulator motor, Rear right window regulator motor, Driver side window regulator motor, Front passenger side window regulator motor	113
9. Convenience system central control unit, Front passenger door power latching motor, Rear left power latching motor, Rear right power latching motor	114
10. Rear lid contact switch, Convenience system central control unit, Rear lid release motor	115
11. Window regulator switch in front passenger door, Convenience system central control unit, Window regulator switch illumination bulb	116
12. Front left window regulator switch, Front right window regulator switch in driver door, Driver side interior locking switch, Driver door power latching system contact switch, Window regulator switch illumination bulb, Driver door power latching motor	117
13. Rear lid release switch, Convenience system central control unit	118
14. Driver door power latching system contact switch, Front passenger door power latching system contact switch	119
15. Mirror adjustment switch. Mirror adjustment changeover switch. Mirror adjustment switch	120

illumination bulb, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2	
16. Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2	121
17. Airbag coil connector and return ring with slip ring, Horn plate, Horn or dual tone horn, Dual tone horn relay	122
18. Fuse 2 on fuse holder A, Fuse 11 on fuse holder A, Fuse 12 on fuse holder A, Fuse 25 on fuse holder A	123
19. Fuse 4 on fuse holder A, Fuse 7 on fuse holder A, Fuse 16 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 45 on fuse holder A	124
20. Control unit in dash panel insert, Dash panel insert, Dash panel insert illumination bulb	125
21. Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Cab lock warning lamp	126
22. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Luggage compartment light, Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	127
23. Front passenger door power latching system contact switch, Front passenger door power latching motor	128
012 - 1.6l engine , CFZA	129-147
1. 1.6l engine , CFZA	129
2. Battery, Starter, Alternator, Voltage regulator	130
3. Ignition/starter switch, Terminal 30 wiring junction	131
4. Fuse 2 on fuse holder A, Fuse 10 on fuse holder A, Fuse 29 on fuse holder A, Fuse 30 on fuse holder A, Fuse 40 on fuse holder A, Fuse 41 on fuse holder A	132
5. Fuse 9 on fuse holder A, Fuse 22 on fuse holder A, Fuse 26 on fuse holder A, Fuse 34 on fuse holder A, Fuse 36 on fuse holder A	133
6. Fuse 3 on fuse holder A, Fuse 15 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 38 on fuse holder A	134
7. Lambda probe, Lambda probe after catalytic converter, Radiator fan 2nd speed relay, Engine/motor control unit	135
8. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	136
9. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	137
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine/motor control unit	138
11. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	139
12. Electric drive main relay, Engine/motor control unit, Radiator fan	140
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	141
14. Engine/motor control unit	142
15. Brake fluid level warning contact, Speedometer sender, Engine/motor control unit	143
16. Engine/motor control unit	144
17. Oil pressure switch, Fuel gauge, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp	145
18. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Electronic power control fault lamp	146
19. Fuel gauge sender, Fuel system pressurisation pump, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	147
013 - Fog light	148-158
1. Fog light	148
2. Battery, Starter, Alternator, Voltage regulator	149
3. Ignition/starter switch, Terminal 30 wiring junction	150
4. Fuse 31 in fuse holder A, Fuse 32 in fuse holder A, Fuse 42 in fuse holder A, Fuse 43 in fuse holder A	151
5. Fuse 17 in fuse holder A, Fuse 27 in fuse holder A, Fuse 28 in fuse holder A, Fuse 34 in fuse holder A, Fuse 39 in fuse holder A, Fuse 44 in fuse holder A	152
6. Front and rear fog light switch, Front and rear fog light switch illumination bulb, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left tail light bulb 2	153
7. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	154
8. Electric drive main relay	155
9. Control unit in dash panel insert, Electric drive main relay, Dash panel insert, Main beam warning lamp. Alternator warning lamp. Dash panel insert illumination bulb	156

10. Control unit in dash panel insert, Dash panel insert, Right turn signal warning lamp, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right tail light bulb 2	157
11. Control unit in dash panel insert, Dash panel insert, Left turn signal warning lamp, Left fog light bulb, Right fog light bulb	158
014 - Basic equipment	159-175
1. Basic equipment	159
2. Battery, Starter, Alternator, Voltage regulator	160
3. Ignition/starter switch, Terminal 30 wiring junction	161
4. Hazard warning light switch, Reversing light switch, Indicator lamp for hazard warning light	162
5. Intermittent wiper switch, Windscreen wiper motor, Windscreen and rear window washer pump	163
6. Rear lid release switch, Socket illumination bulb, 12 V socket	164
7. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Driver door contact switch, Horn plate, Horn or dual tone horn, Horn activation contact ring, Front interior light	165
8. Electric drive main relay, Radiator fan	166
9. Electric drive main relay	167
10. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Fresh air blower series resistor with overheating fuse, Fresh air blower	168
11. Immobiliser reader coil, Brake light switch, Clutch pedal switch, Brake pedal switch, Rev. counter, Speedometer, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Main beam warning lamp, Alternator warning lamp	169
12. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Electronic power control fault lamp	170
13. Control unit in dash panel insert, Dash panel insert, Heated rear window warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Immobiliser warning lamp, Malfunction warning lamp	171
14. Rear lid contact switch, Additional brake light bulb, Rear lid release motor, Luggage compartment light, Number plate light, Heated rear window	172
15. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	173
16. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	174
17. Heated rear window button, Heated rear window control relay	175
015 - Air conditioning system , CCNA,CCRA,CFZA,CPBA	176-183
1. Air conditioning system , CCNA,CCRA,CFZA,CPBA	176
2. Battery, Starter, Alternator, Voltage regulator	177
3. Ignition/starter switch, Terminal 30 wiring junction	178
4. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	179
5. Radiator fan 2nd speed relay, Air conditioning system switch-off relay, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	180
6. Electric drive main relay	181
7. Fuse 2 on fuse holder A, Fuse 15 on fuse holder A, Fuse 24 on fuse holder A, Fuse 34 on fuse holder A, Fuse 38 on fuse holder A	182
8. Pressure sensor, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	183
016 - Fog light	184-197
1. Fog light	184
2. Battery, Starter, Alternator, Voltage regulator	185
3. Ignition/starter switch, Terminal 30 wiring junction	186
4. Fuse 6 in fuse holder A, Fuse 17 in fuse holder A, Fuse 27 in fuse holder A, Fuse 32 in fuse holder A, Fuse 43 in fuse holder A	187
5. Fuse 28 in fuse holder A, Fuse 31 in fuse holder A, Fuse 34 in fuse holder A, Fuse 39 in fuse holder A, Fuse 42 in fuse holder A	188
6. Fog light relay	189
7. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring	190
8. Front and rear fog light switch, Left fog light bulb, Right fog light bulb, Front and rear fog light switch illumination bulb, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	191
9. Electric drive main relay	192
10. Electric drive main relay, Number plate light	193
11. Electric drive main relay	194

12. Speedometer, Control unit in dash panel insert, Dash panel insert, Left turn signal warning lamp, Dash panel insert illumination bulb, Rear left fog light bulb, Rear left turn signal bulb, Left reversing light bulb, Left brake and tail light bulb	195
13. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Right turn signal warning lamp, Rear right turn signal bulb, Right reversing light bulb, Right brake and tail light bulb	196
14. Control unit in dash panel insert, Dash panel insert, Main beam warning lamp	197
017 - Parking aid (PDC)	198-205
1. Parking aid (PDC)	198
2. Battery, Starter, Alternator	199
3. Ignition/starter switch, Electric drive main relay, Terminal 30 wiring junction	200
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	201
5. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	202
6. Parking aid control unit	203
7. Reversing light switch, Parking aid control unit	204
8. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	205
018 - Basic equipment	206-226
1. Basic equipment	206
2. Battery, Starter, Alternator, Voltage regulator	207
3. Ignition/starter switch, Terminal 30 wiring junction	208
4. Fuse 20 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 25 on fuse holder A, Fuse 35 on fuse holder A, Fuse 38 on fuse holder A, Fuse 44 on fuse holder A	209
5. Fuse 21 on fuse holder A, Fuse 33 on fuse holder A, Fuse 34 on fuse holder A, Fuse 36 on fuse holder A, Fuse 37 on fuse holder A	210
6. Fuse 2 on fuse holder A, Fuse 27 on fuse holder A, Fuse 28 on fuse holder A, Fuse 29 on fuse holder A, Fuse 39 on fuse holder A	211
7. Fuse 31 on fuse holder A, Fuse 32 on fuse holder A, Fuse 42 on fuse holder A, Fuse 43 on fuse holder A	212
8. Intermittent wiper switch, Windscreen wiper motor, Windscreen and rear window washer pump	213
9. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn or dual tone horn, Horn activation contact ring	214
10. Hazard warning light switch, Driver door contact switch, Front passenger door contact switch, Indicator lamp for hazard warning light, 12 V socket, Front interior light	215
11. Reversing light switch, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	216
12. Socket illumination bulb, 12 V socket, Number plate light	217
13. Fresh air blower switch, Heater/heat output switch, Fresh air blower series resistor with overheating fuse, Fresh air blower	218
14. Fuel gauge sender, Fuel system pressurisation pump	219
15. Electric drive main relay, Radiator fan	220
16. Electric drive main relay	221
17. Load area illumination switch, Brake light switch, Clutch pedal switch, Brake pedal switch, High-level brake light bulb, Load area illumination bulb	222
18. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb	223
19. Immobiliser reader coil, Oil pressure switch, Fuel gauge, Speedometer, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Electronic power control fault lamp, 12 V socket 2	224
20. Switch and instrument illumination regulator, Control unit in dash panel insert, Dash panel insert, Left turn signal warning lamp, Reserve fuel warning lamp, Immobiliser warning lamp	225
21. Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Right turn signal warning lamp, Brake system warning lamp	226
019 - Automated manual gearbox , CCRA,CFZA	227-240
1. Automated manual gearbox , CCRA,CFZA	227
2. Battery, Starter, Alternator, Voltage regulator	228
3. Ignition/starter switch, Terminal 30 wiring junction	229
4. Automatic gearbox control unit, Gearbox hydraulic pump relay, Hydraulic pump for gearbox	230
5. Brake light switch, Brake pedal switch, Automatic gearbox control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	231
6. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automatic gearbox control unit	232
7. Ambient temperature sensor, Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automatic gearbox control unit	233

8. Starter motor relay, Automatic gearbox control unit, X contact relief relay 2, Starter motor relay 2	234
9. Driver door contact switch, Handbrake warning switch, Brake fluid level warning contact, Blocking diode, Automatic gearbox control unit	235
10. Selector lever sensors control unit	236
11.	237
12. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	238
13. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	239
14. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	240
020 - 1.0l engine , CCNA	241-260
1. 1.0l engine , CCNA	241
2. Battery, Starter, Alternator, Voltage regulator	242
3. Ignition/starter switch, Terminal 30 wiring junction	243
4. Fuse 7 on fuse holder A, Fuse 9 on fuse holder A, Fuse 15 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 26 on fuse holder A, Fuse 34 on fuse holder A	244
5. Fuse 10 on fuse holder A, Fuse 29 on fuse holder A, Fuse 30 on fuse holder A, Fuse 38 on fuse holder A, Fuse 40 on fuse holder A, Fuse 41 on fuse holder A	245
6. Lambda probe, Engine control unit, Fuel pump for cold start	246
7. Accelerator position sender, Accelerator position sender 2, Engine control unit, Voltage supply relay 1	247
8. Lambda probe after catalytic converter, Radiator fan 2nd speed relay, Engine control unit, Activated charcoal filter solenoid valve 1	248
9. Engine control unit, Radiator fan series resistor, Radiator fan	249
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine control unit	250
11. Engine control unit	251
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	252
13. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	253
14. Coolant temperature sender, Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	254
15. Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Engine control unit	255
16. Oil pressure switch, Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Coolant temperature and coolant shortage warning lamp	256
17. Fuel gauge, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Reserve fuel warning lamp, Malfunction warning lamp, Electronic power control fault lamp	257
18. Brake fluid level warning contact, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Brake system warning lamp	258
19. Electric drive main relay	259
20. Electric drive main relay	260
021 - Multifunction steering wheel	261-269
1. Multifunction steering wheel	261
2. Battery, Starter, Alternator, Voltage regulator	262
3. Ignition/starter switch, Terminal 30 wiring junction	263
4. Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 19 on fuse holder A, Fuse 24 on fuse holder A, Fuse 37 on fuse holder A	264
5. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Driver side airbag igniter	265
6. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	266
7. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Airbag coil connector and return ring with slip ring	267
8. Horn or dual tone horn, Dual tone horn relay, Electric drive main relay	268
9. Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	269
022 - Coming home	270-281
1. Coming home	270
2. Battery, Starter, Alternator, Voltage regulator	271
3. Ignition/starter switch. Terminal 30 wiring junction	272

4. Fuse 27 on fuse holder A, Fuse 31 on fuse holder A, Fuse 32 on fuse holder A, Fuse 39 on fuse holder A, Fuse 42 on fuse holder A, Fuse 43 on fuse holder A	273
5. Control unit for lighting and wiper functions	274
6. Electric drive main relay, Control unit for lighting and wiper functions	275
7. Light switch, Turn signal switch, Headlight dipper and flasher switch, Horn plate, Horn activation contact ring, Electric drive main relay	276
8. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb, Right tail light bulb 2	277
9. Right tail light bulb, Left tail light bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light bulb 2, Right tail light bulb 2	278
10. Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	279
11. Left headlight twin filament bulb, Right headlight twin filament bulb, Left side light bulb, Right side light bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	280
12. Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Dash panel insert illumination bulb	281
023 - 1.6l engine , CCRA	282-299
1. 1.6l engine , CCRA	282
2. Battery, Starter, Alternator, Voltage regulator	283
3. Ignition/starter switch, Terminal 30 wiring junction	284
4. Fuse 9 on fuse holder A, Fuse 10 on fuse holder A, Fuse 22 on fuse holder A, Fuse 26 on fuse holder A, Fuse 34 on fuse holder A, Fuse 36 on fuse holder A, Fuse 38 on fuse holder A	285
5. Fuse 15 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 29 on fuse holder A, Fuse 30 on fuse holder A, Fuse 40 on fuse holder A, Fuse 41 on fuse holder A	286
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit	287
7. Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel pump for cold start	288
8. Radiator fan 2nd speed relay, Engine control unit, Radiator fan series resistor, Radiator fan	289
9. Fuel pump relay, X-contact relay, Radiator fan relay, Cold start device relay, Electric drive main relay, Engine control unit	290
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine control unit	291
11. Engine control unit	292
12. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	293
13. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	294
14. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	295
15. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	296
16. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Dash panel insert, Brake system warning lamp, Malfunction warning lamp	297
17. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	298
18. Control unit in dash panel insert, Dash panel insert	299
024 - Automated manual gearbox , CCRA,CFZA	300-313
1. Automated manual gearbox , CCRA,CFZA	300
2. Battery, Starter, Alternator, Voltage regulator	301
3. Ignition/starter switch, Terminal 30 wiring junction	302
4. Automatic gearbox control unit, Gearbox hydraulic pump relay, Hydraulic pump for gearbox	303
5. Brake light switch, Brake pedal switch, Automatic gearbox control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	304
6. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automatic gearbox control unit	305
7. Ambient temperature sensor, Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automatic gearbox control unit	306
8. Starter motor relay, Automatic gearbox control unit, X contact relief relay 2, Starter motor relay 2	307
9. Driver door contact switch, Handbrake warning switch, Brake fluid level warning contact, Blocking diode, Automatic gearbox control unit	308
10. Selector lever sensors control unit	309
11. Fuse 1 on fuse holder A. Fuse 8 on fuse holder A. Fuse 10 on fuse holder A. Fuse 13 on fuse	310



holder A, Fuse 19 on fuse holder A, Fuse 34 on fuse holder A, Fuse 36 on fuse holder A	
12. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	311
13. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	312
14. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	313
025 - Basic equipment	314-333
1. Basic equipment	314
2. Battery, Starter, Alternator, Voltage regulator	315
3. Ignition/starter switch, Terminal 30 wiring junction	316
4. Fuse 2 on fuse holder A, Fuse 21 on fuse holder A, Fuse 29 on fuse holder A, Fuse 33 on fuse holder A, Fuse 34 on fuse holder A, Fuse 36 on fuse holder A, Fuse 37 on fuse holder A	317
5. Fuse 20 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 25 on fuse holder A, Fuse 31 on fuse holder A, Fuse 38 on fuse holder A, Fuse 44 on fuse holder A	318
6. Fuse 27 on fuse holder A, Fuse 28 on fuse holder A, Fuse 31 on fuse holder A, Fuse 32 on fuse holder A, Fuse 39 on fuse holder A, Fuse 42 on fuse holder A, Fuse 43 on fuse holder A	319
7. Left side light bulb, Left tail light bulb, Rear left turn signal bulb, Left reversing light bulb, Left brake and tail light bulb, High-level brake light bulb, Left tail light bulb 2	320
8. Reversing light switch, Right side light bulb, Rear right turn signal bulb, Right reversing light bulb, Right brake and tail light bulb, Right tail light bulb 2	321
9. Left headlight twin filament bulb, Right headlight twin filament bulb, Front left turn signal bulb, Front right turn signal bulb	322
10. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Fresh air blower series resistor with overheating fuse, Fresh air blower	323
11. Intermittent wiper switch, Windscreen wiper motor, Windscreen and rear window washer pump	324
12. Driver door contact switch, Socket illumination bulb, 12 V socket, Front interior light, Number plate light	325
13. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn or dual tone horn, Horn activation contact ring	326
14. Electric drive main relay, Radiator fan	327
15. Electric drive main relay	328
16. Hazard warning light switch, Control unit in dash panel insert, Dash panel insert, Indicator lamp for hazard warning light, Coolant temperature and coolant shortage warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	329
17. Immobiliser reader coil, Brake light switch, Clutch pedal switch, Brake pedal switch, Rev. counter, Speedometer, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	330
18. Handbrake warning switch, Brake fluid level warning contact, Dash panel insert, Reserve fuel warning lamp, Brake system warning lamp, Electronic power control fault lamp	331
19. Oil pressure switch, Fuel gauge, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Oil pressure warning lamp, Immobiliser warning lamp, Malfunction warning lamp, Dash panel insert illumination bulb	332
20. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	333
026 - Basic equipment	334-354
1. Basic equipment	334
2. Battery, Starter, Alternator, Voltage regulator	335
3. Ignition/starter switch, Terminal 30 wiring junction	336
4. Fuse 21 in fuse holder A, Fuse 33 in fuse holder A, Fuse 34 in fuse holder A, Fuse 36 in fuse holder A, Fuse 37 in fuse holder A	337
5. Fuse 6 in fuse holder A, Fuse 25 in fuse holder A, Fuse 27 in fuse holder A, Fuse 28 in fuse holder A, Fuse 38 in fuse holder A, Fuse 39 in fuse holder A, Fuse 44 in fuse holder A	338
6. Fuse 4 in fuse holder A, Fuse 20 in fuse holder A, Fuse 23 in fuse holder A, Fuse 24 in fuse holder A, Fuse 32 in fuse holder A, Fuse 43 in fuse holder A	339
7. Fuse 2 in fuse holder A, Fuse 29 in fuse holder A, Fuse 31 in fuse holder A, Fuse 42 in fuse holder A	340
8. Intermittent wiper switch, Windscreen wiper motor, Windscreen and rear window washer pump	341
9. Rear lid release switch, Driver door contact switch, Socket illumination bulb, 12 V socket, Front interior light	342
10. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn or dual tone horn, Horn activation contact ring	343
11. Electric drive main relay, Radiator fan	344
12. Electric drive main relay	345
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Fresh air blower series resistor with overheating fuse, Fresh air blower	346
14. Rear lid contact switch. High-level brake light bulb. Rear lid release motor. Luqaqae	347

compartment light, Number plate light, Heated rear window	
15. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	348
16. Reversing light switch, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light bulb 2, Right tail light bulb 2	349
17. Control unit in dash panel insert, Dash panel insert, Left turn signal warning lamp, Right turn signal warning lamp	350
18. Immobiliser reader coil, Brake light switch, Clutch pedal switch, Brake pedal switch, Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Main beam warning lamp	351
19. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Electronic power control fault lamp	352
20. Heated rear window button, Heated rear window control relay, Control unit in dash panel insert, Dash panel insert, Heated rear window warning lamp, Immobiliser warning lamp, Malfunction warning lamp	353
21. Hazard warning light switch, Indicator lamp for hazard warning light	354
027 - Interactive system , CPBA	355-363
1. Interactive system , CPBA	355
2. Battery, Starter, Alternator, Voltage regulator	356
3. Ignition/starter switch, Electric drive main relay, Terminal 30 wiring junction	357
4. Control unit for interactive system, Radio	358
5. Convenience system central control unit, Control unit for interactive system	359
6. Control unit for interactive system	360
7. Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A, Fuse 34 on fuse holder A	361
8. Multifunction display call-up button, Heated rear window button, Heated rear window control relay, Control unit in dash panel insert, Dash panel insert, Heated rear window warning lamp	362
9. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	363
028 - System for lowering passenger side mirror	364-373
1. System for lowering passenger side mirror	364
2. Battery, Starter, Alternator, Voltage regulator	365
3. Ignition/starter switch	366
4. Fuse 2 on fuse holder A, Fuse 33 on fuse holder A, Fuse 34 on fuse holder A	367
5. Fuse 11 on fuse holder A, Fuse 12 on fuse holder A, Fuse 14 on fuse holder A, Fuse 23 on fuse holder A, Fuse 24 on fuse holder A	368
6. Folding exterior mirror control unit	369
7. Reversing light switch, Folding exterior mirror control unit, Left reversing light bulb, Right reversing light bulb	370
8. Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor	371
9. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor	372
10. Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	373
801 - Fitting locations: Earth Points - 3	374-380
1. Earth Points	374-380
1.1 Engine compartment earth points	374-375
1.2 Vehicle interior earth points	376-377
1.3 Earth points in the rear vehicle area	378-380
802 - Fitting locations: Fuse locations - 3	381-395
1. Fuses	381-395
1.1 Fuse locations	381
1.2 Fuses in fuse holder -S-	382-383
1.2.1 Fuses in fuse holder -S-, as of March 2008 up to September 2010	383
1.3 Fuses in fuse holder -S-	384-385
1.3.1 Fuses in fuse holder -S-, as of July 2009 up to September 2010	385
1.4 Fuses in fuse holder -S-	386-387
1.4.1 Fuses in fuse holder -S-, as of September 2010	387
1.5 Fuse holder A -SA-	388-393
1.5.1 Fuse holder A -SA-. as of March 2008	389-393

1.6 Window regulator single fuse -S37-, in fuse holder -SA-	394-395
803 - Fitting locations: Relays - 3	396-399
1. Relays	396-399
1.1 Relays to the left, behind the dash panel	396-397
1.1.1 Relay description:	397
1.2 Relay to the right, behind the dash panel	398-399
1.2.1 Relay description:	399
804 - -Fitting locations: Control units - 3	400-424
1. Control units	400-424
1.1 Control unit in dash panel insert -J285 -	401-404
1.1.2 Connector description:	401-402
1.1.3 Connector description:	403-404
1.2 Control unit for interactive system -J879 -	405-406
1.2.2 Connector description:	405-406
1.3 Engine control unit -J623 -	407-408
1.3.2 Connector description:	407-408
1.4 ABS control unit -J104 -	409-410
1.4.2 Connector description:	409-410
1.5 Airbag control unit -J234 -	411-412
1.5.2 Connector description:	411-412
1.6 Air conditioning system control unit -J301 -	413-414
1.6.2 Connector description:	413-414
1.7 Convenience system central control unit -J393 -	415-416
1.7.2 Connector description:	415-416
1.8 Parking aid control unit -J446 -	417-418
1.8.2 Connector description:	417-418
1.9 Automatic gearbox control unit -J217-	419-420
1.9.2 Connector description:	419-420
1.10 Selector lever sensors control unit -J587-	421-422
1.10.2 Connector description:	421-422
1.11 Control unit for lighting and wiper functions -J917-	423-424
1.11.2 Connector description:	423-424