



Contents

1	Engine overview	1
2	Maintenance services	3
2.1	Information for fixed services	3
2.2	Service tables for the Brazilian market and Paraguayan export market	4
2.3	Service tables for LAM, Argentinian and Mexican export markets	31
3	Generalities	37
3.1	Lifting the vehicle with a workshop lift and jack	37
3.2	Register the date and mileage of the next service in the "Warranty & Maintenance" book and also on the sticker that can be fixed to the windscreen	39
3.3	Vehicle self-diagnosis system: read event memory (VAS)	39
3.4	Vehicle self-diagnosis system: read event memory (ODIS)	42
3.5	Vehicle identification data	44
3.6	Severe/adverse operating conditions	45
3.7	Engine identification letters and engine number	46
3.8	Push starting (pushing the vehicle to start)/towing	46
4	Description of works	49
4.1	Front suspension arm joints: check clearance, fastening and conditions of bellows for damages and leaks	50
4.2	Airbag: visually check for damages	51
4.3	Gearbox: check for damages and leaks	51
4.4	Battery: manually check the firm seating of the pole bornes	52
4.5	Battery: check with a battery testing apparatus	54
4.6	Tires (including spare tire): check conditions and pressure	54
4.7	Gearbox and brake system: replace brake fluid	58
4.8	Brakes: check reservoir level and check for damages and leaks	61
4.9	Brakes: check for wearing (thickness) of pads and discs	63
4.10	Body and paint: check for damages	68
4.11	Lower body protection: check for damages	68
4.12	Poly-V / elastic Poly V belt: check	69
4.13	Poly-V / elastic Poly V belt: replace	69
4.14	Camshaft toothed belt: check	69
4.15	Tensioner and camshaft timing belt: replace	71
4.16	Coolant pump toothed belt: check	71
4.17	Coolant pump toothed belt: replace	72
4.18	Cooling system: check the level and top off if necessary.	72
4.19	Air cleaner: Clean case and change filter element	76
4.20	Engine and engine compartment components: visually check for damages and leaks	76
4.21	Engine oil: replace	77
4.22	Engine oil level: Check	80
4.23	Engine oil filter: replace	81
4.24	Engine oil - capacities and specifications	81
4.25	Perform a test run	81
4.26	Check the cleaning additive/antifreeze concentration for the windscreen/rear window wiper/washer system and, if necessary, correct it	82
4.27	Windscreen and rear window washers: refill the reservoir and regulate the ejectors' water jet	84
4.28	Windscreen/rear window and headlight wiper and washer - check operation	85
4.29	Windscreen/rear window wipers: check for proper operation, adjust the blades' resting position and the sweep of the wiper arms	86
4.30	Headlights: regulate the beam	86
4.31	Service intervals display: reset	86
4.32	Service intervals display: recode	89
4.33	Steering bar articulation tips: check the swivel joint gaps, mounting and state of the protection bellows	89



4.34	Dust and pollen filter: replace	90
4.35	Transportation protections: remove front axle spring blocking elements	90
4.36	Clock: set the time	91
4.37	Bed cover striker and dropside (Saveiro only): lubricate	91
4.38	Fire extinguisher: check fastening, charge and validity date	92
4.39	Radio: activate anti-theft code: save local broadcasting networks in the memory buttons, according to the client's preference	92
4.40	Power steering oil: check level	93
4.41	External (front and rear) and internal lighting: check for proper operation	93
4.42	Cold start reservoir filter: replace	93
4.43	Fuel filter: replace	93
4.44	Spark plugs: replace	94
4.45	Automatic window closing (if available): program	96
5	Glossary	97