



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Assessment of crashed vehicles</b> .....	<b>1</b>
<b>2 General guidelines</b> .....	<b>3</b>
<b>3 Technical data</b> .....	<b>4</b>
3.1 Chassis .....	4
3.2 Steering .....	4
<b>40 - Front suspension</b> .....	<b>5</b>
<b>1 Assessment of crashed vehicles</b> .....	<b>5</b>
<b>2 Front suspension - raise the front axle with vehicle unloaded</b> .....	<b>6</b>
2.1 Raise the front axle with vehicle unloaded (empty) .....	6
<b>3 Front suspension - repair</b> .....	<b>9</b>
3.1 Front suspension - general assembly overview .....	9
<b>4 I - Auxiliary frame (assembly mounting), anti-roll bar, wishbones - repair</b> .....	<b>11</b>
4.1 Auxiliary frame (assembly mounting), anti-roll bar, wishbones - assembly overview .....	11
4.2 Thread in longitudinal member - repair .....	13
4.3 Swivel joint - check for clearance .....	13
4.4 Swivel guide - remove and install .....	14
4.5 Swivel guides - installation position .....	19
4.6 Wishbone (transversal) - remove and install .....	19
4.7 Wishbone - replace front metal-rubber bearing .....	22
4.8 Wishbone - replace the rear metal-rubber bearing .....	24
4.9 Auxiliary frame (assembly mounting) - remove and install .....	27
4.10 Auxiliary frame (assembly mounting) - position .....	31
4.11 Anti-roll bar - remove and install .....	34
<b>5 II - Wheel roller bearings - repair</b> .....	<b>37</b>
5.1 Wheel roller bearings - general overview of assembly .....	37
5.2 Hub and wheel bearing - remove and install .....	38
<b>6 III - Front suspension column - repair</b> .....	<b>49</b>
6.1 Front suspension column - general assembly overview .....	49
6.2 Suspension strut - remove and install .....	50
6.3 Front suspension spring - remove and install .....	55
<b>7 Constant velocity joint drive shaft - remove and install</b> .....	<b>59</b>
7.1 Fastening nut (dodecahedron) of the drive shaft - loosen and tighten .....	59
7.2 Constant velocity joint drive shaft - remove and install .....	61
<b>8 IV - Drive shaft with constant velocity joint - repair</b> .....	<b>68</b>
8.1 Drive shaft with constant velocity joint - assembly overview .....	68
8.2 Drive shaft with constant velocity joint - repair .....	70
<b>42 - Rear suspension</b> .....	<b>74</b>
<b>1 Rear suspension - raise the rear axle with the vehicle unloaded</b> .....	<b>74</b>
1.1 Lift the rear axle with the vehicle unloaded (empty) .....	74
<b>2 Rear suspension (Gol and Voyage) - repair</b> .....	<b>77</b>
2.1 Rear suspension (Gol and Voyage) - assembly overview .....	77
2.2 Shock absorber (Gol and Voyage) - remove and install .....	79
2.3 Wheel roller bearing/hub unit (Gol Voyage) - remove and install .....	81
2.4 Rear axle (Gol and Voyage) - remove and install .....	85
2.5 Coil spring (Gol and Voyage) - remove and install .....	89
2.6 Split metal/rubber bearing on the rear axle (Gol and Voyage) - remove and install .....	91
2.7 Shaft end - check .....	99
2.8 Rear suspension (Gol and Voyage) - remove and install .....	99



<b>3</b>	<b>Rear suspension (Saveiro)- repair</b>	<b>105</b>
3.1	Rear suspension (Saveiro) (drum brake) - general overview of assembly	105
3.2	Rear suspension (Saveiro) (disc brake) - general overview of assembly	108
3.3	Shock absorber (Saveiro) - assembly overview	111
3.4	Shock absorber (Saveiro) - remove and install	112
3.5	Wheel roller bearings (Saveiro) (drum brakes) - assembly overview	113
3.6	Wheel bearings (Saveiro) (disc brakes) - assembly overview	115
3.7	Wheel roller bearing/hub unit (Saveiro) (drum brakes) - remove and install	116
3.8	Wheel roller bearing/hub unit (Saveiro) (disc brakes) - remove and install	118
3.9	Rear axle (Saveiro) - remove and install	121
3.10	Coil spring (Saveiro) - remove and install	125
3.11	Metal-rubber bearing - remove and install	126
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>132</b>
<b>1</b>	<b>Wheel bolts</b>	<b>132</b>
1.1	Wheel bolts - tightening torque	132
<b>2</b>	<b>Vehicle alignment</b>	<b>133</b>
2.1	Miscellaneous	133
2.2	Checking conditions:	134
2.3	Preparation for measurement	134
2.4	Sequence for vehicle alignment	135
2.5	Nominal values for vehicle alignment	135
2.6	Vehicles in "zero" transverse tilting position	137
2.7	Camber on front axle - adjust	138
2.8	Camber on rear axle - adjust	138
2.9	Convergence on front axle - adjust	139
2.10	Convergence on rear axle - adjust	139
2.11	Left and right-hand steering - check	139
<b>48</b>	<b>Steering</b>	<b>141</b>
<b>1</b>	<b>Steering wheel</b>	<b>141</b>
1.1	Horn actuator H - remove and install	141
1.2	Steering wheel - assembly overview	142
1.3	Steering wheel - remove and install	143
<b>2</b>	<b>Fixed steering column - repair</b>	<b>146</b>
2.1	Fixed steering wheel support and column - assembly overview	146
2.2	Fixed steering column - remove and install	147
<b>3</b>	<b>Adjustable steering column - repair</b>	<b>153</b>
3.1	Adjustable steering support and column - assembly overview	153
3.2	Adjustable steering column - remove and install	153
<b>4</b>	<b>Mechanical steering - repair</b>	<b>160</b>
4.1	Mechanical steering wheel - assembly overview	160
4.2	Mechanical steering box - remove and install	161
4.3	Mechanical steering box - disassemble and assemble	165
<b>5</b>	<b>Power steering box - repair</b>	<b>169</b>
5.1	Power steering - assembly overview	169
5.2	Power steering box - remove and install	170
5.3	Power steering box - disassemble and assemble	175
<b>6</b>	<b>Poly-V belt (elastic), Hydraulic pump, compensation reservoir, hydraulic pipes (power steering)</b>	<b>180</b>
6.1	Poly-V belt (elastic) - remove and install	180
6.2	Hydraulic pump with hydraulic tubes - assembly overview	183
6.3	Hydraulic pump - assembly overview	186
6.4	Hydraulic pump - remove and install	186
6.5	Hydraulic pump operating pressure - check	190



6.6	Power steering system fluid - replenish	195
<b>7</b>	<b>Poly-V belt (elastic) for power steering pump, hydraulic pump, compensation reservoir, hydraulic pipes (Power steering/Engine EA211)</b>	<b>197</b>
7.1	Poly-V belt (elastic) for power steering pump- remove and install	197
7.2	Hydraulic pump with hydraulic tubes (EA211 Engine) - assembly overview	198
7.3	Hydraulic pump - assembly overview	202
7.4	Hydraulic pump - remove and install	202
7.5	Hydraulic pump operating pressure - check	207
7.6	Power steering system fluid - replenish	212