



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Battery A - assembly overview	2
1.2 Battery A - disconnect and connect	2
1.3 Battery A - remove and install	5
1.4 Battery Console A - remove and install	7
1.5 Tightening torques - battery	8
2 Starter	9
2.1 Starter B - remove and install	10
2.2 Starter B (Manufacturer Valeo) - disassemble and assemble	10
2.3 Starter B (Manufacturer Bosch) - disassemble and assemble	14
2.4 Starter (vehicles with CNXA engine) - assembly overview	27
2.5 Tightening torques - Starter	28
3 Alternator	29
3.1 Generator (Alternator) C - cable fastening (B+)	29
3.2 Generator (Alternator) C - check Poly-V belt	30
3.3 Alternator C (vehicles with EA111 engines) - overall assembly	30
3.4 Alternator C (vehicles with EA111 engines)- remove and install	33
3.5 Alternator C (vehicles with EA211 engines)- remove and install	35
3.6 Generator (Alternator) C - replace the Poly-V belt pulley	36
3.7 Voltage regulator C1 (Manufacturer Bosch) - disassemble and assemble	38
3.8 Voltage regulator C1 (Manufacturer Valeo) - disassemble and assemble	39
3.9 Tightening torques - Alternator	41
90 - Gauges, instruments	43
1 Combined instrument	43
1.1 Locating defects and indicating faults	43
1.2 Combined instrument K - replace	44
1.3 Combined instrument K - remove and install	46
1.4 Combined instrument K - description of rear part	47
1.5 Combined instrument K - pin assignment	48
1.6 Combined instrument K - control light symbols	49
2 Service interval indication	53
2.1 Reset service interval indicator	53
3 12 Volt socket	54
3.1 12 volt socket U5 - assembly overview	54
3.2 12-volt socket Electrical socket 2 - 12V U18	55
3.3 12 volt socket U5 - remove and install	55
3.4 12 volt socket U18 - remove and install	57
92 - Windscreen wash/wipe system	60
1 Windscreen wiper system	60
1.1 Windscreen wiper system - assembly overview	61
1.2 Windscreen wiper blade - remove and install	62
1.3 Windscreen wiper blade and arm set - remove and install	62
1.4 Windscreen wiper mechanism - remove and install	65
1.5 Windscreen wiper motor V - disassemble and assemble	66
1.6 Mount (bushing) for the mechanism support - remove and install	67
1.7 Windscreen wiper blade resting position - adjust	68
1.8 Rain sensor and sunlight penetration photosensor G397 - remove and install	68
1.9 Tightening torques - Windscreen wiper system	70
2 Windscreen washer system	71



2.1	Windscreen washer system - assembly overview	71
2.2	Reservoir for the windscreen and rear window washer system - remove and install	72
2.3	Windscreen washer pump V5 and/or Rear window washer pump V13 - remove and install	73
2.4	Windscreen washer system spray nozzles - replace	74
2.5	Windscreen washer system spray nozzles - adjust	74
3	Rear window wiper system	76
3.1	Rear window wiper and washer system - assembly overview	76
3.2	Rear window wiper arm - remove and install	77
3.3	Rear window wiper motor V12 - remove and install	78
3.4	Rear window wiper blade resting position - adjust	78
3.5	Rear window wiper blade - remove and install	79
3.6	Tightening torques - rear window wiper system	79
4	Rear window washer system	80
4.1	Rear window washer system - assembly overview	80
4.2	Rear window washer system spray nozzle - replace	81
4.3	Rear window washer system spray nozzle - adjust	82
94	Lights, bulbs, switches - exterior	83
1	Main headlights	83
1.1	Main headlights - assembly overview	83
1.2	Main Headlights - remove and install	85
1.3	Main headlight lamps (single) - replace	85
1.4	Main headlight lamps (twin) - replace	87
2	Fog lights	91
2.1	Fog lights (Gol / Voyage) - assembly overview	91
2.2	Tail fog lights (Gol / Voyage) - remove and install	92
2.3	Fog lights (Saveiro / Gol Track) - assembly overview	94
2.4	Fog lights (Saveiro / Gol Track) - remove and install	94
2.5	Fog lights (Saveiro / Gol Rallye) - assembly overview	96
2.6	Fog lights (Saveiro / Gol Rallye) - remove and install	97
3	Headlights - check adjustment	99
3.1	Check headlight adjustment (with the new inspection display without 15° adjustment line).	100
3.2	Headlights - adjust	101
4	Side indicator lights	104
4.1	Side indicator lights incorporated to external rear-view mirrors	104
5	Tail lights	105
5.1	Tail lights (Gol) - assembly overview	105
5.2	Tail lights (Voyage) - assembly overview	107
5.3	Tail lights (Saveiro) - assembly overview	110
6	Fog lights	114
6.1	Tail fog light (Voyage) - remove and install	114
7	License plate light	115
7.1	License plate light - remove and install	115
7.2	License plate light X (Gol / Voyage) - replace the bulb	116
7.3	License plate light X (Saveiro) - replace bulb	116
8	Additional brake light	117
8.1	Auxiliary brake light (Gol) - remove and install	117
8.2	Auxiliary brake light (Voyage) - remove and install	118
8.3	Auxiliary brake light (Saveiro) - remove and install	118
9	Switch set	120
9.1	Direction and wiper switches / glasses washer (version 1) - remove and install	120
9.2	Direction and wiper switches / glasses washer (version 2) - remove and install	121



9.3	Connectors pinout in the switch set for turn lights and window wipers/washers	122
10	Steering lock set	123
10.1	Steering lock set - remove and install	123
11	Ignition/starter switch and key cylinder	125
11.1	Key cylinder - remove and install	125
11.2	Ignition switch D (version 1) - remove e install	127
11.3	Ignition switch D (version 2) - remove e install	128
11.4	Ignition switch D - pinout	128
12	Auxiliary parking system	129
12.1	Locating defects and indicating faults	129
12.2	Rear auxiliary parking system - assembly general view	130
12.3	Control unit for parking aid J446 - remove and install	131
12.4	Warning buzzer for rear parking aid H15 - remove and install	132
12.5	Park Assist steering sensor (Gol) - remove and install	132
12.6	Park Assist steering sensor (Voyage) - remove and install	134
12.7	Park Assist steering sensor (Saveiro) - remove and install	135
96	Lights, bulbs, switches - interior	138
1	Internal lights and switches	138
1.1	Radio frame switches - assembly overview	139
1.2	Radio frame switches - remove and install	140
1.3	Switches on the center dash panel frame - assembly overview	157
1.4	Switches on the center dash panel frame - remove and install	158
1.5	Warning lamp switch E3 (with radio frame switches - remove and install	160
1.6	Warning lamp switch E3 (with switches in the center dash panel frame) - remove and install	161
1.7	Passenger side airbags deactivation switch E224 - remove and install	162
1.8	Light switch E1 - remove and install	163
1.9	Right front window activation switch. E40 and/or E41 - remove e install	164
1.10	Switch for int. locking, driver side E150	164
1.11	Rear-view mirror adjustment switch E43 with Switch for rear-view mirror adjustment E48 - remove and install	165
1.12	Front internal lighting switch (door contact) E459 - remove and install	165
1.13	Luggage compartment lighting switch F5 - remove and install	166
1.14	Internal lighting fixture - remove and install	166
1.15	Internal front light W1 - replace	167
1.16	Center reading light W39 and/or W40 - replace	168
1.17	Make-up mirror lighting - remove and install	169
1.18	Make-up mirror lighting lamp L31 - replace	170
1.19	Boot light W3 - remove and install	170
1.20	Luggage Compartment light W3 - replace	171
1.21	Internal rear light W43 - remove and install	171
1.22	Internal rear light W43 - replace bulb	172
2	Horn	174
2.1	Treble tone horn H2 - remove and install	174
3	Immobilizer	176
3.1	Immobilizer control unit J362 - replace	176
3.2	Immobilizer reading coil D2 - remove and install	176
3.3	Ignition key - variable code transponder	176
3.4	Ignition key - adapt to immobilizer	176
3.5	Ignition key - replace battery	177
4	Alarm System	178
4.1	Locating defects and indicating faults	178
4.2	Anti-theft alarm system - activate and deactivate	178
4.3	Ultra-sound sensor for alarm system G209 - remove and install	179



4.4	Alarm system horn H8 - remove and install	179
97 - Wiring		181
1	Fuse and relay support	181
1.1	Fuse and relay support - remove and install	181
2	Boot cover of engine compartment	182
2.1	Boot cover on engine compartment partition panel - remove and install	182
3	Fuse box	184
3.1	Fuse box - remove and install	184
4	Control units	187
4.1	Central control unit for window activation J1015 (ZFH)	188
4.2	Control unit for the on-board system J519 (BFM)	188
4.3	Control unit for exterior mirror tilt-down J351	191