



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 General information on air conditioning</b>	<b>1</b>
1.1 Basics of air conditioning	1
1.2 Vapour pressure table for R134a refrigerant gas	3
1.3 R134a refrigerant gas	4
1.4 Properties of R134a refrigerant gas	5
1.5 Refrigeration system oil	7
1.6 Comfort	8
1.7 Environmental aspects	8
1.8 Air conditioning effects	8
1.9 Safety at work	9
<b>2 General remarks on the refrigerant gas loop</b>	<b>14</b>
2.1 Refrigerant gas loop components	14
2.2 Refrigerant gas loop components	22
2.3 Quick coupling connections in the refrigerant gas loop	23
2.4 Switches and sensors for the refrigerant gas loop and their connections	24
2.5 Electrical components not assembled in the refrigerant gas loop	29
2.6 Pressures and temperatures in the refrigerant gas loop	31
2.7 Refrigerant circuit with expansion valve	31
2.8 Refrigerant circuit with butterfly (restrictor) and collection tank	33
2.9 Checking and measuring work with a pressure gauge	35
2.10 Notes on doing repair work on the refrigerant gas loop	36
<b>3 Legislation and standards</b>	<b>37</b>
3.1 Legislation and standards	37
3.2 Regulations on recycling and disposal	40
3.3 Disposal of cooling agent and cooling machine oils	40
<b>4 Using the climate control recovery, recycling, refilling, and cleaning equipment</b>	<b>41</b>
4.1 Important notes for using the Climate control recovery, recycling and refill set or EQ 7098 VAS 6008	41
4.2 Connect the Climate control recovery, recycling and refill set or EQ 7098 VAS 6008	42
4.3 Empty the refrigerant gas loop with the Climate control recovery, recycling and refill set or EQ 7098 VAS 6008	43
4.4 Fill the refrigerant gas loop with the Climate control recovery, recycling and refill set or EQ 7098 VAS 6008	44
4.5 Introduce refrigerant gas into the tank of the Climate control recovery, recycling and refill set or EQ 7098 VAS 6008	45
4.6 Emptying the tank of the Climate control recovery, recycling and refill set or EQ 7098 VAS 6008	46
<b>5 Checking pressure values in the refrigerant gas loop</b>	<b>47</b>
5.1 Checking pressure values	48
5.2 Verification for vehicles with butterfly (throttle) and collection tank (air conditioning compressor with internal adjustment device)	50
5.3 Verification for vehicles with expansion valve and liquid loop / dryer (air conditioning compressor with internal adjustment device)	53
5.4 Verification for vehicles with expansion valve, liquid tank / dryer and Adjustment valve for the air conditioning compressor N280 (with air conditioning compressor with external adjustment device)	57
5.5 Verification for vehicles with butterfly (throttle), collection tank and regulating valve for the air conditioning compressor N280 (with air conditioning compressor with external adjustment device)	66
<b>6 Detecting leaks in the refrigerant gas loop</b>	<b>72</b>
6.1 Detecting leaks in the refrigerant gas loop with the R134a air conditioning leak detector or EQ 7051 VAG 1796	73
6.2 Detecting leaks in the refrigerant gas loop by pressurizing the system	73



6.3	Detection of leaks in the refrigerant gas loop with the air conditioning recovery, recycling, recharging and cleaning set .....	74
<b>7</b>	<b>Cleaning the refrigerant gas loop</b> .....	<b>77</b>
7.1	Venting the refrigerant gas loop .....	77
7.2	Washing the refrigerant gas loop with R134a refrigerant gas (clean) .....	79
<b>8</b>	<b>Problems</b> .....	<b>85</b>
8.1	Possible problems in the refrigerant circuit .....	85
<b>9</b>	<b>Replacing components</b> .....	<b>87</b>
9.1	Leaking or damaged components (except the compressor, collection tank and liquid tank) ..	87
9.2	Replace the air conditioning compressor .....	88
9.3	Replace the liquid/collection tank and the butterfly (restrictor) .....	89
<b>10</b>	<b>Test equipment and tools</b> .....	<b>91</b>
10.1	List of test equipment, tools, and material .....	91
10.2	Test equipment, tools, and material .....	91