



Contents

00 - Technical data	1
1 Identification	1
1.1 Identification on the gearbox	1
1.2 Prefix, correspondence, gear ratio, filling volume	2
2 Transmission assembly scheme	5
2.1 Nomenclature	5
2.2 Gear ratios	6
3 Gearbox ratio "i"	7
3.1 Gearbox ratio "i" - calculation	7
4 General repair instructions	8
4.1 Gearbox	8
4.2 Gaskets and retainers	8
4.3 Screws, nuts	9
4.4 Roller bearings	9
4.5 Adjustment shims	10
4.6 Synchronizer rings	10
30 - Clutch	11
1 Command system	11
1.1 Command system - component overview	11
1.2 Command pedals - assembly overview	12
1.3 Clutch pedal switch F36 - remove and install	13
1.4 Clutch pedal return spring - remove and install	14
1.5 Clutch pedal support - remove and install	15
1.6 Clutch pedal - remove install	18
1.7 Hydraulic system - assembly overview	20
1.8 Transmitting cylinder - clutch hydraulic drive - remove and install	23
2 Clutch drive mechanism	27
2.1 Clutch drive mechanism - assembly overview	27
2.2 Clutch slave cylinder - remove and install	29
2.3 Clutch drive mechanism - bleed	30
3 Clutch	31
3.1 Clutch - assembly overview	31
3.2 Clutch - repair	32
34 - Controls, housing	34
1 Shift mechanism	34
1.1 Shift mechanism - installation position	34
1.2 Selector mechanism - component overview	36
1.3 Drive cables	37
1.4 Handle and boot on the gear lever - assembly overview	45
1.5 Handle and boot on the gear lever - remove and install	45
1.6 Gear shift lever and shifting mechanism - remove and install	47
1.7 Gearshift lever and mechanism - repair	50
1.8 Lever and Gear shifting mechanism - adjusting	53
1.9 Selector and lever - functional check	55
2 Transmission - remove and install	56
2.1 Gearbox for vehicles with engines (CCRA, CFZA, CPBA) - remove and install	56
2.2 Gearbox for vehicles with engines (CNXA) - remove and install	72
2.3 Gearbox - transport	83
3 Gearbox oil level	85
3.1 Oil level - check	85



3.2	Oil level - replenish	85
4	Gearbox - disassemble and assemble	87
4.1	Gearbox - overview	87
4.2	gearbox - assembly overview	88
4.3	Gearbox housing cover and 5th gear	88
4.4	Clutch housing	90
4.5	Input shaft, planet pinion, differential, selection mechanism and selector forks	91
4.6	Input shaft, planet pinion, differential, selection mechanism and selector forks - disassemble and assemble	93
5	Gearbox and clutch housings	101
5.1	Transmission and clutch housings - repair	101
6	Gear selection mechanism - adjust	107
6.1	Gear selection mechanism - disassemble and assemble	107
7	Selector forks	110
7.1	Selector forks - disassemble and assemble	110
35 - Gears, shafts		115
1	Input shaft	115
1.1	Primary shaft - general overview of assembly	115
1.2	Input shaft - disassemble and assemble	118
2	Planet pinion	127
2.1	Pinion shaft - general overview of assembly	127
2.2	Planet pinion - disassemble and assemble	130
39 - Final drive - differential		136
1	Drive flange	136
1.1	Left drive flange retainer (left side) - replace	136
1.2	Drive flange retainer (right side) - replace	139
2	Differential	142
2.1	Differential - general overview of assembly	142
2.2	Differential - disassemble and assemble	144
2.3	Differential - adjust	150