



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Gearbox identification | 1 |
| 1.2 Prefix, correspondence, and gear ratio | 1 |
| 1.3 Gearbox oil, supply capacity | 2 |
| 2 Transmission assembly scheme | 3 |
| 2.1 Nomenclature | 3 |
| 2.2 Gear ratios | 4 |
| 3 Gearbox ratio "i" | 5 |
| 3.1 Gear ratio calculation "i" | 5 |
| 4 General repair instructions | 6 |
| 4.1 Gearbox | 6 |
| 4.2 Gaskets and retainers | 6 |
| 4.3 Screws, nuts | 7 |
| 4.4 Roller bearings | 7 |
| 4.5 Adjustment shims | 8 |
| 4.6 Synchronizer rings | 8 |
| 30 - Clutch | 9 |
| 1 Hydraulic system | 9 |
| 1.1 Hydraulic system - assembly overview | 9 |
| 1.2 Clutch slave cylinder - remove and install | 10 |
| 2 Clutch drive mechanism | 13 |
| 2.1 Clutch drive mechanism - assembly overview | 13 |
| 3 Clutch | 15 |
| 3.1 Clutch - assembly overview | 15 |
| 3.2 Clutch - repair | 17 |
| 34 - Controls, housing | 19 |
| 1 Vehicle diagnostic and service information system | 19 |
| 1.1 Diagnosis, measurement and information system - connect | 19 |
| 2 Electronic components and installation locations | 20 |
| 2.1 Electric and electronic components - overview | 20 |
| 2.2 "Tiptronic" upshift switch on the steering wheel E438 and/or "Tiptronic" downshift switch on the steering wheel E439 | 22 |
| 2.3 Sensor 2 for gear detection G616 | 23 |
| 2.4 Gearbox input speed sender G182 | 24 |
| 2.5 Gear detection sensor G604 | 25 |
| 2.6 Diagnosis socket | 26 |
| 2.7 Selector lever position display Y6 | 27 |
| 2.8 Automatic gearbox control unit J217 | 27 |
| 3 Selector lever | 29 |
| 3.1 Selector lever - assembly overview | 29 |
| 3.2 Selector lever handle - remove and install | 30 |
| 3.3 Upper selector lever cover - remove and install | 31 |
| 3.4 Selector lever - remove and install | 32 |
| 3.5 Lower selector lever cover - remove and install | 33 |
| 3.6 Selection lever boot - adjust | 34 |
| 3.7 Selector lever operation - check | 35 |
| 4 Gear selection mechanism - adjust | 36 |
| 4.1 Gear selection mechanism - assembly overview | 36 |
| 4.2 Gear selection mechanism - remove and install | 38 |



| | | |
|--|---|------------|
| 4.3 | Gear selection mechanism - components | 46 |
| 4.4 | Gear selection mechanism - repair | 49 |
| 5 | Transmission - remove and install | 61 |
| 5.1 | Gearbox for vehicles with engines (CCRA, CFZA) - remove and install | 61 |
| 5.2 | Gearbox for vehicles with engines (CNXA) - remove and install | 73 |
| 5.3 | Gearbox - transport | 86 |
| 6 | Gearbox - disassemble and assemble | 88 |
| 6.1 | Gearbox - overview | 88 |
| 6.2 | gearbox - assembly overview | 89 |
| 6.3 | Gearbox housing cover and 5th gear | 89 |
| 6.4 | Clutch housing | 91 |
| 6.5 | Input shaft, planet pinion, differential, selection mechanism and selector forks | 92 |
| 6.6 | Input shaft, planet pinion, differential, selection mechanism and selector forks - disassemble and assemble | 94 |
| 7 | Gearbox oil level | 102 |
| 7.1 | Oil level - check | 102 |
| 7.2 | Oil level - replenish | 102 |
| 8 | Gear selector mechanism oil level | 104 |
| 8.1 | Oil level - check | 104 |
| 8.2 | Oil level - replenish | 105 |
| 9 | Gearbox and clutch housings | 106 |
| 9.1 | Transmission and clutch housings - repair | 106 |
| 10 | Selector forks | 112 |
| 10.1 | Selector forks - disassemble and assemble | 112 |
| 35 - Gears, shafts | 117 | |
| 1 | Input shaft | 117 |
| 1.1 | Primary shaft - general overview of assembly | 117 |
| 1.2 | Input shaft - disassemble and assemble | 120 |
| 2 | Planet pinion | 129 |
| 2.1 | Pinion shaft - general overview of assembly | 129 |
| 2.2 | Planet pinion - disassemble and assemble | 132 |
| 39 - Final drive - differential | 138 | |
| 1 | Drive flange | 138 |
| 1.1 | Left drive flange retainer (left side) - replace | 138 |
| 1.2 | Drive flange retainer (right side) - replace | 141 |
| 2 | Differential | 144 |
| 2.1 | Differential - general overview of assembly | 144 |
| 2.2 | Differential - disassemble and assemble | 147 |
| 2.3 | Differential - adjust | 153 |