



Contents

00 - Technical data	1
1 — Change history —	1
2 Identification	2
2.1 Brake PR number correspondence	2
3 Technical data	4
3.1 Brake technical data	4
4 Brake Test	10
4.1 General information	10
4.2 Information about the test	10
5 Safety indications	11
5.1 Safety measures for test drives with testing and measuring equipment	11
45 - Anti-lock brake system	12
1 General information	12
1.1 General information on the anti-lock braking system (ABS)	12
1.2 Information on repair works on the ABS	13
1.3 Connect Vehicle diagnostic, testing and information system VAS 5051A /52 and select functions	14
2 Assembly location overview	16
2.1 ABS/Bosch - assembly location overview	16
3 Hydraulic unit, brake servo/master cylinder	19
3.1 Hydraulic unit, brake servo/master cylinder - assembly overview	19
3.2 Hydraulic unit connections	22
3.3 Command unit for hydraulic unit - remove and install	23
4 Fault indication via control lights	29
4.1 Control lights	29
5 Sensors	32
5.1 ABS system components on the front axle - assembly overview	32
5.2 ABS system components on the rear axle - assembly overview	36
5.3 Front axle speed sensor - remove and install	38
5.4 Speed sensor on rear axle - remove and install	39
5.5 Front speed sensor cables - remove and install	41
5.6 Rear speed sensor cables (Gol e Voyage) - remove and install	47
46 - Brakes - mechanism	51
1 Front wheel brake	51
1.1 Front brake- assembly overview	51
1.2 Brake pads - remove and install	57
1.3 Brake caliper - remove and install	62
1.4 Brake disc - remove and install	67
1.5 Brake disk (knocking) - check	68
1.6 Brake disc - check	69
2 Rear wheel brake	72
2.1 Rear wheel brake, drum brake - assembly overview	72
2.2 Rear wheel brake, disc brake - assembly overview	76
2.3 Brake pedal - assembly overview	80
2.4 Brake pads - remove and install	83
2.5 Brake caliper - remove and install	86
2.6 Brake shoes - remove and install	88
3 Handbrake	101
3.1 Handbrake - assembly overview	101



3.2	Handbrake cable - assembly overview	102
3.3	Handbrake lever - remove and install	104
3.4	Handbrake - adjust	105
3.5	Handbrake cable - remove and install	108
3.6	Handbrake switch - remove and install	114
4	Brake pedal	116
4.1	Brake pedal - assembly overview	116
4.2	Servo brake pedal - separate	117
4.3	Fasten the brake pedal to the servo brake	118
4.4	Pedal set - remove and install	118
4.5	Brake pedal - remove and install	119
4.6	Brake light sensor F - remove and install	120
47 - Brakes - hydraulics	121	
1	Front brake caliper	121
1.1	Front brake caliper - assembly overview	121
1.2	Plunger for front brake caliper - remove and install	125
2	Rear brake caliper	130
2.1	Rear brake caliper - assembly overview	130
2.2	Plunger for rear brake caliper - remove and install	131
2.3	Tightness assessment	134
3	Brake servo/brake master cylinder	136
3.1	Brake servo/ brake cylinder - assembly overview	136
3.2	Brake servo - remove and install	137
3.3	Flexible vacuum tube	141
4	Vacuum system - Check	143
4.1	Test instructions	143
4.2	Servo brake vacuum measurement device VAS 6721 - connect	143
4.3	Vacuum generation control	145
4.4	Leak control	146
4.5	Vacuum generation with the manual vacuum pump VAS 6213	147
4.6	Retention valve - check	149
5	Brake pipes	150
5.1	Brake piping arrangement	150
6	Brake system	151
6.1	General brake fluid indications	151
6.2	Bleed the brake system with the filling and bleeding equipment	151
6.3	Later bleeding	152
6.4	Brake system - bleed when the tank is empty	152