



Contents

00 - Technical data	1
1 Assessment of crashed vehicles	1
2 General guidelines	3
2.1 Lift the axle with the vehicle unloaded (empty)	3
3 Repair instructions	9
3.1 Notes related to installation works in the power steering box	9
4 Technical data	10
4.1 Chassis	10
4.2 Steering	10
40 - Front suspension	11
1 Front suspension	11
1.1 Front suspension - general assembly overview	11
2 Auxiliary frame (assembly mounting)	13
2.1 Auxiliary frame (assembly mounting), anti-roll bar, wishbones - assembly overview	13
2.2 Thread in longitudinal member - repair	16
2.3 Auxiliary frame (assembly mounting) - remove and install	16
2.4 Auxiliary frame (assembly mounting) - position	20
3 Front suspension column	25
3.1 Front suspension column - general assembly overview	25
3.2 Suspension strut - remove and install	27
3.3 Front suspension spring - remove and install	32
4 Lower wishbone, swivel joint	36
4.1 Wishbone (transversal) - remove and install	36
4.2 Swivel joint - check for clearance	39
4.3 Swivel guide - remove and install	40
4.4 Swivel guides - installation position	46
4.5 Wishbone - replace front metal-rubber bearing	46
4.6 Wishbone - replace the rear metal-rubber bearing	50
5 Wheel roller bearings	54
5.1 Wheel roller bearings - general overview of assembly	54
5.2 Hub and wheel bearing - remove and install	56
6 Constant velocity joint drive shaft - remove and install	75
6.1 Drive shaft - assembly overview	75
6.2 Fastening nut (dodecahedron) of the drive shaft - loosen and tighten	79
6.3 Drive shaft - remove and install	81
6.4 Articulated shaft - repairing	92
7 Anti-roll bar	105
7.1 Anti-roll bar - remove and install	105
7.2 Coupling rod - remove and install	108
42 - Rear suspension	110
1 Rear axle	110
1.1 Rear suspension - general overview of assembly	110
1.2 Rear suspension (Gol and Voyage) - remove and install	114
1.3 Rear axle - remove and install	121
2 Axle beam	131
2.1 Split metal/rubber bearing on the rear axle - remove and install	131
3 Suspension strut/shock absorber, spring	146
3.1 Shock absorber (Saveiro) - assembly overview	146
3.2 Shock absorber - remove and install	147



3.3	Coil spring - remove and install	152
4	Wheel roller bearing	157
4.1	Wheel bearings (Saveiro) (disc brakes) - assembly overview	157
4.2	Wheel hub/wheel bearing unit - remove and install	159
4.3	Shaft end - check	165
44	Wheels, tyres, vehicle geometry	167
1	Wheels, tyres	167
1.1	Wheel bolts - tightening torque	167
2	Vehicle alignment	168
2.1	Miscellaneous	168
2.2	Checking conditions:	169
2.3	Preparation for measurement	170
2.4	Sequence for vehicle alignment	170
2.5	Nominal values for vehicle alignment	171
2.6	Vehicles in "zero" transverse tilting position	172
2.7	Camber on front axle - adjust	174
2.8	Camber on rear axle - adjust	174
2.9	Convergence on front axle - adjust	174
2.10	Convergence on rear axle - adjust	175
2.11	Left and right-hand steering - check	176
48	Steering	178
1	Steering wheel	178
1.1	Steering wheel - assembly overview	178
1.2	Steering wheel - remove and install	178
2	Steering column	182
2.1	Steering support and column - assembly overview	182
2.2	Steering column - remove and install	184
3	Steering box	197
3.1	Steering box - assembly overview	197
3.2	Steering rack- remove and install	199
3.3	Track rods - remove and install	211
3.4	Folding boot - assembly	214
3.5	Clearance, fastening and protective boots of track rod terminals - check	215
3.6	Correspondence of track rod terminals	216
3.7	Centre steering rack position - determine	217
3.8	Steering box - repair	218
4	Power steering	223
4.1	Hydraulic piping, reservoir - assembly overview	223
4.2	Hydraulic pump - assembly overview	232
4.3	Power steering system fluid - replenish	235
4.4	Hydraulic pump operating pressure - check	237
4.5	Poly-V belt (elastic) for power steering pump- remove and install	251
4.6	Hydraulic pump - remove and install	256