



## Contents

<b>27 - Starter, current supply, CCS</b> .....	<b>1</b>
<b>1 Battery</b> .....	<b>1</b>
1.1 Battery A - assembly overview .....	2
1.2 Battery A - disconnect and connect .....	2
1.3 Battery A - remove and install .....	6
1.4 Battery Console A - remove and install .....	8
1.5 Tightening torques - battery .....	10
<b>2 Starter</b> .....	<b>11</b>
2.1 Starter B - remove and install .....	12
2.2 Starter B (Manufacturer Valeo) - disassemble and assemble .....	13
2.3 Starter B (Manufacturer Bosch) - disassemble and assemble .....	18
2.4 Starter (vehicles with CNXA, CWSA engine) - assembly overview .....	32
2.5 Tightening torques - Starter .....	34
<b>3 Alternator</b> .....	<b>35</b>
3.1 Generator (Alternator) C - cable fastening (B+) .....	35
3.2 Alternator C (vehicles with EA111 engines) - overall assembly .....	36
3.3 AlternatorC (vehicles with EA111 engines) - remove and install .....	37
3.4 Alternator C(vehicles with EA211 engines)- remove and install .....	41
3.5 Generator (Alternator) C - check Poly-V belt .....	43
3.6 Generator (Alternator) C - replace the Poly-V belt pulley .....	43
3.7 Voltage regulator C1 (Manufacturer Bosch) - disassemble and assemble .....	45
3.8 Voltage regulator C1 (Manufacturer Valeo) - disassemble and assemble .....	47
3.9 Tightening torques - Alternator .....	50
<b>90 - Gauges, instruments</b> .....	<b>51</b>
<b>1 Instrument cluster</b> .....	<b>51</b>
1.1 Locating defects and indicating faults .....	51
1.2 Instrument cluster K - replace .....	52
1.3 Instrument cluster K - remove and install .....	54
1.4 Instrument cluster K - description of rear part .....	57
1.5 Instrument cluster K - pin assignment .....	59
1.6 Instrument cluster K - control light symbols .....	59
<b>2 Service interval indication</b> .....	<b>63</b>
2.1 Reset service interval indicator .....	63
<b>3 Horn</b> .....	<b>64</b>
3.1 Treble tone horn H2 - remove and install .....	64
<b>92 - Windscreen wash/wipe system</b> .....	<b>66</b>
<b>1 Windscreen wiper system</b> .....	<b>66</b>
1.1 Windscreen wiper system (version 1) - assembly overview .....	67
1.2 Windscreen wiper blade (version 1) - remove and install .....	68
1.3 Windscreen wiper system (version 2) - assembly overview .....	69
1.4 Windscreen wiper blade (version 2) - remove and install .....	70
1.5 Windscreen wiper blade and arm set - remove and install .....	70
1.6 Windscreen wiper mechanism - remove and install .....	73
1.7 Windscreen wiper motor V - disassemble and assemble .....	74
1.8 Mount (bushing) for the mechanism support - remove and install .....	75
1.9 Windscreen wiper blade resting position (version 1) - adjust .....	76
1.10 Windscreen wiper blade resting position (version 2) - adjust .....	77
1.11 Blade application angle on windscreen (version 1) - adjust .....	78
1.12 Rain and light sensor G397 - remove and install .....	80
1.13 Tightening torques - Windscreen wiper system .....	82



<b>2</b>	<b>Windscreen washer system</b> .....	<b>83</b>
2.1	Windscreen washer system - assembly overview .....	83
2.2	Reservoir for the windscreen and rear window washer system - remove and install .....	84
2.3	Windscreen washer pump V5 and/or Rear window washer pump V13 - remove and install ..	85
2.4	Windscreen washer system spray nozzles - replace .....	86
2.5	Windscreen washer system spray nozzles - adjust .....	87
<b>3</b>	<b>Rear window wiper system</b> .....	<b>89</b>
3.1	Rear window wiper and washer system - assembly overview .....	89
3.2	Rear window wiper arm - remove and install .....	90
3.3	Rear window wiper motor V12 - remove and install .....	91
3.4	Rear window wiper blade resting position - adjust .....	92
3.5	Rear window wiper blade - remove and install .....	92
3.6	Tightening torques - rear window wiper system .....	93
<b>4</b>	<b>Rear window washer system</b> .....	<b>94</b>
4.1	Rear window washer system - assembly overview .....	94
4.2	Rear window washer system spray nozzle - replace .....	95
<b>94</b>	<b>Lights, bulbs, switches - exterior</b> .....	<b>97</b>
<b>1</b>	<b>Main headlights</b> .....	<b>97</b>
1.1	Main headlights - assembly overview .....	97
1.2	Main Headlights - remove and install .....	99
1.3	Main headlight lamps (single) - replace .....	100
1.4	Main headlight lamps (twin) - replace .....	102
<b>2</b>	<b>Fog lights</b> .....	<b>106</b>
2.1	Fog lights (Gol/Voyage) - assembly overview .....	106
2.2	Fog lights - assembly overview .....	107
2.3	Fog lights (Gol/Voyage) - remove and install .....	108
2.4	Fog lights - remove and install .....	110
2.5	Auxiliary headlights (Saveiro Cross) - assembly overview .....	112
2.6	Auxiliary headlights (Saveiro Cross) - remove and install .....	112
<b>3</b>	<b>Headlights - check adjustment</b> .....	<b>116</b>
3.1	Check headlight adjustment (with the new inspection display without 15° adjustment line).	117
3.2	Headlights - adjust .....	119
<b>4</b>	<b>Side indicator lights</b> .....	<b>122</b>
4.1	Side indicator lights incorporated to external rear-view mirrors .....	122
<b>5</b>	<b>Tail lights</b> .....	<b>123</b>
5.1	Tail lights (Gol) - assembly overview .....	123
5.2	Tail lights (Voyage) - assembly overview .....	126
5.3	Tail lights (Saveiro) - assembly overview .....	130
5.4	Tail fog light (Voyage) - remove and install .....	133
<b>6</b>	<b>License plate light</b> .....	<b>135</b>
6.1	Number plate light - remove and install .....	135
6.2	License plate light X (Gol / Voyage) - replace the bulb .....	136
6.3	License plate light X (Saveiro) - replace bulb .....	136
<b>7</b>	<b>Auxiliary brake light</b> .....	<b>138</b>
7.1	Auxiliary brake light (Gol) - remove and install .....	138
7.2	Auxiliary brake light (Voyage) - remove and install .....	139
7.3	Auxiliary brake light (Saveiro) - remove and install .....	140
<b>8</b>	<b>Switch set</b> .....	<b>142</b>
8.1	Direction and wiper switches / glasses washer (version 1) - remove and install .....	142
8.2	Direction and wiper switches / glasses washer (version 2) - remove and install .....	143
8.3	Connectors pinout in the switch set for turn lights and window wipers/washers .....	144
<b>9</b>	<b>Steering lock set</b> .....	<b>145</b>
9.1	Steering lock housing - remove and install .....	145



<b>10</b>	<b>Ignition/starter switch and key cylinder</b>	<b>147</b>
10.1	Key cylinder - remove and install	147
10.2	Ignition switch D (version 1) - remove e install	149
10.3	Ignition switch D (version 2) - remove e install	150
10.4	Ignition switch D - pinout	151
<b>11</b>	<b>Auxiliary parking system</b>	<b>152</b>
11.1	Locating defects and indicating faults	152
11.2	Rear auxiliary parking system - assembly general view	153
11.3	Control unit for parking aid J446 - remove and install	154
11.4	Warning buzzer for rear parking aid H15 - remove and install	155
11.5	Rear parking aid sensor (Gol) - remove and install	156
11.6	Rear parking aid sensor (Voyage) - remove and install	158
11.7	Park Assist steering sensor (Saveiro) - remove and install	160
11.8	Front parking aid sensor (Saveiro Cross) - remove and install	162
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>164</b>
<b>1</b>	<b>Internal lights and switches</b>	<b>164</b>
1.1	Radio frame switches (version 1) - assembly overview	165
1.2	Central diffuser frame switches (version 2) - assembly overview	167
1.3	Radio frame switches - remove and install	168
1.4	Central diffuser frame switches - remove e install	189
1.5	Switches on the centre dash panel frame - assembly overview	190
1.6	Switches on the centre dash panel frame - remove and install	191
1.7	Warning lamp switch E3 (with radio frame switches - remove and install	194
1.8	Warning lamp switch E3 (with switches in the centre dash panel frame) - remove and install	195
1.9	Passenger side airbags deactivation switch E224 - remove and install	196
1.10	Light switch E1 - remove and install	197
1.11	Right front window activation switch. E40 and/or E41 - remove e install	198
1.12	Driver side interior locking switch E150 - remove and install	199
1.13	Rear-view mirror adjustment switch E43 with Switch for rear-view mirror adjustment E48 - remove and install	199
1.14	Front internal lighting switch (door contact)E459 - remove and install	200
1.15	Luggage compartment lighting switch F5 - remove and install	200
1.16	Internal lighting fixture - remove and install	201
1.17	Front interior light W1 - replace	202
1.18	Centre reading light W39 and/or W40 - replace	203
1.19	Make-up mirror lighting - remove and install	204
1.20	Make-up mirror lighting lamp L31 - replace	205
1.21	Boot light W3 - remove and install	205
1.22	Luggage Compartment light W3 - replace	206
1.23	Internal rear light W43 - remove and install	207
1.24	Internal rear light W43- replace bulb	208
<b>2</b>	<b>Immobilizer</b>	<b>210</b>
2.1	Immobilizer control unit J362 - replace	210
2.2	Immobilizer reading coil D2 - remove and install	210
2.3	Ignition key - variable code transponder	210
2.4	Ignition key - adapt to immobilizer	210
2.5	Ignition key - replace battery	211
<b>3</b>	<b>Alarm System</b>	<b>212</b>
3.1	Locating defects and indicating faults	212
3.2	Anti-theft alarm system - activate and deactivate	213
3.3	Ultra-sound sensor for alarm system G209 - remove and install	213
3.4	Alarm system horn H8 - remove and install	214
<b>4</b>	<b>12 Volt socket</b>	<b>216</b>



4.1	12 volt socket U5 - assembly overview	216
4.2	Electric socket 2 - 12V U18 - assembly overview	216
4.3	12 volt socket U5 - remove and install	218
4.4	12 volt Socket U18 (version 1) - remove e install	221
4.5	12 volt Socket U18 (version 2) - remove e install	224
<b>97 - Wiring</b>		<b>225</b>
<b>1</b>	<b>Fuse and relay support</b>	<b>225</b>
1.1	Fuse and relay support - remove and install	225
<b>2</b>	<b>Boot cover of engine compartment</b>	<b>226</b>
2.1	Boot cover on engine compartment partition panel - remove and install	226
<b>3</b>	<b>Fuse box</b>	<b>228</b>
3.1	Fuse box - remove and install	228
<b>4</b>	<b>Control units</b>	<b>231</b>
4.1	Central control unit for window activation J1015 (ZFH)	232
4.2	Control unit for the on-board system J519 (BFM)	232
4.3	Control unit for exterior mirror tilt-down J351	235