



Contents

68 - Interior equipment	1
1 — Change history —	1
2 Interior mirror	2
2.1 Interior mirror - remove and install	2
2.2 Interior rear-view mirror support - fasten	2
2.3 Internal rearview mirror with automatic anti-glare - assembly overview	3
2.4 Internal rearview mirror with automatic anti-glare - assembly overview	4
2.5 Internal rearview mirror with automatic anti-glare - remove and install	5
2.6 Fastening support of mirror with automatic anti-glare (with rain sensor) - install	6
2.7 Automatic anti-dazzle interior mirror (with rain sensor) - assembly overview	9
2.8 Internal rear-view mirror with automatic anti-glare (with rain sensor) - remove and install	9
3 Object compartments, covers and lids	11
3.1 Centre console - general assembly overview	11
3.2 Centre console - remove and install	12
3.3 Centre console (automated transmission) - assembly overview	14
3.4 Centre console (automated transmission) - remove and install	15
3.5 Rear console - assembly overview	18
3.6 Object compartment on B-pillar (Saveiro “extended cab”) - assembly overview	21
3.7 B-pillar object compartment (Saveiro “extended cab”) - remove and install	21
3.8 Glove box	23
3.9 Coat hook holder (Saveiro) - assembly overview	29
3.10 Coat hook holder (Saveiro) - remove and install	30
3.11 Dash panel centre frame - remove and install	30
3.12 Dash panel centre frame (with RCD 320G radio) - remove and install	32
3.13 Radio trim - remove and install	33
3.14 Net partition	33
4 sun visor	38
4.1 Sun visor - assembly overview	38
4.2 Sun visor - remove and install	38
5 Roof grab handles	40
5.1 Roof grab handle - remove and install	40
69 - Passenger protection	41
1 Seat belts - general information	41
1.1 Safety measures for belt tensioner	42
1.2 Special seat belt tensioner unit instructions	43
1.3 belt tensioner - check	43
1.4 Storage, transportation and disposal of pre-tensioner units	43
2 Seat belts - check	44
2.1 Check points	44
3 Seat belts	48
3.1 Front seat belt (“2-door” Gol with pre-tensioner) - assembly overview	48
3.2 Front seat belt (“2-door” Gol with pre-tensioner) - remove and install	49
3.3 Front seat belt (“2-door” Gol without pre-tensioner) - assembly overview	51
3.4 Front seat belt (“2-door” Gol without pre-tensioner) - remove and install	51
3.5 Front seat belt (“4-door” Gol/Voyage with pre-tensioner) - assembly overview	53
3.6 Seat belt (“4-door” Gol/Voyage with pre-tensioner) - remove and install	54
3.7 Front seat belt (“4-door” Gol/Voyage without pre-tensioner) - assembly overview	57
3.8 Front seat belt (“4-door” Gol/Voyage without pre-tensioner) - remove and install	57
3.9 Front seat belt (Saveiro “single cab” with pre-tensioner) - assembly overview	60
3.10 Front seat belt (Saveiro “single cab” with pre-tensioner) - remove and install	60
3.11 Front seat belt (Saveiro “single cab” without pre-tensioner) - assembly overview	63



3.12	Front seat belt (Saveiro “single cab” without pre-tensioner) - remove and install	63
3.13	Front seat belt (Saveiro “extended cab” with pre-tensioner) - assembly overview	66
3.14	Front seat belt (Saveiro “extended cab” with pre-tensioner) - remove and install	66
3.15	Front seat belt (Saveiro “extended cab” without pre-tensioner) - assembly overview	69
3.16	Front seat belt (Saveiro “extended cab” without pre-tensioner) - remove and install	70
3.17	Front seat belt (Saveiro “double cab”) - assembly overview	71
3.18	Front seat belt (Saveiro “double cab”) - remove and install	72
3.19	Height adjuster - remove and install	74
3.20	Front seat belt lower fastening point (“2-door” Gol) - remove and install	75
3.21	Front seat belt lower fastening point (“4-door” Gol/Voyage) - remove and install	76
3.22	Front seat belt lower fastening point (Saveiro “single cab”) - remove and install	77
3.23	Front seat belt lower fastening point (Saveiro “extended cab”) - remove and install	78
3.24	Front seat belt lower fastening point (Saveiro “double cab”) - remove and install	79
3.25	Fastening of the front belt - remove and install	80
3.26	Back seat belt without retractor (“2-door” Gol) - assembly overview	81
3.27	Rear seat belts without automatic retractor (“2-door” Gol) - remove and install	82
3.28	Rear seat belts with automatic retractor (“2-door” Gol) - assembly overview	83
3.29	Rear seat belts with automatic retractor (“2-door” Gol) - remove and install	84
3.30	Rear seat belts (“4-door” Gol) - assembly overview	86
3.31	Rear seat belts with automatic retractor (“4-door” Gol) - remove and install	86
3.32	Rear seat belts without automatic retractor (“4-door” Gol) - remove and install	88
3.33	Rear seat belts (Voyage) - assembly overview	90
3.34	Rear seat belts with automatic retractor (Voyage) - remove and install	91
3.35	Rear seat belts without automatic retractor (Voyage) - remove and install	93
3.36	Rear seat 3 point belts and abdominal strap (Saveiro “double cab”) - assembly overview	95
3.37	Rear seat belts (Saveiro “double cab”) - remove and install	95
3.38	Rear seat belt lower fastening point (“2-door” Gol) - remove and install	99
3.39	Rear seat belt lower fastening point (“4-door” Gol/Voyage) - remove and install	101
3.40	Rear seat belt lower fastening point (Saveiro “double cab”) - remove and install	102
3.41	Lap belt with double latch (Gol/Voyage) - remove and install	103
3.42	Abdominal belt with double latch (Saveiro “double cab”) - remove and install	105
4	Child seat anchors	107
4.1	Rear child seat anchors - assembly overview — Gol	107
4.2	Rear child seat anchors - assembly overview — Voyage	107
4.3	Top Tether - remove and install	108
5	Airbag	110
5.1	Installation locations - assembly overview	110
5.2	Safety measures for working with airbags	111
5.3	Storage, transportation and disposal of airbag units	113
5.4	Airbag triggers after an accident - replace	113
5.5	Triggering device for driver's airbag N95 - identify	114
5.6	Triggering device for driver's airbag N95 - remove and install	115
5.7	Ignition device for driver's airbag N95 (with multifunction steering wheel) - remove and install	122
5.8	Connector of the airbag coil and return spring with sliding ring F138 (version 1) - remove and install	129
5.9	Connector of the airbag coil and return spring with sliding ring F138 (version 2) - remove and install	131
5.10	Triggering device 1 for front passenger's airbag N131 - remove and install	132
5.11	Airbag control unit J234 - remove and install	137
5.12	Components - adapting/verifying	140
70	Trim, insulation	142
1	Dash panel	142
1.1	Dash panel - remove and install	142
1.2	Dash panel cross member - remove and install	145



1.3	Side support for dash panel support - remove and install	152
1.4	(Fixed) upper steering column lining - remove and install	153
1.5	(Fixed) lower steering column lining - remove and install	154
1.6	Upper steering column lining (with adjustment) - remove and install	156
1.7	Lower steering column lining (with adjustment) - remove and install	157
2	Doors' linings (2 doors)	160
2.1	Door trim - assembly overview	160
2.2	Door lining - remove and install	160
3	Doors' linings (4 doors)	164
3.1	Front door lining - assembly overview	164
3.2	Front door lining - remove and install	164
3.3	Rear door lining - assembly overview	167
3.4	Rear door lining - remove and install	167
3.5	Escutcheon (with locking rod) - remove and install	170
3.6	Escutcheon (without locking rod) - remove and install	171
4	Lining of columns and sides	173
4.1	A-pillar lining - remove and install	173
4.2	B-pillar upper lining ("2-door" Gol) - assembly overview	174
4.3	Upper B-pillar lining ("2-door" Gol) - remove and install	175
4.4	B-pillar upper lining ("4-door" Gol/Voyage) - assembly overview	176
4.5	Upper B-pillar lining ("4-door" Gol/Voyage) - remove and install	176
4.6	B-pillar upper lining (Saveiro "extended cab") - assembly overview	177
4.7	B-pillar upper lining (Saveiro "extended cab") - remove and install	178
4.8	Upper B-pillar lining (Saveiro "double cab") - assembly overview	180
4.9	Upper B-pillar lining (Saveiro "double cab") - remove and install	181
4.10	B-pillar lower lining ("4-door" Gol/Voyage) - assembly overview	182
4.11	Lower B-pillar lining ("4-door" Gol/Voyage) - remove and install	182
4.12	B-pillar lower lining (Saveiro "single cab") - assembly overview	183
4.13	B-pillar lower lining (Saveiro "single cab") - remove and install	184
4.14	B-pillar lower lining (Saveiro "extended cab") - assembly overview	185
4.15	B-pillar lower lining (Saveiro "extended cab") - remove and install	186
4.16	C-pillar upper lining ("2-door" Gol) - assembly overview	187
4.17	Upper C-pillar lining ("2-door" Gol) - remove and install	188
4.18	C-pillar upper lining ("4-door" Gol) - assembly overview	191
4.19	Upper C-pillar lining ("4-door" Gol) - remove and install	192
4.20	C-pillar upper lining (Voyage) - assembly overview	196
4.21	C-pillar upper lining (Voyage) - assembly overview	197
4.22	Upper C-pillar lining (Saveiro "double cab") - assembly overview	199
4.23	Upper C-pillar lining (Saveiro "double cab") - remove and install	199
4.24	C-pillar lower lining - assembly overview	201
4.25	C-pillar lower lining - remove and install	201
4.26	Cross member upper lining (Saveiro "extended cab") - assembly overview	202
4.27	Cross member upper lining (Saveiro "extended cab") - remove and install	203
4.28	Cross member lower lining (Saveiro "extended cab") - assembly overview	204
4.29	Cross member bottom trim (Saveiro "extended cab") - remove and install	205
4.30	Side lining ("2-door" Gol) - assembly overview	206
4.31	Side lining ("2-door" Gol) - remove and install	208
4.32	Side lining (Saveiro "double cab") - assembly overview	211
4.33	Side lining (Saveiro "double cab") - remove and install	212
5	Linings of the luggage compartment	215
5.1	Rear lid lining (Gol) - assembly overview	215
5.2	Rear lid lining (Gol) - remove and install	215
5.3	Rear lid lining (Voyage) - assembly overview	217
5.4	Rear lid lining (Voyage) - remove and install	218
5.5	Rear lid tail light covers (Voyage) - assembly overview	219



5.6	Rear lid tail light covers (Voyage) - remove and install	220
5.7	Rear lid lining (Saveiro) - assembly overview	221
5.8	Rear lid lining (Saveiro) - remove and install	222
5.9	Luggage compartment cover (Gol) - remove and install	223
5.10	Luggage compartment cover (Voyage) - assembly overview	224
5.11	Luggage compartment cover (Voyage) - remove and install	225
5.12	Rear panel lining - remove and install	226
5.13	Side luggage compartment lining (Gol) - assembly overview	227
5.14	Luggage compartment side lining (Gol) - remove and install	227
5.15	Luggage compartment side lining (Voyage) - assembly overview	229
5.16	Luggage compartment side lining (Voyage) - remove and install	230
6	Luggage compartment tray	233
6.1	Luggage compartment tray (Voyage) - assembly overview	233
6.2	Luggage compartment tray (Voyage) - remove and install	233
7	Roof lining	236
7.1	Moulded headliner ("2-door" Gol) - assembly overview	236
7.2	Moulded headliner ("2-door" Gol) - assembly overview	236
7.3	Moulded headliner ("4-door" Gol) - assembly overview	238
7.4	Moulded headliner ("4-door" Gol) - assembly overview	238
7.5	Moulded headliner (Voyage) - assembly overview	240
7.6	Moulded headliner (Voyage) - remove and install	241
7.7	Moulded headliner (Saveiro "single cab") - assembly overview	242
7.8	Moulded headliner (Saveiro "single cab") - remove and install	243
7.9	Moulded headliner (Saveiro "extended cab") - assembly overview	244
7.10	Moulded headliner (Saveiro "extended cab") - remove and install	245
7.11	Moulded headliner (Saveiro "double cab") - assembly overview	246
7.12	Moulded headliner (Saveiro "double cab") - remove and install	247
7.13	Moulded headliner - replace	249
8	Noise insulation	251
8.1	Tools	251
8.2	Assembly overview	251
8.3	Floor lining ("2-door" Gol) - remove and install	265
8.4	Floor lining ("4-door" Gol/Voyage) - remove and install	266
8.5	Floor covering (Saveiro "single cab") - remove and install	269
8.6	Floor covering (Saveiro "extended cab") - remove and install	270
8.7	Floor covering (Saveiro "double cab") - remove and install	271
72	Seat frames	274
1	Front seats	274
1.1	Front seat - remove and install	274
1.2	Front seat covers- assembly overview	279
1.3	Front seat covers- remove and install	280
1.4	Fire extinguisher support - remove and install	282
1.5	Front seat head restraint - assembly overview	283
1.6	Front seat sliding guides (side) - replace	284
1.7	Front seat sliding guide (centre) - replace	285
1.8	Longitudinal adjustment lever - assembly overview	285
1.9	Front seat backrest - remove and install	287
1.10	Backrest unlocking cable (2 doors) - assembly overview	288
1.11	Backrest unlocking cable (2 doors) - remove and install	288
1.12	Front seat activation lever (2-doors) - remove and install	289
1.13	Front seat head restraint guide (version1) - remove and install	290
1.14	Front seat head restraint guide (version2) - remove and install	291
2	Rear seats	294
2.1	(Bench) rear seat - remove and install	294



2.2	Rear bench seat (split) - remove and install	296
2.3	Rear seat (Saveiro "double cab") - remove and install	298
2.4	Rear seat backrest (bench) - assembly overview	300
2.5	(Bench) back seat backrest - remove and install	300
2.6	Rear seat backrest (split) - assembly overview	302
2.7	Rear seat backrest (split) - remove and install	303
2.8	Rear seat backrest (Saveiro "double cab") - assembly overview	305
2.9	Rear seat backrest (Saveiro "double cab") - remove and install	305
2.10	Rear seat backrest stop - assembly overview	307
2.11	Rear seat backrest stop - remove and install	307
2.12	Rear seat head restraint - remove and install	308
2.13	Rear seat head restraint guide - remove and install	309
2.14	Rear seat head restraint guide (Saveiro "double cab") - remove and install	311
2.15	Rear seat backrest unlocking button - remove and install	312
74	Seat - padding, covers	313
1	Front seats lining and padding	313
1.1	Front seat lining and padding - assembly overview	313
1.2	Front seat backrest lining and padding - remove and install	313
1.3	Front backrest lining and padding - assembly overview	315
1.4	Front seat backrest lining and padding - remove and install	315
1.5	Front seat head restraint lining and padding - remove and install	317
2	Rear seat linings and paddings	318
2.1	Rear bench seat lining and padding - assembly overview	318
2.2	Rear seat backrest lining and padding - remove and install	318
2.3	Rear seat lining and padding (split) - assembly overview	319
2.4	Rear seat lining and padding (split) - remove and install	320
2.5	Rear seat backrest lining and padding- assembly overview	321
2.6	Rear seat backrest lining and padding - remove and install	322
2.7	Rear seat (split) backrest lining and padding - assembly overview	323
2.8	Rear seat (split) backrest lining and padding - remove and install	324