



Contents

00 - Technical data	1
1 — Change history —	1
50 - Body - front	2
1 Body - front section	2
1.1 Front end with complementary parts - assembly overview	2
1.2 Front end with complementary parts - remove and install	3
1.3 Front end with complementary parts - service position	4
1.4 Front wing - assembly overview	6
1.5 Upper bulkhead panel - assembly overview	7
55 - Bonnet, rear lid	9
1 Bonnet	9
1.1 Bonnet - assembly overview	9
1.2 Bonnet - remove and install	10
1.3 Bonnet - adjust	11
1.4 Bonnet hinge - remove and install	13
1.5 Bonnet latch operation cable - assembly overview	13
1.6 Bonnet latch Bowden cable - remove and install	14
1.7 Bonnet upper latch - remove and install	16
1.8 Bonnet lower latch - remove and install	17
2 Rear lid (Gol)	19
2.1 Rear lid - assembly overview	19
2.2 Rear lid struts - remove and install	21
2.3 Rear lid shock absorber - depressurize	21
2.4 Rear lid trim - remove and install	21
2.5 Rear lid - remove and install	22
2.6 Rear lid hinge - remove and install	23
2.7 Rear lid - adjust	24
2.8 Housing with latch cylinder - assembly overview	25
2.9 Housing with latch cylinder - remove and install	26
2.10 Latch cylinder - remove and install	27
2.11 Door latch - remove and install	27
2.12 Rear lid release motor V139 - remove and install	28
3 Rear lid (Voyage)	30
3.1 Rear lid - assembly overview	30
3.2 Rear lid - remove and install	31
3.3 Rear lid trim - remove and install	33
3.4 Rear lid hinge - assembly overview	33
3.5 Rear lid hinge - remove and install	34
3.6 Rear lid - adjust	35
3.7 Housing with latch cylinder - assembly overview	39
3.8 Housing with latch cylinder - remove and install	40
3.9 Latch cylinder - remove and install	40
3.10 Door latch - remove and install	41
3.11 Rear lid release motor V139 - remove and install	42
4 Rear lid (Saveiro)	44
4.1 Rear lid striker - adjust	44
4.2 Rear lid striker - lubricate	45
4.3 Rear lid lock - assembly overview	46
4.4 Rear cover lock - remove and install	46
4.5 Rod drive support - assembly overview	47
4.6 Rod driver support - remove and install	48



4.7	Rear lid lock operating motor - remove and install	49
4.8	Rear lid lock activation - remove and install	50
4.9	Rear lid sustaining cable - remove and install	51
4.10	Latch cylinder - remove and install	52
4.11	Rear lid struts - remove and install	53
4.12	Rear lid shock absorber - depressurize	54
4.13	Rear lid - remove and install	54
4.14	Rear lid - adjust	55
4.15	Rear lid hinge - remove and install	57
5	Fuel reservoir nozzle compartment and lid set	58
5.1	Fuel reservoir nozzle compartment lid (Gol and Voyage) - remove and install	58
5.2	Fuel reservoir nozzle compartment lid (Saveiro) - remove and install	59
57	Front doors, door components, central locking	61
1	Front door	61
1.1	Front door - assembly overview	61
1.2	Front door - remove and install	63
1.3	Front door - adjusting	64
1.4	Front door - disassemble and assemble	67
1.5	Front door - replace	67
2	Assembly parts	68
2.1	Front door arrester - adjust	68
2.2	Front door tether - remove and install	69
2.3	Internal handle - replace	70
2.4	Front door external handle and lock - assembly overview	70
2.5	Lock cylinder housing - remove and install	72
2.6	Lock cylinder - remove and install	73
2.7	Front door exterior handle - remove and install	73
2.8	Front door exterior handle - replace	75
2.9	Front door lock - remove and install	75
2.10	Lock button (locking rod) - remove and install	77
2.11	Front door lock - replace	77
2.12	Lock Bowden cable - replace	78
2.13	Front door sealing membrane - remove and install	78
2.14	Internal front door trim - remove and install	80
3	Central locking system	82
3.1	Central locking installation locations overview - Gol	82
3.2	Central locking installation locations overview - Voyage	84
3.3	Central locking installation locations overview - Saveiro	86
3.4	Battery of key with radio remote command (articulated) - assembly overview	87
3.5	Battery of key with radio remote command (articulated) - remove and install	87
3.6	Key - synchronize	88
58	Rear doors, door components	90
1	Rear door	90
1.1	Rear door - assembly overview	90
1.2	Rear passenger door - remove and install	92
1.3	Rear passenger door - adjust	93
1.4	Rear passenger door - disassemble and assemble	96
1.5	Rear door - replace	96
2	Assembly parts	97
2.1	Rear door arrester - adjust	97
2.2	Door arrester - remove and install	98
2.3	Internal handle - replace	99
2.4	Rear door external handle and lock - assembly overview	99



2.5	External handle housing - remove and install	101
2.6	External door handle - remove and install	102
2.7	External door handle - replace	104
2.8	Door lock - remove and install	104
2.9	Door lock - replace	108
2.10	Lock button (locking rod) - remove and install	108
2.11	Lock Bowden cable - replace	109
2.12	Door sealing membrane - remove and install	109
2.13	Internal door trim - remove and install	111
61	- Convertible roof, hardtop, canopy	113
1	Tonneau cover (Saveiro)	113
1.1	Tonneau cover - assembly overview	113
1.2	Tonneau cover - assembly overview (double cab - MY 2018 onwards)	114
1.3	Tonneau cover - remove and install	115
1.4	Tonneau cover longitudinal member - assembly overview	119
1.5	Tonneau cover longitudinal member - remove and install	119
63	- Bumpers	121
1	Front bumper	121
1.1	Front bumper cover - assembly overview	121
1.2	Front bumper protector - remove and install	122
1.3	Front protector support - assembly overview	124
1.4	Fastening of the front license plate - install	125
1.5	Front license plate fastening (Saveiro Cross) - install	125
2	Rear bumper (Gol)	126
2.1	Rear protector - assembly overview	126
2.2	Rear protector - remove and install	127
2.3	Foamed rear protector support - assembly overview	130
2.4	Rear license plate fastening - install	130
3	Rear bumper (Voyage)	132
3.1	Rear protector - assembly overview	132
3.2	Rear protector - remove and install	133
3.3	Foamed rear protector support - assembly overview	137
3.4	Rear license plate fastening - install	137
3.5	Sensor support of the Park Distance Control device (Gol / Voyage / Saveiro) - install	138
4	Rear bumper (Saveiro)	143
4.1	Support and side protector - assembly overview	143
4.2	Side protector - remove and install	144
4.3	Support and central protector - assembly overview	145
4.4	Central protector - remove and install	145
4.5	Rear license plate fastening - install	147
5	Rear bumper (Saveiro with rear view camera system)	148
5.1	Support and side protector - assembly overview	148
5.2	Side protector - remove and install	149
5.3	Support and central protector - assembly overview	150
5.4	Central protector - remove and install	150
5.5	Rear license plate fastening - install	152
64	- Glazing	153
1	Repair instructions	153
1.1	Tools	153
1.2	Ancillary Materials	155
1.3	Stickers for engraving the VIS number on the windows (only for Brazil) - supply	156
1.4	Undamaged glass - prepare for install	156



1.5	New glass - prepare for install	156
1.6	Body flange - prepare to install the window	157
1.7	Assembly instructions	158
1.8	Minimum adhesive drying time	159
1.9	Paint damage - repair	160
1.10	Cleaning in case of resulting adhesive residues	160
1.11	Data stickers	161
2	Windscreen	163
2.1	Windscreen - assembly overview	163
2.2	Windscreen - remove	164
2.3	Windscreen - install	164
3	Side window	165
3.1	Rear side glass (2-door Gol) - assembly overview	165
3.2	Undamaged rear side glass (2-door Gol) - remove	166
3.3	Damaged rear side glass (2-door Gol) - remove	167
3.4	Rear side glass (2-door Gol) - install	168
3.5	Fixed rear side window (Saveiro extended cab) - assembly overview	168
3.6	Undamaged fixed rear side window (Saveiro extended cab) - remove	169
3.7	Damaged fixed rear side window (Saveiro extended cab) - remove	170
3.8	Fixed rear side window (Saveiro extended cab) - install	170
3.9	Rear side window (Saveiro double cab) - assembly overview	170
3.10	Rear side window (Saveiro extended cab) - remove and install	172
4	Rear window	174
4.1	Rear window (Gol) - assembly overview	174
4.2	Undamaged rear window (Gol) - remove	175
4.3	Damaged rear window (Gol) - remove	176
4.4	Rear window (Gol) - install	177
4.5	Rear window (Voyage) - assembly overview	177
4.6	Undamaged rear window (Voyage) - remove	177
4.7	Damaged rear window (Voyage) - remove	178
4.8	Rear window (Voyage) - install	179
4.9	Fixed rear side window (Saveiro single cab) - assembly overview	179
4.10	Fixed rear window (Saveiro extended cab) - assembly overview	180
4.11	Fixed rear window (Saveiro double cab) - assembly overview	181
4.12	Sliding rear window (Saveiro single cab) - assembly overview	182
4.13	Sliding rear window (Saveiro extended cab) - assembly overview	183
4.14	Undamaged fixed or sliding rear window (Saveiro) - remove	183
4.15	Rear fixed or sliding window (Saveiro) - install	185
5	Door window glass	186
5.1	Front door window glass - assembly overview	186
5.2	Front door window glass - remove and install	187
5.3	Rear door window glass - assembly overview	188
5.4	Rear door window glass - remove and install	188
5.5	Rear door fixed window - assembly overview	189
5.6	Undamaged fixed rear door window - remove	190
5.7	Damaged fixed rear door window - remove	191
5.8	Fixed rear door window - install	191
6	Window drive mechanism	192
6.1	Convenience system window drive mechanism (automatic window closing and opening mechanism) with force limiter (anti-crushing function)	192
6.2	Central control unit for glass command J1015 - remove and install	194
6.3	Window drive mechanism - remove and install	195
6.4	Window drive motor V147/ V148 - remove and install	196
6.5	Front door window crank - remove and install	197
6.6	Rear door window drive mechanism - remove and install	198



6.7	Rear window control motor V26 / V27 - remove and install	199
6.8	Rear door window drive crank - remove and install	200
7	Window channels and trim strips	201
7.1	Front door window channel - remove and install	201
7.2	Front door window internal trim - remove and install	201
7.3	Front door window external trim - replace	202
7.4	Rear door window channel - remove and install	202
7.5	Rear door window internal trim - remove and install	202
7.6	Rear door window external trim - replace	203
66	Exterior equipment	204
1	Materials used and operational care required	204
1.1	Auxiliary materials for Brazilian market	204
1.2	Auxiliary materials for export market	205
1.3	Matching table	205
1.4	Paint damage - repair	206
1.5	Cleaning in case of dirt residues resulting from handling of polyurethane adhesive (PU)	206
1.6	Minimum adhesive drying time	206
2	Wheel arch protector	207
2.1	Front wheel arch protector - remove and install	207
2.2	Rear wheel arch protector - remove and install	208
3	External rear-view mirror	210
3.1	External rear-view mirror - assembly overview	210
3.2	External rearview mirror - assembly overview - continued	211
3.3	Exterior rear-view mirror - remove and install	211
3.4	Mirror glass - remove and install	212
3.5	Mirror glass - remove and install	213
3.6	Turn signal - remove and install	214
4	External linings	215
4.1	Windscreen lower trim - assembly overview	215
4.2	Windscreen lower trim - remove and install	216
4.3	External linings on pillars and doors - replace	216
4.4	External linings on pillars and doors (Saveiro) - replace	218
4.5	Footwell cover (Saveiro) - replace	219
4.6	Lower longitudinal member external lining - replace	221
4.7	Lower longitudinal member external lining (Saveiro Cross) - replace	222
4.8	Lower belt protector - assembly overview	225
4.9	Lower belt protector - remove and install	225
5	Side trims, roof	227
5.1	Front door trims - replace	227
5.2	Rear door trims - replace	229
5.3	Side trims (Gol - 2-door) - replace	230
5.4	Side trims (Saveiro) - replace	233
5.5	Front door trim (Saveiro Cross) - assembly overview	235
5.6	Front door trim (Saveiro Cross) - replace	236
5.7	Rear side panel trim (Saveiro Cross - Extended cab) - assembly overview	238
5.8	Rear side panel trim (Saveiro Cross - extended cab) - replace	239
5.9	Rear side panel trim (Saveiro Cross - Double cab) - assembly overview	242
5.10	Rear side panel trim (Saveiro Cross - Double cab) - replace	243
5.11	Longitudinal lower trim (Gol Track) - general assembly overview	246
5.12	Side member trim (Gol Track) - replace	247
5.13	Longitudinal member lower trim (Saveiro Cross) - assembly overview	252
5.14	Longitudinal member lower trim (Saveiro Cross) - replace	252
5.15	Rear cover trim (Voyage) - replace	255
5.16	Roof trim - assembly overview	257



5.17	Roof lining (Saveiro) - remove and install	257
6	Rear wing and side panel trim (Saveiro)	259
6.1	Front wing trim (Saveiro) - assembly overview	259
6.2	Front wing trim - replace	260
6.3	Rear side panel trim - assembly overview	262
6.4	Rear side panel trim - replace	263
6.5	Rear side panel trim (Saveiro Cross) - assembly overview	266
6.6	Rear side panel trim (Saveiro Cross) - replace	267
7	Cargo compartment and frames protector (Saveiro)	271
7.1	Upper tailgate frame - replace	271
7.2	Cargo compartment upper frame - replace	273
7.3	Bedliner grid - assembly overview	275
7.4	Cargo compartment protection grid - remove and install	276
7.5	External B-pillar frame - replace	277
7.6	Rear window glass upper and lower frame - remove and install	280
7.7	Bedliner - assembly overview	281
7.8	Bedliner - remove and install	282
7.9	Cargo tying adjustable hooks track (vehicle without tonneau cover) - remove and install	283
7.10	Cargo tying adjustable hooks track (vehicle with tonneau cover) - remove and install	284
7.11	Cargo compartment adjustable hooks - remove and install	285
8	Spare wheel support (Saveiro)	287
8.1	Spare wheel support (Saveiro) - assembly overview	287
8.2	Spare wheel support (Saveiro) - remove and install	288
9	Roof rack (Saveiro)	289
9.1	Roof rack (single cab) - assembly overview	289
9.2	Roof rack (single cab) - remove and install	290
9.3	Roof rack (extended and double cab) - assembly overview	292
9.4	Roof rack (extended and double cab) - remove and install	292
9.5	Roof rack (Saveiro Cross) - assembly overview	295
9.6	Roof rack (Saveiro Cross) - remove and install	295
9.7	Roof rack extension (Saveiro Cross) - assembly overview	297
9.8	Roof rack extensor (Saveiro Cross) - remove and install	297
9.9	Roof rack extensor cover (Saveiro Cross) - remove and install	299
9.10	Bed rack (Saveiro Cross "extended cab") - assembly overview	300
9.11	Cargo compartment rack (Saveiro Cross "extended cab") - remove and install	300
10	Spoiler	303
10.1	Spoiler (Voyage) - assembly overview	303
10.2	Observations for the execution of the removal and installation of the spoiler	305
10.3	Removal	305
10.4	Installation	307
11	Front grid	313
11.1	Front grid (Gol and Voyage) - general overview of assembly	313
11.2	Radiator grille (Saveiro) - assembly overview	314
11.3	Radiator grille (Saveiro Cross) - assembly overview	315
11.4	Radiator grille strips - assembly overview	317
12	Bumper protector trims and grilles	319
12.1	Front protector grilles and trims (Gol and Voyage) - assembly overview	319
12.2	Front protector grilles and trims (Saveiro) - assembly overview	320
12.3	Front protector grilles and trims (Saveiro Cross) - assembly overview	322
12.4	Rear protector trims (Saveiro) - assembly overview	324
13	Badges	325
13.1	Volkswagen Badge - replace	325
13.2	Model badge (Gol) - replace	327
13.3	Model badge (Voyage) - replace	329



13.4	Model badge (Saveiro) - replace	330
13.5	Model badge (Saveiro Cross) - replace	331
13.6	(MSI) version badge - replace	332
13.7	(Imotion) version badge - replace	334
13.8	(Automatic) version badge - replace	335
13.9	Version badge (Robust) - replace	337
13.10	Side badge (Robust) - replace	338
13.11	Decorative version strip (Pepper) - replace	339
13.12	Side badge (Pepper) - replace	340
13.13	Side badge (Trend) - replace	342
13.14	Side badge (Comfortline) - replace	343
13.15	Side badge (Highline) - replace	344
13.16	Version badge (Connect) - replace	345
13.17	Rear protector fixed window (Gol) - replace	347
14	Saveiro Cross components	349
14.1	Saveiro Cross components - assembly overview	349