



Contents

00 - Technical data	1
1 — Change history —	1
2 Identification	2
2.1 Identification on the gearbox	2
3 Technical data	4
3.1 Prefix, Assignment, gear ratio, filling volume	4
3.2 Gearbox ratio “i” - calculation	8
4 Power transmission scheme	10
4.1 Nomenclature	10
4.2 Gear ratios	10
5 General repair instructions	12
5.1 Gearbox	12
5.2 Gaskets and retainers	12
5.3 Screws, nuts	13
5.4 Roller bearings	13
5.5 Adjustment shims	14
5.6 Synchronizer rings	14
30 - Clutch	15
1 Clutch mechanism	15
1.1 Clutch drive mechanism - assembly overview	15
1.2 Command system - component overview	18
1.3 Command pedals - assembly overview	18
1.4 Clutch pedal switch F36 - remove and install	20
1.5 Clutch pedal return spring - remove and install	21
1.6 Clutch pedal support - remove and install	23
1.7 Clutch pedal - remove install	27
1.8 Hydraulic system - assembly overview	29
1.9 Transmitting cylinder - clutch hydraulic drive - remove and install	32
1.10 Clutch slave cylinder - remove and install	36
1.11 Clutch drive mechanism - bleed	37
2 Clutch	40
2.1 Clutch - assembly overview	40
2.2 Clutch - repair	41
34 - Controls, housing	44
1 Shift mechanism	44
1.1 Shift mechanism - installation position	44
1.2 Selector mechanism - component overview	45
1.3 Selector cables - installation position	47
1.4 Handle and boot on the gear lever - assembly overview	58
1.5 Handle and boot on the gear lever - remove and install	59
1.6 Gear shift lever and shifting mechanism - remove and install	60
1.7 Gearshift lever and mechanism - repair	63
1.8 Lever and Gear shifting mechanism - adjusting	66
1.9 Selector and lever - functional check	69
2 Gearbox - remove and install	71
2.1 Gearbox for vehicles with engines (CCRA, CFZA) - remove and install	71
2.2 Gearbox for vehicles with engines (CSEA, CSEB, CNXA and CWSA) - remove and install	89
3 Gearbox - transport	106
4 Gearbox - disassemble and assemble	108
4.1 Gearbox - overview	108



4.2	gearbox - assembly overview	108
4.3	Gear selection mechanism - assembly overview	109
4.4	Input shaft, output shaft, differential, selection mechanism and selector forks	113
4.5	Selector forks - assembly overview	115
4.6	Input shaft, output shaft, differential, selection mechanism and selector forks - disassemble and assemble	122
5	Gearbox and clutch housings	132
5.1	Clutch housing - assembly overview	132
5.2	Transmission housing and transmission housing - assembly overview	133
5.3	Transmission housing cover and 5th gear - assembly overview	139
5.4	Gearbox housing Cover and 5th gear - remove and install (gearbox installed)	141
6	Gearbox oil level	144
6.1	Oil level - check	144
6.2	Oil level - replenish	145
35	Gears, shafts	147
1	Input shaft	147
1.1	Input shaft - general overview of assembly	147
1.2	Input shaft - disassemble and assemble	149
2	Output shaft	161
2.1	Output shaft - general overview of assembly	161
2.2	Output shaft - disassemble and assemble	164
39	Final drive - differential	172
1	Drive flange	172
1.1	Left drive flange retainer (left side) - replace	172
1.2	Drive flange retainer (right side) - replace	175
2	Differential	179
2.1	Differential - general overview of assembly	179
2.2	Differential - disassemble and assemble	181
2.3	Differential - adjust	189