

001 - Basic equipment	1-18
1. Basic equipment	1
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	2
3. Ignition/starter switch, Onboard supply control unit	3
4. Onboard supply control unit	4
5. Onboard supply control unit	5
6. Onboard supply control unit	6
7. Onboard supply control unit	7
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	8
9. Intermittent wiper switch, Onboard supply control unit, Windscreen wiper motor, Windscreen and rear window washer pump	9
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	10
11. Brake light switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	11
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	12
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower	13
14. Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	14
15. Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Left tail light bulb, Front left turn signal bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	15
16. Onboard supply control unit, Right headlight twin filament bulb, Right tail light bulb, Right side light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	16
17. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Clutch pedal switch, Rev. counter, Fuel pump relay, Immobiliser control unit, Dash panel insert	17
18. Fuel gauge, Speedometer, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	18
002 - Basic equipment	19-37
1. Basic equipment	19
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	20
3. Ignition/starter switch, Onboard supply control unit	21
4. Onboard supply control unit	22
5. Onboard supply control unit	23
6. Onboard supply control unit	24
7. Onboard supply control unit	25
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	26
9. Intermittent wiper switch, Onboard supply control unit, Windscreen wiper motor, Windscreen and rear window washer pump	27
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light, High-level brake light bulb	28
11. Brake light switch, Brake pedal switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	29
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	30
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower	31
14. Heated rear window button, Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	32
15. Rear lid contact switch, Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb	33
16. Onboard supply control unit, Right headlight twin filament bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Number plate light	34
17. Rear lid release switch, Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Heated rear window	35
18. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Clutch pedal switch, Rev. counter, Fuel pump relay, Immobiliser control unit, Dash panel insert	36
19. Fuel gauge, Speedometer, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	37
003 - 1.0l engine , CPBA	38-56
1. 1.0l enaine . CPBA	38

2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	39
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	40
4. Onboard supply control unit	41
5. Fuel pump relay, X-contact relief relay, Onboard supply control unit	42
6. Engine speed sender, Knock sensor 1, Radiator fan 2nd speed relay, Onboard supply control unit, Engine/motor control unit, Activated charcoal filter solenoid valve 1	43
7. Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine/motor control unit	44
8. Onboard supply control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	45
9. Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Onboard supply control unit, Engine/motor control unit, Fuel pump for cold start	46
10. Accelerator position sender, Accelerator position sender 2, Onboard supply control unit, Engine/motor control unit	47
11. Lambda probe, Lambda probe after catalytic converter, Onboard supply control unit, Engine/motor control unit	48
12. Clutch pedal switch, Pressure sensor, Onboard supply control unit, Engine/motor control unit, Cold start valve	49
13. Brake light switch, Onboard supply control unit, Engine/motor control unit	50
14. Onboard supply control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	51
15. Cold start device relay, Fresh air blower and radiator fan relay, Onboard supply control unit, Engine/motor control unit, Voltage supply relay 1, Radiator fan	52
16. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	53
17. Speedometer sender, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	54
18. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp, Electronic power control fault lamp	55
19. Coolant temperature gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Reserve fuel warning lamp, Malfunction warning lamp	56
004 - 1.6l petrol engine , CFZA	57-73
1. 1.6l petrol engine , CFZA	57
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	58
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	59
4. Onboard supply control unit	60
5. Onboard supply control unit	61
6. Clutch pedal switch, Radiator fan 2nd speed relay, Fresh air blower and radiator fan relay, Onboard supply control unit, Engine/motor control unit	62
7. Lambda probe, Onboard supply control unit, Engine/motor control unit	63
8. Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Onboard supply control unit, Engine/motor control unit	64
9. Engine speed sender, Knock sensor 1, Fuel pump relay, Onboard supply control unit, Engine/motor control unit, Voltage supply relay 1, Activated charcoal filter solenoid valve 1	65
10. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	66
11. Coolant temperature sender, Onboard supply control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	67
12. Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Onboard supply control unit, Engine/motor control unit	68
13. Brake light switch, Brake pedal switch, Pressure sensor, Onboard supply control unit, Engine/motor control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	69
14. Fuel gauge sender, Fuel system pressurisation pump, Speedometer sender, Onboard supply control unit	70
15. Fresh air blower switch, Heater/heat output switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	71
16. Handbrake warning switch, Brake fluid level warning contact, Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Brake system warning lamp, Electronic power control fault lamp	72

17. Oil pressure switch, Coolant temperature gauge, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Reserve fuel warning lamp, Malfunction warning lamp	73
<b>005 - 1.6l engine , CCRA</b>	<b>74-89</b>
1. 1.6l engine , CCRA	74
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	75
3. Ignition/starter switch, Onboard supply control unit	76
4. Fuse 2 on fuse holder A, Fuse 9 on fuse holder A, Fuse 22 on fuse holder A, Fuse 26 on fuse holder A, Fuse 34 on fuse holder A, Fuse 36 on fuse holder A, Fuse 38 on fuse holder A	77
5. Fuse 7 on fuse holder A, Fuse 15 on fuse holder A, Fuse 24 on fuse holder A, Fuse 29 on fuse holder A, Fuse 30 on fuse holder A, Fuse 40 on fuse holder A, Fuse 41 on fuse holder A	78
6. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	79
7. Accelerator position sender, Accelerator position sender 2, Starter motor relay, Engine/motor control unit, Fuel pump for cold start	80
8. Radiator fan 2nd speed relay, Engine/motor control unit, Radiator fan series resistor, Radiator fan	81
9. Fuel pump relay, Cold start device relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine/motor control unit	82
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine/motor control unit	83
11. Speedometer sender, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	84
12. Engine/motor control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	85
13. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	86
14. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	87
15. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge sender, Dash panel insert, Oil pressure warning lamp, Malfunction warning lamp, Electronic power control fault lamp	88
16. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	89
<b>006 - Radio</b>	<b>90-97</b>
1. Radio	90
2. Battery, Starter, Alternator, Onboard supply control unit	91
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	92
4. Onboard supply control unit	93
5. Onboard supply control unit, Radio, Front right treble loudspeaker, Front right bass loudspeaker	94
6. Onboard supply control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker	95
7. Onboard supply control unit, Radio, Rear left bass loudspeaker, Rear right bass loudspeaker	96
8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	97
<b>007 - Air conditioning system</b>	<b>98-105</b>
1. Air conditioning system	98
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	99
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	100
4. Onboard supply control unit	101
5. Air conditioning system control unit, Onboard supply control unit, Fresh air and air recirculation flap control motor	102
6. Fresh air blower switch, Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	103
7. Radiator fan 2nd speed relay, Air conditioning system switch-off relay, Onboard supply control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	104
8. Rev. counter, Pressure sensor, Speedometer, Fresh air blower and radiator fan relay, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	105
<b>008 - Airbag systems</b>	<b>106-115</b>
1. Airbag systems	106
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	107
3. Ignition/starter switch, Onboard supply control unit	108
4. Onboard supply control unit	109
5. X-contact relief relay, Onboard supply control unit	110
6. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Airbag igniter on driver side	111
7. Airbag control unit. Warning lamp for airbag deactivated on front passenger side	112

8. Airbag control unit	113
9. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	114
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp	115
<b>009 - Anti-lock brake system (ABS)</b>	<b>116-125</b>
1. Anti-lock brake system (ABS)	116
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	117
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	118
4. Onboard supply control unit	119
5. Brake light switch, Brake fluid level warning contact, Brake pedal switch, Onboard supply control unit	120
6. X-contact relief relay, Onboard supply control unit	121
7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp	122
8. ABS control unit, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	123
9. ABS control unit, ABS solenoid valve relay, Front right ABS inlet valve, Rear right ABS inlet valve	124
10. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	125
<b>010 - Fog light and rear fog light</b>	<b>126-139</b>
1. Fog light and rear fog light	126
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	127
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	128
4. Onboard supply control unit	129
5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	130
6. Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left brake and tail light bulb	131
7. Onboard supply control unit	132
8. Front and rear fog light switch, Fog light relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	133
9. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	134
10. Onboard supply control unit, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	135
11. Onboard supply control unit, Rear left fog light bulb	136
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	137
13. Left fog light bulb, Right fog light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb	138
14. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	139
<b>011 - Interactive system</b>	<b>140-144</b>
1. Interactive system	140
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	141
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	142
4. Onboard supply control unit	143
5. Multifunction display call-up button, Heated rear window button, Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	144
<b>012 - Window wash/wipe system and heated rear window</b>	<b>145-154</b>
1. Window wash/wipe system and heated rear window	145
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	146
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	147
4. X-contact relief relay, Onboard supply control unit	148
5. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	149
6. Multifunction display call-up button, Heated rear window button, Onboard supply control unit	150
7. Onboard supply control unit	151
8. Intermittent wiper switch, Rear wiper switch, Multifunction display call-up button, Onboard supply control unit	152
9. Intermittent wiper switch, Onboard supply control unit, Windscreen wiper motor	153

10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	154
<b>013 - Dual headlight</b>	<b>155-163</b>
1. Dual headlight	155
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	156
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	157
4. Onboard supply control unit	158
5. Onboard supply control unit, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	159
6. Onboard supply control unit, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	160
7. Light switch, Turn signal switch, Horn plate, Horn activation contact ring, Onboard supply control unit	161
8. Headlight main beam relay, Dipped beam relay, Onboard supply control unit	162
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	163
<b>014 - Electric windows, rear vent windows</b>	<b>164-171</b>
1. Electric windows, rear vent windows	164
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	165
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	166
4. Onboard supply control unit	167
5. Front left window regulator switch, Front right window regulator switch in driver door, Window regulator switch in front passenger door, Central control unit for window regulators, Driver side window regulator motor, Front passenger side window regulator motor	168
6. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Central control unit for window regulators, Window regulator switch illumination bulb, Rear left window regulator motor, Rear right window regulator motor	169
7. Rear window regulator isolation switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Central control unit for window regulators, Window regulator switch illumination bulb, Rear window regulator isolation switch illumination bulb	170
8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	171
<b>015 - Parking aid (PDC)</b>	<b>172-179</b>
1. Parking aid (PDC)	172
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	173
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	174
4. Reversing light switch, Onboard supply control unit	175
5. Rear centre left parking aid sender, Rear centre right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit	176
6. Rear left parking aid sender, Rear right parking aid sender, Parking aid control unit, Onboard supply control unit	177
7. Parking aid control unit, Onboard supply control unit	178
8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	179
<b>016 - Automated manual gearbox , CCRA,CFZA</b>	<b>180-195</b>
1. Automated manual gearbox , CCRA,CFZA	180
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	181
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	182
4. Onboard supply control unit	183
5. Automatic gearbox control unit, Gearbox hydraulic pump relay, Onboard supply control unit, Hydraulic pump for gearbox	184
6. Automatic gearbox control unit, Onboard supply control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	185
7. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automatic gearbox control unit, Onboard supply control unit	186
8. Ambient temperature sensor, Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automatic gearbox control unit, Onboard supply control unit	187
9. Brake light switch, Driver door contact switch, Handbrake warning switch, Brake pedal switch, Automatic gearbox control unit, Onboard supply control unit	188
10. Onboard supply control unit, Selector lever sensors control unit	189
11. Starter motor relay, X contact relief relay 2, Terminal 15 relief relay, Onboard supply control unit	190
12. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return rina with slip rina. Horn plate. Onboard supply control unit	191

13. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	192
14. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit	193
15. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	194
16. Rev. counter, Speedometer, Control unit in dash panel insert, Starter motor relay 2, Dash panel insert, Alternator warning lamp, Malfunction warning lamp	195
<b>017 - Multifunction steering wheel</b>	<b>196-204</b>
1. Multifunction steering wheel	196
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	197
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	198
4. Onboard supply control unit	199
5. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Airbag igniter on driver side	200
6. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	201
7. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Airbag igniter on driver side	202
8. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	203
9. Rev. counter, Speedometer, Multifunction indicator, Dash panel insert, Alternator warning lamp	204
<b>018 - Coming Home</b>	<b>205-217</b>
1. Coming Home	205
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	206
3. Ignition/starter switch, Reversing light switch, Onboard supply control unit, Terminal 30 wiring junction	207
4. Onboard supply control unit	208
5. Onboard supply control unit, Left side light bulb, Right side light bulb	209
6. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	210
7. Onboard supply control unit, Right tail light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	211
8. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Right reversing light bulb	212
9. Onboard supply control unit, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	213
10. X-contact relief relay, Onboard supply control unit, Left reversing light bulb, Left brake and tail light bulb	214
11. Headlight dipper and flasher switch, Onboard supply control unit, Left headlight twin filament bulb, Right headlight twin filament bulb	215
12. Headlight main beam relay, Dipped beam relay, Number plate light	216
13. Rev. counter, Speedometer, Control unit in dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	217
<b>019 - System for lowering passenger side mirror</b>	<b>218-226</b>
1. System for lowering passenger side mirror	218
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	219
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	220
4. Onboard supply control unit	221
5. Folding exterior mirror control unit, Onboard supply control unit	222
6. Reversing light switch, Folding exterior mirror control unit, Onboard supply control unit	223
7. Mirror adjustment changeover switch, Onboard supply control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor	224
8. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Onboard supply control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor	225
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	226
<b>020 - Onboard supply control unit</b>	<b>227-240</b>

1. Onboard supply control unit	227
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	228
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	229
4. Onboard supply control unit	230
5. Onboard supply control unit	231
6. Onboard supply control unit	232
7. Onboard supply control unit	233
8. Onboard supply control unit, Windscreen wiper motor	234
9. Onboard supply control unit	235
10. Onboard supply control unit	236
11. Onboard supply control unit	237
12. Onboard supply control unit	238
13. Onboard supply control unit	239
14. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp	240
<b>021 - Central locking</b>	<b>241-251</b>
1. Central locking	241
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	242
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	243
4. Onboard supply control unit	244
5. Anti-theft alarm and vermin repellent system contact switch, Anti-theft alarm ultrasonic sensor, Anti-theft alarm system horn, Onboard supply control unit, Alarm horn relay	245
6. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Onboard supply control unit	246
7. Driver side interior locking switch, Driver door power latching system contact switch, Front passenger door power latching system contact switch, Onboard supply control unit, Driver door power latching motor	247
8. Onboard supply control unit, Front passenger door power latching motor, Rear left power latching motor, Rear right power latching motor	248
9. Rear lid release switch, Rear lid contact switch, Onboard supply control unit, Rear lid release motor, Luggage compartment light	249
10. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front interior light, Rear left reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	250
11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Alarm system warning lamp	251
<b>022 - Light switch</b>	<b>252-260</b>
1. Light switch	252
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	253
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	254
4. Onboard supply control unit	255
5. Onboard supply control unit	256
6. Light switch, Onboard supply control unit, Light switch illumination bulb	257
7. Intermittent wiper switch, Airbag coil connector and return ring with slip ring, Onboard supply control unit	258
8. Turn signal switch, Headlight dipper and flasher switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Onboard supply control unit	259
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp, Left turn signal warning lamp	260
<b>023 - Basic equipment</b>	<b>261-279</b>
1. Basic equipment	261
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	262
3. Ignition/starter switch, Onboard supply control unit	263
4. Onboard supply control unit	264
5. Onboard supply control unit	265
6. Onboard supply control unit	266
7. Onboard supply control unit	267
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	268
9. Intermittent wiper switch, Onboard supply control unit, Windscreen wiper motor, Windscreen and rear window washer pump	269
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	270
11. Brake light switch, Brake pedal switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	271
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate. Horn activation contact ring. Onboard supply control unit	272

13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	273
14. Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, 12 V socket 2, Radiator fan	274
15. Onboard supply control unit, Left side light bulb, Left tail light bulb, Front left turn signal bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	275
16. Onboard supply control unit, Left headlight twin filament bulb, Right headlight twin filament bulb, Right tail light bulb, Right side light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	276
17. Load area illumination relay, High-level brake light bulb, Load area illumination bulb	277
18. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Clutch pedal switch, Rev. counter, Fuel pump relay, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	278
19. Fuel gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	279
<b>024 - Fog light and rear fog light</b>	<b>280-292</b>
1. Fog light and rear fog light	280
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	281
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	282
4. Onboard supply control unit	283
5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	284
6. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Rear left fog light bulb, Rear left turn signal bulb, Left reversing light bulb, Left brake and tail light bulb	285
7. Onboard supply control unit	286
8. Front and rear fog light switch, Fog light relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	287
9. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	288
10. Onboard supply control unit, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	289
11. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	290
12. Fog light relay, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	291
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	292
<b>025 - 1.6l engine , CCRA</b>	<b>293-308</b>
1. 1.6l engine , CCRA	293
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	294
3. Ignition/starter switch, Onboard supply control unit	295
4. Fuse 2 on fuse holder A, Fuse 7 on fuse holder A, Fuse 9 on fuse holder A, Fuse 22 on fuse holder A, Fuse 26 on fuse holder A, Fuse 34 on fuse holder A, Fuse 38 on fuse holder A	296
5. Fuse 15 on fuse holder A, Fuse 29 on fuse holder A, Fuse 36 on fuse holder A, Fuse 40 on fuse holder A, Fuse 41 on fuse holder A	297
6. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Voltage supply relay 1	298
7. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Fuel pump for cold start	299
8. Radiator fan 2nd speed relay, Engine/motor control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	300
9. Fuel pump relay, Cold start device relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine/motor control unit	301
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine/motor control unit	302
11. Speedometer sender, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	303
12. Engine/motor control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	304
13. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	305
14. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	306
15. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge sender, Fuel system pressurisation pump, Dash panel insert, Oil pressure warning lamp, Malfunction warning lamp, Electronic power control fault lamp	307

16. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	308
<b>026 - 1.6l engine , CFZA</b>	<b>309-324</b>
1. 1.6l engine , CFZA	309
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	310
3. Ignition/starter switch, Onboard supply control unit	311
4. Fuse 2 on fuse holder A, Fuse 7 on fuse holder A, Fuse 9 on fuse holder A, Fuse 22 on fuse holder A, Fuse 26 on fuse holder A, Fuse 34 on fuse holder A, Fuse 38 on fuse holder A	312
5. Fuse 15 on fuse holder A, Fuse 29 on fuse holder A, Fuse 36 on fuse holder A, Fuse 40 on fuse holder A, Fuse 41 on fuse holder A	313
6. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Voltage supply relay 1	314
7. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	315
8. Radiator fan 2nd speed relay, Engine/motor control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	316
9. Fuel pump relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine/motor control unit	317
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine/motor control unit	318
11. Speedometer sender, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	319
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	320
13. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	321
14. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	322
15. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge sender, Fuel system pressurisation pump, Dash panel insert, Oil pressure warning lamp, Malfunction warning lamp, Electronic power control fault lamp	323
16. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	324
<b>027 - Basic equipment</b>	<b>325-349</b>
1. Basic equipment	325
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	326
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	327
4. Onboard supply control unit	328
5. Onboard supply control unit	329
6. Onboard supply control unit	330
7. Onboard supply control unit	331
8. Onboard supply control unit, Windscreen and rear window washer pump	332
9. Intermittent wiper switch, Rear wiper switch, Onboard supply control unit	333
10. Light switch, Turn signal switch, Headlight dipper and flasher switch, Horn plate, Horn activation contact ring, Onboard supply control unit	334
11. Brake light switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	335
12. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	336
13. Fresh air blower switch, Heater/heat output switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	337
14. Heated rear window button, Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	338
15. Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Front left turn signal bulb	339
16. Onboard supply control unit, Right headlight twin filament bulb, Right side light bulb, Front right turn signal bulb, High-level brake light bulb, Heated rear window	340
17. Onboard supply control unit, Windscreen wiper motor	341
18. Clutch pedal switch, Onboard supply control unit, Number plate light	342
19. Rear lid contact switch, Onboard supply control unit, Rear lid release motor	343
20. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	344
21. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	345
22. Rear lid release switch, Onboard supply control unit	346
23. Rev. counter, Fuel pump relay, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp. Coolant temperature warning lamp (too cold). Brake system warning lamp	347

24. Ambient temperature sensor, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	348
25. Immobiliser reader coil, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	349
<b>028 - Basic equipment</b>	<b>350-374</b>
1. Basic equipment	350
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	351
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	352
4. Onboard supply control unit	353
5. Onboard supply control unit	354
6. Onboard supply control unit	355
7. Onboard supply control unit	356
8. Onboard supply control unit	357
9. Intermittent wiper switch, Onboard supply control unit, Windscreen and rear window washer pump	358
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	359
11. Brake light switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	360
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	361
13. Fresh air blower switch, Heater/heat output switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	362
14. Heated rear window button, Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	363
15. Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Front left turn signal bulb	364
16. Onboard supply control unit, Right headlight twin filament bulb, Right side light bulb, Front right turn signal bulb, High-level brake light bulb, Heated rear window	365
17. Onboard supply control unit, Windscreen wiper motor	366
18. Clutch pedal switch, Onboard supply control unit, Number plate light	367
19. Rear lid contact switch, Onboard supply control unit, Left tail light bulb, Left reversing light bulb, Rear lid release motor	368
20. Onboard supply control unit, Right tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	369
21. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	370
22. Rear lid release switch, Onboard supply control unit	371
23. Rev. counter, Fuel pump relay, Control unit in dash panel insert, Immobiliser control unit, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp	372
24. Speedometer, Control unit in dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	373
25. Immobiliser reader coil, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Immobiliser control unit	374
<b>029 - Basic equipment</b>	<b>375-399</b>
1. Basic equipment	375
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	376
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	377
4. Onboard supply control unit	378
5. Onboard supply control unit	379
6. Onboard supply control unit	380
7. Onboard supply control unit	381
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	382
9. Intermittent wiper switch, Onboard supply control unit, Windscreen and rear window washer pump	383
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	384
11. Brake light switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	385
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	386
13. Fresh air blower switch, Heater/heat output switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, 12 V socket 2, Fresh air blower	387
14. Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	388
15. Onboard supply control unit, Left side light bulb, Left tail light bulb, Front left turn signal bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Number plate	389

light		
16. Onboard supply control unit, Left headlight twin filament bulb, Right headlight twin filament bulb, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	390	
17. Onboard supply control unit	391	
18. Onboard supply control unit	392	
19. Load area illumination switch, Load area illumination relay, High-level brake light bulb, Load area illumination bulb	393	
20. Onboard supply control unit	394	
21. Onboard supply control unit, Windscreen wiper motor	395	
22. Onboard supply control unit, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	396	
23. Rev. counter, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp	397	
24. Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	398	
25. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp	399	
<b>030 - Radio</b>	<b>400-410</b>	
1. Radio	400	
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	401	
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	402	
4. Onboard supply control unit	403	
5. Radio, Front right treble loudspeaker, Front right bass loudspeaker	404	
6. Radio, Front left treble loudspeaker, Front left bass loudspeaker	405	
7. Radio, Aerial, Rear left bass loudspeaker, Rear right bass loudspeaker, Aerial amplifier	406	
8. Voltage converter for USB charge module, USB connection 1	407	
9. Onboard supply control unit	408	
10. Onboard supply control unit	409	
11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	410	
<b>031 - Air conditioning system</b>	<b>411-420</b>	
1. Air conditioning system	411	
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	412	
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	413	
4. Onboard supply control unit	414	
5. Air conditioning system control unit, Fresh air and air recirculation flap control motor	415	
6. Fresh air blower switch, Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	416	
7. Radiator fan 2nd speed relay, Air conditioning system switch-off relay, Onboard supply control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan, Air conditioner compressor	417	
8. Onboard supply control unit	418	
9. Rev. counter, Pressure sensor, Speedometer, Fresh air blower and radiator fan relay, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	419	
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	420	
<b>032 - Airbag systems</b>	<b>421-431</b>	
1. Airbag systems	421	
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	422	
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	423	
4. Onboard supply control unit	424	
5. X-contact relief relay, Onboard supply control unit	425	
6. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Airbag igniter on driver side	426	
7. Airbag control unit, Warning lamp for airbag deactivated on front passenger side	427	
8. Airbag control unit	428	
9. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter 1	429	
10. Rev. counter, Speedometer, Airbag control unit, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp, Front passenger seat belt tensioner igniter 1	430	
11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp	431	
<b>033 - Anti-lock brake system (ABS)</b>	<b>432-443</b>	

1. Anti-lock brake system (ABS)	432
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	433
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	434
4. Onboard supply control unit	435
5. Brake light switch, Onboard supply control unit	436
6. X-contact relief relay, Onboard supply control unit	437
7. Onboard supply control unit	438
8. ABS control unit, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	439
9. ABS control unit, ABS solenoid valve relay, Front right ABS inlet valve, Rear right ABS inlet valve	440
10. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay	441
11. Handbrake warning switch, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Brake system warning lamp	442
12. Brake fluid level warning contact, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Brake system warning lamp	443
034 - Fog light and rear fog light	444-461
1. Fog light and rear fog light	444
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	445
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	446
4. Onboard supply control unit	447
5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	448
6. Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left brake and tail light bulb	449
7. Onboard supply control unit	450
8. Front and rear fog light switch, Fog light relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	451
9. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	452
10. Onboard supply control unit, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	453
11. Onboard supply control unit, Rear left fog light bulb	454
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	455
13. Left fog light bulb, Right fog light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb	456
14. Onboard supply control unit	457
15. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	458
16. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	459
17. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	460
18. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	461
035 - Fog light and rear fog light	462-477
1. Fog light and rear fog light	462
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	463
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	464
4. Onboard supply control unit	465
5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	466
6. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Rear left fog light bulb, Rear left turn signal bulb, Left reversing light bulb, Left brake and tail light bulb	467
7. Onboard supply control unit, Rear left fog light bulb, Rear left turn signal bulb, Left reversing light bulb, Left brake and tail light bulb	468
8. Front and rear fog light switch, Fog light relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	469
9. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	470
10. Onboard supply control unit, Switch-off relay for additional main beam, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	471
11. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	472
12. Foa light relav. Left main beam headlight and foa liahrt bulb. Right main beam headlight and foa	473

light bulb	
13. Onboard supply control unit	474
14. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch	475
illumination bulb	
15. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	476
16. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	477
036 - Window wash/wipe system and heated rear window	478-490
1. Window wash/wipe system and heated rear window	478
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	479
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	480
4. Onboard supply control unit	481
5. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	482
6. Multifunction display call-up button, Heated rear window button, Onboard supply control unit	483
7. Onboard supply control unit	484
8. Intermittent wiper switch, Rear wiper switch, Multifunction display call-up button, Onboard supply control unit	485
9. Intermittent wiper switch, Onboard supply control unit	486
10. Onboard supply control unit, Windscreen wiper motor	487
11. X-contact relief relay, Onboard supply control unit	488
12. Heated rear window button, Onboard supply control unit	489
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	490
037 - Dual headlight	491-502
1. Dual headlight	491
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	492
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	493
4. Onboard supply control unit	494
5. Onboard supply control unit, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	495
6. Onboard supply control unit, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	496
7. Light switch, Turn signal switch, Horn plate, Horn activation contact ring, Onboard supply control unit	497
8. Headlight main beam relay, Dipped beam relay, Onboard supply control unit	498
9. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch	499
illumination bulb	
10. Onboard supply control unit	500
11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	501
12. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	502
038 - Electric windows, rear vent windows	503-512
1. Electric windows, rear vent windows	503
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	504
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	505
4. Onboard supply control unit	506
5. Front left window regulator switch, Front right window regulator switch in driver door, Window regulator switch in front passenger door, Central control unit for window regulators, Driver side window regulator motor, Front passenger side window regulator motor	507
6. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Central control unit for window regulators, Window regulator switch illumination bulb, Rear left window regulator motor, Rear right window regulator motor	508
7. Rear window regulator isolation switch, Central control unit for window regulators, Rear window regulator isolation switch illumination bulb	509
8. Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Central control unit for window regulators, Window regulator switch illumination bulb	510
9. Onboard supply control unit	511
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	512
039 - Parking aid (PDC)	513-525
1. Parking aid (PDC)	513
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	514
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring	515

junction	
4. Onboard supply control unit	516
5. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit, Onboard supply control unit	517
6. Rear left parking aid sender, Parking aid control unit, Onboard supply control unit	518
7. Parking aid control unit, Onboard supply control unit	519
8. Rear centre left parking aid sender, Parking aid control unit, Onboard supply control unit	520
9. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit, Onboard supply control unit	521
10. Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit	522
11. Reversing light switch, Onboard supply control unit	523
12. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	524
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	525
040 - Automated manual gearbox , CCRA,CFZA,CNXA,CWSA	526-544
1. Automated manual gearbox , CCRA,CFZA,CNXA,CWSA	526
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	527
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	528
4. Onboard supply control unit	529
5. Gearbox hydraulic pump relay, Automated manual gearbox control unit, Onboard supply control unit, Hydraulic pump for gearbox	530
6. Automated manual gearbox control unit, Onboard supply control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	531
7. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automated manual gearbox control unit, Onboard supply control unit	532
8. Ambient temperature sensor, Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automated manual gearbox control unit, Onboard supply control unit	533
9. Brake light switch, Driver door contact switch, Handbrake warning switch, Automated manual gearbox control unit, Onboard supply control unit	534
10. Onboard supply control unit, Selector lever sensors control unit	535
11. Starter motor relay, X contact relief relay 2, Terminal 15 relief relay, Onboard supply control unit	536
12. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit	537
13. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	538
14. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit	539
15. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	540
16. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	541
17. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	542
18. Rev. counter, Speedometer, Control unit in dash panel insert, Starter motor relay 2, Dash panel insert, Alternator warning lamp, Malfunction warning lamp	543
19. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Malfunction warning lamp	544
041 - Multifunction steering wheel	545-556
1. Multifunction steering wheel	545
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	546
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	547
4. Onboard supply control unit	548
5. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Airbag igniter on driver side	549
6. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	550
7. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Airbag igniter on driver side	551
8. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel. Multifunction buttons on right in steering wheel	552

9. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Airbag igniter on driver side	553
10. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	554
11. Onboard supply control unit	555
12. Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	556
<b>042 - Coming Home</b>	<b>557-572</b>
1. Coming Home	557
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	558
3. Ignition/starter switch, Reversing light switch, Onboard supply control unit, Terminal 30 wiring junction	559
4. Onboard supply control unit	560
5. Onboard supply control unit, Left side light bulb, Right side light bulb	561
6. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	562
7. Onboard supply control unit, Right tail light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	563
8. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Right reversing light bulb	564
9. Onboard supply control unit, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	565
10. X-contact relief relay, Onboard supply control unit, Left reversing light bulb, Left brake and tail light bulb	566
11. Headlight dipper and flasher switch, Onboard supply control unit, Left headlight twin filament bulb, Right headlight twin filament bulb	567
12. Headlight main beam relay, Dipped beam relay, Onboard supply control unit, Number plate light	568
13. Onboard supply control unit	569
14. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	570
15. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	571
16. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	572
<b>043 - System for lowering passenger side mirror</b>	<b>573-585</b>
1. System for lowering passenger side mirror	573
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	574
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	575
4. Onboard supply control unit	576
5. Onboard supply control unit	577
6. Control unit for lowering passenger side mirror	578
7. Reversing light switch, Control unit for lowering passenger side mirror	579
8. Control unit for lowering passenger side mirror	580
9. Onboard supply control unit	581
10. Mirror adjustment changeover switch, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor	582
11. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2	583
12. Central control unit for window regulators	584
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	585
<b>044 - Onboard supply control unit , (BFM)</b>	<b>586-600</b>
1. Onboard supply control unit , (BFM)	586
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	587
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	588
4. Onboard supply control unit	589
5. Onboard supply control unit	590
6. Onboard supply control unit	591
7. Onboard supply control unit	592
8. Onboard supply control unit	593
9. Onboard supply control unit	594
10. Onboard supply control unit	595

11. Onboard supply control unit	596
12. Onboard supply control unit	597
13. Onboard supply control unit	598
14. Onboard supply control unit, Windscreen wiper motor	599
15. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp	600
<b>045 - Onboard supply control unit , (BCM)</b>	<b>601-618</b>
1. Onboard supply control unit , (BCM)	601
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	602
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	603
4. Onboard supply control unit	604
5. Onboard supply control unit	605
6. Onboard supply control unit	606
7. Onboard supply control unit	607
8. Onboard supply control unit	608
9. Onboard supply control unit	609
10. Onboard supply control unit	610
11. Onboard supply control unit	611
12. Onboard supply control unit	612
13. Onboard supply control unit	613
14. Onboard supply control unit	614
15. Onboard supply control unit	615
16. Onboard supply control unit	616
17. Onboard supply control unit	617
18. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	618
<b>046 - Central locking</b>	<b>619-635</b>
1. Central locking	619
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	620
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	621
4. Onboard supply control unit	622
5. Anti-theft alarm ultrasonic sensor, Rain and light sensor, Anti-theft alarm system horn, Onboard supply control unit, Alarm horn relay	623
6. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Onboard supply control unit	624
7. Driver side interior locking switch, Driver door power latching system contact switch, Onboard supply control unit, Interior lock switch illumination bulb, Driver door power latching motor	625
8. Onboard supply control unit, Front passenger door power latching motor, Rear left power latching motor, Rear right power latching motor	626
9. Rear lid contact switch, Onboard supply control unit, Luggage compartment light	627
10. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	628
11. Rear lid release switch, Front passenger door power latching system contact switch, Onboard supply control unit, Front passenger door power latching motor	629
12. Onboard supply control unit, Front interior light, Rear left reading light, Rear right reading light, Front passenger reading light, Driver side reading light	630
13. Rear lid handle release button, Onboard supply control unit, Rear lid release motor	631
14. Anti-theft alarm and vermin repellent system contact switch, Onboard supply control unit	632
15. Onboard supply control unit	633
16. Onboard supply control unit	634
17. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Alarm system warning lamp	635
<b>047 - Light switch</b>	<b>636-649</b>
1. Light switch	636
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	637
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	638
4. Onboard supply control unit	639
5. Onboard supply control unit	640
6. Light switch, Onboard supply control unit	641
7. Airbag coil connector and return ring with slip ring, Onboard supply control unit, Light switch illumination bulb	642
8. Intermittent wiper switch, Rear wiper switch, Onboard supply control unit	643
9. Intermittent wiper regulator, Cruise control system switch, Multifunction display call-up button, Cruise control system (CCS) SET button. Onboard supply control unit	644

10. Turn signal switch, Onboard supply control unit	645
11. Headlight dipper and flasher switch, Steering angle sender, Onboard supply control unit	646
12. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	647
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp, Left turn signal warning lamp	648
14. Multifunction display call-up button, Heated rear window button, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	649
<b>048 - 1.6l engine , CCRA</b>	<b>650-668</b>
1. 1.6l engine , CCRA	650
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	651
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	652
4. Onboard supply control unit	653
5. Onboard supply control unit	654
6. Onboard supply control unit	655
7. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Voltage supply relay 1	656
8. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Fuel pump for cold start	657
9. Radiator fan 2nd speed relay, Engine/motor control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	658
10. Fuel pump relay, Cold start device relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine/motor control unit	659
11. Cruise control system switch, Cruise control system (CCS) SET button, Brake light switch, Clutch pedal switch, Engine/motor control unit	660
12. Speedometer sender, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	661
13. Engine/motor control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	662
14. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	663
15. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	664
16. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Malfunction warning lamp	665
17. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	666
18. Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Dash panel insert, Brake system warning lamp	667
19. Oil pressure switch, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	668
<b>049 - 1.6l engine , CFZA</b>	<b>669-687</b>
1. 1.6l engine , CFZA	669
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	670
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	671
4. Onboard supply control unit	672
5. Onboard supply control unit	673
6. Onboard supply control unit	674
7. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Voltage supply relay 1	675
8. Accelerator position sender, Accelerator position sender 2, Fuel pump relay, Engine/motor control unit	676
9. Radiator fan 2nd speed relay, Engine/motor control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	677
10. Cruise control system switch, Cruise control system (CCS) SET button, X-contact relief relay, Fresh air blower and radiator fan relay, Engine/motor control unit	678
11. Brake light switch, Clutch pedal switch, Engine/motor control unit	679
12. Speedometer sender, Engine/motor control unit, Ignition transformer, Spark plug connector, Spark plugs	680
13. Engine/motor control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	681
14. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	682
15. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle	683

sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	
16. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Dash panel insert, Malfunction warning lamp, Electronic power control fault lamp	684
17. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	685
18. Handbrake warning switch, Control unit in dash panel insert, Dash panel insert	686
19. Oil pressure switch, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	687
<b>050 - 1.6l engine , CWSA</b>	<b>688-708</b>
1. 1.6l engine , CWSA	688
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	689
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	690
4. Onboard supply control unit	691
5. X-contact relief relay, Onboard supply control unit	692
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	693
7. Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	694
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	695
9. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	696
10. Engine speed sender, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	697
11. Cruise control system switch, Cruise control system (CCS) SET button, Engine/motor control unit	698
12. Fuel pump relay, Radiator fan 2nd speed relay, Engine/motor control unit, Voltage supply relay 1	699
13. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	700
14. Clutch pedal switch, Pressure sensor, Fresh air blower and radiator fan relay, Engine/motor control unit, Radiator fan series resistor, Radiator fan	701
15. Knock sensor 1, Engine/motor control unit	702
16. Driving program button, Brake light switch, Engine/motor control unit	703
17. Fuel gauge sender, Fuel system pressurisation pump	704
18. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Coolant temperature warning lamp (too cold), Electronic power control fault lamp	705
19. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	706
20. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Coolant temperature warning lamp (too cold), Electronic power control fault lamp	707
21. Coolant temperature gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp	708
<b>051 - 1.6l engine , CNXA</b>	<b>709-730</b>
1. 1.6l engine , CNXA	709
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	710
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	711
4. Onboard supply control unit	712
5. X-contact relief relay, Onboard supply control unit	713
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	714
7. Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	715
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	716
9. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	717
10. Engine speed sender, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	718
11. Cruise control system switch, Cruise control system (CCS) SET button, Engine/motor control unit	719
12. Fuel pump relay, Radiator fan 2nd speed relay, Engine/motor control unit, Voltage supply relay 1	720
13. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	721
14. Pressure sensor, Fresh air blower and radiator fan relay, Engine/motor control unit, Radiator fan series resistor, Radiator fan	722
15. Knock sensor 1. Enaine/motor control unit	723

16. Driving program button, Brake light switch, Clutch pedal switch, Engine/motor control unit	724
17. Glow plug relay, Glow plug activation control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3, Fuel preheating element 4	725
18. Fuel gauge sender, Fuel system pressurisation pump	726
19. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Coolant temperature warning lamp (too cold), Electronic power control fault lamp	727
20. Oil pressure switch, Coolant temperature gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp	728
21. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Coolant temperature warning lamp (too cold), Electronic power control fault lamp	729
22. Coolant temperature gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp	730
<b>052 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CNXA,CWSA</b>	<b>731-740</b>
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CNXA,CWSA	731
2. Battery, Starter, Alternator, Voltage regulator	732
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	733
4. Onboard supply control unit	734
5. Brake light switch, Front left speed sensor, ABS control unit, ABS solenoid valve relay, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	735
6. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, ABS control unit, Rear right ABS inlet valve, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	736
7. Button for TCS and electronic stabilisation program, Driving program button, ABS control unit, ABS return flow pump relay, ABS hydraulic pump	737
8. Steering angle sender, Lateral acceleration sender, Yaw rate sender, Longitudinal acceleration sender, ABS control unit	738
9. Handbrake warning switch, Brake fluid level warning contact, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, ABS warning lamp, Brake system warning lamp	739
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Brake system warning lamp, Warning lamp for electronic stabilisation program and TCS	740
<b>053 - Preparation for radio</b>	<b>741-750</b>
1. Preparation for radio	741
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	742
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	743
4. Onboard supply control unit	744
5. Onboard supply control unit	745
6. Radio, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	746
7. Radio, Front left treble loudspeaker, Front left bass loudspeaker	747
8. Radio, Rear left bass loudspeaker	748
9. Radio, Aerial, Aerial amplifier	749
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	750
<b>054 - 1.0l engine , CSEA</b>	<b>751-769</b>
1. 1.0l engine , CSEA	751
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	752
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	753
4. Onboard supply control unit	754
5. Onboard supply control unit	755
6. Onboard supply control unit	756
7. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Voltage supply relay 1	757
8. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	758
9. Radiator fan 2nd speed relay, Engine/motor control unit, Radiator fan series resistor, Radiator fan	759
10. Fuel pump relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine/motor control unit	760
11. Brake light switch, Clutch pedal switch, Pressure sensor, Engine/motor control unit	761
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug connector, Spark plugs	762
13. Enaine/motor control unit. Injector. cylinder 1. Injector. cylinder 2. Injector. cylinder 3.	763

Activated charcoal filter solenoid valve 1, Camshaft control valve 1	
14. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	764
15. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	765
16. Glow plug relay, Glow plug activation control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3	766
17. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert	767
18. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	768
19. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	769
<b>055 - Radio navigation system</b>	<b>770-781</b>
1. Radio navigation system	770
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	771
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	772
4. Onboard supply control unit	773
5. Radio/RNS, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	774
6. Radio/RNS, Reversing camera	775
7. Radio/RNS, Roof aerial, Aerial, Rear left bass loudspeaker, Rear right bass loudspeaker, GPS aerial	776
8. Radio/RNS, Telephone microphone, Connection for external audio sources	777
9. Voltage converter for USB charge module, USB connection 1	778
10. Onboard supply control unit	779
11. Onboard supply control unit	780
12. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	781
<b>056 - Reversing camera (Rear Assist)</b>	<b>782-788</b>
1. Reversing camera (Rear Assist)	782
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	783
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	784
4. Onboard supply control unit	785
5. Onboard supply control unit	786
6. Radio/RNS, Reversing camera	787
7. Rev. counter, Speedometer, Control unit in dash panel insert, Alternator warning lamp	788
<b>057 - Basic equipment</b>	<b>789-810</b>
1. Basic equipment	789
2. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuses in fuse holder	790
3. Onboard supply control unit, Left headlight twin filament bulb, Front left headlight, Left side light bulb, Front left turn signal bulb	791
4. Onboard supply control unit, Windscreen and rear window washer pump	792
5. Onboard supply control unit	793
6. Onboard supply control unit, Right headlight twin filament bulb, Front right headlight, Right side light bulb, Front right turn signal bulb	794
7. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light, Front interior light	795
8. Reversing light switch, Horn or dual tone horn, Fresh air blower and radiator fan relay, Onboard supply control unit, 12 V socket	796
9. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Onboard supply control unit, Steering column electronics control unit	797
10. Rotary light switch, Turn signal switch, Headlight dipper and flasher switch, Onboard supply control unit, Steering column electronics control unit	798
11. Steering angle sender, Onboard supply control unit, Steering column electronics control unit, Heated rear window	799
12. Fresh air blower switch, Heater/heat output switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	800
13. Onboard supply control unit, Windscreen wiper motor, Number plate light	801
14. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Left tail light bulb, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	802
15. Clutch pedal switch, Dipped beam relay, Onboard supply control unit, High-level brake light bulb	803
16. Rear lid release switch, Rear lid contact switch, Onboard supply control unit, Rear window wiper	804

motor, Rear lid release motor	
17. Headlight range control regulator	805
18. Ambient temperature sensor, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Brake system warning lamp	806
19. Immobiliser reader coil, Rev counter, Multifunction indicator, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Coolant temperature warning lamp (too cold)	807
20. Fuse holder A	808
21. Fuse holder A	809
22. Fuse holder A	810
<b>058 - Basic equipment</b>	<b>811-833</b>
1. Basic equipment	811
2. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuses in fuse holder	812
3. Onboard supply control unit, Left headlight twin filament bulb, Front left headlight, Left side light bulb, Front left turn signal bulb	813
4. Onboard supply control unit, Windscreen and rear window washer pump	814
5. Onboard supply control unit	815
6. Onboard supply control unit, Right headlight twin filament bulb, Front right headlight, Right side light bulb, Front right turn signal bulb	816
7. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light, Front interior light	817
8. Horn or dual tone horn, Fresh air blower and radiator fan relay, Onboard supply control unit, 12 V socket	818
9. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Onboard supply control unit, Steering column electronics control unit	819
10. Rotary light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Onboard supply control unit, Steering column electronics control unit	820
11. Rear lid release switch, Steering angle sender, Onboard supply control unit, Steering column electronics control unit, Heated rear window	821
12. Fresh air blower switch, Heater/heat output switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	822
13. Onboard supply control unit, Windscreen wiper motor, Number plate light	823
14. Onboard supply control unit, Left tail light cluster, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb	824
15. Rear lid contact switch, Onboard supply control unit, High-level brake light bulb, Rear lid release motor	825
16. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left tail light cluster 2, Right tail light cluster 2, Left reversing light bulb, Right reversing light bulb	826
17. Reversing light switch, Clutch pedal switch, Dipped beam relay, Onboard supply control unit	827
18. Headlight range control regulator	828
19. Ambient temperature sensor, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Brake system warning lamp	829
20. Immobiliser reader coil, Rev counter, Multifunction indicator, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Coolant temperature warning lamp (too cold)	830
21. Fuse holder A	831
22. Fuse holder A	832
23. Fuse holder A	833
<b>059 - Basic equipment</b>	<b>834-857</b>
1. Basic equipment	834
2. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuses in fuse holder	835
3. Onboard supply control unit, Left headlight twin filament bulb, Front left headlight, Left side light bulb, Front left turn signal bulb	836
4. Onboard supply control unit, Windscreen and rear window washer pump	837
5. Onboard supply control unit	838
6. Onboard supply control unit, Right headlight twin filament bulb, Front right headlight, Right side light bulb, Front right turn signal bulb	839
7. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light, Front interior light	840
8. Horn or dual tone horn, Fresh air blower and radiator fan relay, Onboard supply control unit, 12 V socket	841
9. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Onboard supply control unit, Steering column electronics control unit	842
10. Turn signal switch, Headlight dipper and flasher switch, Onboard supply control unit, Steering column electronics control unit	843

11. Steering angle sender, Onboard supply control unit, Steering column electronics control unit, Rear lid release motor	844
12. Fresh air blower switch, Heater/heat output switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	845
13. Onboard supply control unit, Windscreen wiper motor, Number plate light	846
14. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Left tail light bulb, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb	847
15. Rear lid handle release button, Onboard supply control unit	848
16. Load area illumination switch, Onboard supply control unit, Load area illumination relay, High-level brake light bulb, Load area illumination bulb	849
17. Reversing light switch, Clutch pedal switch, Dipped beam relay, Onboard supply control unit	850
18. Headlight range control regulator	851
19. Ambient temperature sensor, Speedometer, Dash panel insert, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp, Brake system warning lamp	852
20. Immobiliser reader coil, Rev counter, Multifunction indicator, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Coolant temperature warning lamp (too cold)	853
21. Fuse holder A	854
22. Fuse holder A, 12 V socket 3	855
23. Fuse holder A, 12 V socket 2	856
24. Fuse holder A	857
<b>060 - Convenience system</b>	<b>858-887</b>
1. Convenience system	858
2. Rear lid handle release button, Onboard supply control unit, Rear lid release motor	859
3. Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Onboard supply control unit, Window regulator switch illumination bulb	860
4. Onboard supply control unit	861
5. Anti-theft alarm ultrasonic sensor, Rain and light sensor, Onboard supply control unit	862
6. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Onboard supply control unit	863
7. Rear right window regulator switch, in door, Onboard supply control unit, Window regulator switch illumination bulb, Rear right window regulator motor, Rear right power latching motor	864
8. Rear left window regulator switch, in door, Onboard supply control unit, Window regulator switch illumination bulb, Rear left window regulator motor, Rear left power latching motor	865
9. Rear lid contact switch, Onboard supply control unit, Luggage compartment light	866
10. Interior mirror, Heated rear window button, Onboard supply control unit, Automatic anti-dazzle interior mirror	867
11. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	868
12. Onboard supply control unit, Front interior light, Rear interior light, Rear left reading light, Rear right reading light, Front passenger reading light, Driver side reading light	869
13. Rear lid release switch, Anti-theft alarm and vermin repellent system contact switch, Onboard supply control unit, Heated rear window	870
14. Onboard supply control unit	871
15. Onboard supply control unit	872
16. Onboard supply control unit	873
17. Onboard supply control unit	874
18. Onboard supply control unit	875
19. Onboard supply control unit, Rear lid release motor	876
20. Driver side interior locking switch, Interior lock switch illumination bulb	877
21. Driver door power latching system contact switch, Driver door power latching motor	878
22. Central control unit for window regulators	879
23. Front left window regulator switch, Front right window regulator switch in driver door, Central control unit for window regulators, Driver side window regulator motor	880
24. Rear window regulator isolation switch, Central control unit for window regulators, Rear window regulator isolation switch illumination bulb	881
25. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Central control unit for window regulators, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2	882
26. Front passenger door power latching system contact switch, Central control unit for window regulators, Front passenger door power latching motor	883
27. Window regulator switch in front passenger door, Central control unit for window regulators, Front passenger side window regulator motor	884
28. Mirror adjustment changeover switch, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor	885

29. Rev counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Alarm system warning lamp	886
30. Fuse holder A	887
<b>061 - Fuse assignment</b>	<b>888-914</b>
1. Fuse assignment	888
2. Automated manual gearbox control unit, Fuse holder A	889
3. Ignition/starter switch, Airbag control unit, Fuse holder A	890
4. ABS control unit, Selector lever sensors control unit, Fuse holder A	891
5. Load area illumination relay, Fuse holder A	892
6. Radio, Fuse holder A	893
7. Fuse holder A	894
8. Glow plug relay, Fuse holder A	895
9. Fuse holder A	896
10. Voltage converter for USB charge module, Fuse holder A	897
11. Engine/motor control unit, Fuse holder A	898
12. Dash panel insert, Fuse holder A	899
13. Fuel pump relay, Cold start device relay, Fuse holder A	900
14. Air conditioning system switch-off relay, Steering column electronics control unit, Fuse holder A	901
15. Fog light relay, Front right headlight, Fuse holder A	902
16. Fuse holder A, Number plate light	903
17. Fuse holder A	904
18. Front left headlight, Left tail light cluster, Fuse holder A	905
19. Fuse holder A	906
20. Fuse holder A	907
21. Battery, Radiator fan 2nd speed relay, Fuses in fuse holder, Terminal 30 wiring junction	908
22. Fresh air blower and radiator fan relay, Automatic gearbox control unit, Fuses in fuse holder	909
23.	910
24. Onboard supply control unit	911
25. Onboard supply control unit	912
26. Dipped beam relay, Voltage supply relay 1	913
27. Rotary light switch, Right tail light cluster	914
<b>062 - Data bus network</b>	<b>915-920</b>
1. Data bus network	915
2. Onboard supply control unit, Diagnostic connection	916
3. Onboard supply control unit, Central control unit for window regulators	917
4. Parking aid control unit, Steering column electronics control unit	918
5. Automatic gearbox control unit, Selector lever sensors control unit, Engine/motor control unit, Radio	919
6. ABS control unit, Airbag control unit, Automated manual gearbox control unit, Dash panel insert	920
<b>063 - Earthing concept</b>	<b>921-938</b>
1. Earthing concept	921
2. Automated manual gearbox control unit, Front left headlight, Earth point, on left in engine compartment	922
3. Onboard supply control unit	923
4. X-contact relief relay, Front right headlight	924
5. Gearbox, Earth point 1, on front of left longitudinal member	925
6. Parking aid button	926
7. Hazard warning light switch, Headlight range control regulator, Selector lever sensors control unit, Dash panel insert	927
8. Voltage converter for USB charge module, Radio, Earth point, under the centre console near gear stick	928
9. Earth connection 1, in main wiring harness	929
10. Engine/motor control unit, Left tail light cluster, Earth connection 1, in main wiring harness	930
11. High-level brake light bulb, Rear lid release motor, Number plate light	931
12. Rotary light switch, Central control unit for window regulators	932
13. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition transformer, Ignition coil 3 with output stage, Ignition coil 4 with output stage	933
14. Heated rear window button, Right tail light cluster, Diagnostic connection	934
15. Rear lid contact switch, Earth point, on left in luggage compartment	935
16.	936
17. Steering column electronics control unit	937
18. Fog light relay	938
<b>064 - 1.6l engine , CCRA,(MY0),(TC0)</b>	<b>939-957</b>
1. 1.6l engine , CCRA,(MY0),(TC0)	939
2. Batterv. Starter. Alternator with voltage regulator. Onboard supply control unit. Fuses in fuse	940

holder	
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	941
4. Onboard supply control unit	942
5. Oil pressure switch, Engine/motor control unit	943
6. Engine/motor control unit, Cold start valve, Activated charcoal filter solenoid valve 1	944
7. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Voltage supply relay 1	945
8. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Fuel pump for cold start	946
9. Cold start device relay, Air conditioning system control unit, Engine/motor control unit	947
10. Fuel pump relay, X-contact relief relay, Engine/motor control unit	948
11. Cruise control system switch, Cruise control system (CCS) SET button, Brake light switch, Clutch pedal switch, Steering column electronics control unit, Engine/motor control unit	949
12. Engine/motor control unit, Ignition transformer, Spark plugs	950
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	951
14. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	952
15. Throttle valve module, Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	953
16. Fuel gauge sender, Fuel gauge, Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Malfunction warning lamp	954
17. Handbrake warning switch, Brake fluid level warning contact, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Brake system warning lamp	955
18. Fuse holder A	956
19. Fuse holder A	957
<b>065 - 1.6l engine , CFZA,(MY0),(T1J)</b>	<b>958-975</b>
1. 1.6l engine , CFZA,(MY0),(T1J)	958
2. Battery, Starter, Alternator with voltage regulator, Onboard supply control unit, Fuses in fuse holder	959
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	960
4. Onboard supply control unit	961
5. Throttle valve module, Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	962
6. Oil pressure switch, Engine/motor control unit, Activated charcoal filter solenoid valve 1	963
7. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Voltage supply relay 1	964
8. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	965
9. Air conditioning system control unit, Automated manual gearbox control unit, Engine/motor control unit, Starter motor relay 2	966
10. Fuel pump relay, X-contact relief relay, Engine/motor control unit	967
11. Cruise control system switch, Cruise control system (CCS) SET button, Brake light switch, Clutch pedal switch, Steering column electronics control unit, Engine/motor control unit	968
12. Starter motor relay, Engine/motor control unit, Ignition transformer, Spark plugs	969
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	970
14. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	971
15. Fuel gauge sender, Fuel gauge, Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Malfunction warning lamp	972
16. Handbrake warning switch, Brake fluid level warning contact, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Brake system warning lamp	973
17. Fuse holder A	974
18. Fuse holder A	975
<b>066 - 1.0l engine , CSEA,CSEB,(M7B),(MI5),(TJ9)</b>	<b>976-993</b>
1. 1.0l engine , CSEA,CSEB,(M7B),(MI5),(TJ9)	976
2. Battery, Starter, Fuses in fuse holder, Terminal 30 wiring junction	977
3. Ignition/starter switch, Onboard supply control unit	978
4. Onboard supply control unit	979
5. Alternator with voltage regulator, Oil pressure switch, Engine/motor control unit	980
6. Lambda probe. Lambda probe after catalytic converter. Engine/motor control unit. Voltage supply	981

relay 1	
7. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	982
8. Fuel pump relay, X-contact relief relay, Engine/motor control unit	983
9. Brake light switch, Clutch pedal switch, Pressure sensor, Engine/motor control unit	984
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs	985
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	986
12. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	987
13. Throttle valve module, Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	988
14. Glow plug relay, Glow plug activation control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3	989
15. Fuel gauge sender, Fuel gauge, Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert	990
16. Handbrake warning switch, Brake fluid level warning contact, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp	991
17. Fuse holder A	992
18. Fuse holder A	993
<b>067 - 1.6l engine , CNXA,(DP6),(TG5)</b>	<b>994-1012</b>
1. 1.6l engine , CNXA,(DP6),(TG5)	994
2. Battery, Starter, Fuses in fuse holder, Terminal 30 wiring junction	995
3. Ignition/starter switch, Onboard supply control unit	996
4. Oil pressure switch, Onboard supply control unit	997
5. Alternator with voltage regulator, Onboard supply control unit	998
6. X-contact relief relay, Onboard supply control unit	999
7. Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1000
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	1001
9. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	1002
10. Engine speed sender, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	1003
11. Cruise control system switch, Cruise control system (CCS) SET button, Steering column electronics control unit, Engine/motor control unit	1004
12. Driving program button, Fuel pump relay, Engine/motor control unit, Voltage supply relay 1	1005
13. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	1006
14. Throttle valve module, Pressure sensor, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	1007
15. Brake light switch, Clutch pedal switch, Knock sensor 1, Engine/motor control unit	1008
16. Glow plug relay, Glow plug activation control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3, Fuel preheating element 4	1009-1012
<b>068 - 1.6l engine , CWSA,(DP7),(T4I)</b>	<b>1013-1030</b>
1. 1.6l engine , CWSA,(DP7),(T4I)	1013
2. Battery, Starter, Fuses in fuse holder, Terminal 30 wiring junction	1014
3. Ignition/starter switch, Onboard supply control unit	1015
4. Oil pressure switch, Onboard supply control unit	1016
5. Alternator with voltage regulator, Onboard supply control unit	1017
6. X-contact relief relay, Onboard supply control unit	1018
7. Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1019
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	1020
9. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	1021
10. Engine speed sender, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	1022
11. Cruise control system switch, Cruise control system (CCS) SET button, Steering column electronics control unit. Enaine/motor control unit	1023

12. Fuel pump relay, Engine/motor control unit, Voltage supply relay 1, Gearbox, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	1024
13. Clutch pedal switch, Hall sender, Intake air temperature sender, Intake manifold pressure sender, Brake servo pressure sensor, Engine/motor control unit	1025
14. Driving program button, Throttle valve module, Pressure sensor, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	1026
15. Brake light switch, Knock sensor 1, Engine/motor control unit	1027
16. Fuel gauge sender, Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	1028
17. Fuse holder A	1029
18. Fuse holder A, Vacuum pump for brakes	1030
069 - Automated manual gearbox , CFZA,(0EY)	1031-1040
1. Automated manual gearbox , CFZA,(0EY)	1031
2. Ignition/starter switch, X-contact relief relay, Terminal 30 wiring junction	1032
3. Automated manual gearbox control unit, Fuse holder A	1033
4. Driver door contact switch, Gearbox hydraulic pump relay, Automated manual gearbox control unit, Hydraulic pump for gearbox	1034
5. Clutch position sender, Automated manual gearbox control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	1035
6. Gearbox input speed sender, Gearbox hydraulic pressure sender, Gear detection sensor, Sensor 2 for gear detection, Automated manual gearbox control unit	1036
7. Brake light switch, Handbrake warning switch, Automated manual gearbox control unit	1037
8. Onboard supply control unit, Selector lever sensors control unit	1038
9. Starter motor relay, X contact relief relay 2, Onboard supply control unit	1039
10. Engine/motor control unit, Starter motor relay 2, Fuses in fuse holder	1040
070 - 6-speed automatic gearbox , CNXA,CWSA,(0ID)	1041-1047
1. 6-speed automatic gearbox , CNXA,CWSA,(0ID)	1041
2. Automatic gearbox relay, Automatic gearbox control unit, Onboard supply control unit, Fuses in fuse holder	1042
3. Multifunction switch, Gearbox oil temperature sender, Automatic gearbox control unit, Gearbox, Solenoid valve 2	1043
4. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Solenoid valve 1	1044
5. Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4	1045
6. Automatic gearbox control unit, Selector lever sensors control unit, Selector lever position display	1046
7. Ignition/starter switch, Selector lever locked in position P switch, Selector lever sensors control unit, Selector lever lock solenoid, Ignition key withdrawal lock solenoid, Fuse holder A	1047
071 - Anti-lock brake system (ABS) , (1AC)	1048-1053
1. Anti-lock brake system (ABS) , (1AC)	1048
2. Steering angle sender, ABS control unit, ABS solenoid valve relay, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve, Positive connection 4 (15a) in main wiring harness, Positive connection 7 (30a) in main wiring harness	1049
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay, Rear right ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve, ABS return flow pump	1050
4. Onboard supply control unit	1051
5. Brake light switch, Fuse holder A	1052
6. Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Brake system warning lamp, Fuses in fuse holder	1053
072 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CNXA,CWSA,(1AT)	1054-1060
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CNXA,CWSA,(1AT)	1054
2. ABS control unit, ABS solenoid valve relay, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	1055
3. Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay, Rear right ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve, ABS return flow pump	1056
4. Button for TCS and electronic stabilisation program, Driving program button, ABS control unit	1057
5. Onboard supply control unit, Fuses in fuse holder, Fuse holder A	1058
6. Brake light switch	1059
7. Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Brake system warning lamp	1060
073 - Airbag systems . (4UE).(4UF)	1061-1066

1. Airbag systems , (4UE),(4UF)	1061
2. Ignition/starter switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Airbag warning lamp, Fuse holder A	1062
3. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Steering column electronics control unit, Warning lamp for airbag deactivated on front passenger side, Airbag igniter on driver side	1063
4. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Airbag control unit	1064
5. Airbag control unit, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter	1065
1. Front passenger seat belt tensioner igniter 1	
6. Airbag control unit	1066
074 - Multifunction steering wheel , (1XX),(2PC),(2ZH)	1067-1069
1. Multifunction steering wheel , (1XX),(2PC),(2ZH)	1067
2. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Fuse holder A	1068
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Multifunction steering wheel control unit	1069
075 - Parking aid (PDC) , (7X1),(7X2)	1070-1076
1. Parking aid (PDC) , (7X1),(7X2)	1070
2. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit, Fuse holder A	1071
3. Rear left parking aid sender, Parking aid control unit	1072
4. Rear centre left parking aid sender, Parking aid control unit	1073
5. Parking aid button, Parking aid control unit	1074
6. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	1075
7. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Onboard supply control unit	1076
076 - Preparation for radio , (8UB)	1077-1081
1. Preparation for radio , (8UB)	1077
2. Radio, Front right treble loudspeaker, Front right bass loudspeaker	1078
3. Radio, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	1079
4. Onboard supply control unit, Radio, Rear right bass loudspeaker	1080
5. Radio, Roof aerial, Aerial, Fuse holder A	1081
077 - Radio , (8YK),(I6G),(I7E),(I7H),(I7R),(I7J)	1082-1088
1. Radio , (8YK),(I6G),(I7E),(I7H),(I7R),(I7J)	1082
2. Fuse holder A	1083
3. Radio, Front right treble loudspeaker, Front right bass loudspeaker	1084
4. Radio, Front left treble loudspeaker, Front left bass loudspeaker	1085
5. Radio, Roof aerial, Aerial, Rear left bass loudspeaker, Rear right bass loudspeaker	1086
6. Telephone bracket, USB connection 1, USB connection 2	1087
7. Onboard supply control unit	1088
078 - Radio navigation system , (8AY)	1089-1096
1. Radio navigation system , (8AY)	1089
2. Fuse holder A	1090
3. Radio/RNS, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	1091
4. Radio/RNS, Reversing camera	1092
5. Radio/RNS, Roof aerial, Aerial, Rear left bass loudspeaker, Rear right bass loudspeaker, GPS aerial	1093
6. Radio/RNS, Telephone microphone, Connection for external audio sources	1094
7. Voltage converter for USB charge module, USB connection 1	1095
8. Onboard supply control unit	1096
079 - Reversing camera (Rear Assist) , (KA1)	1097-1098
1. Reversing camera (Rear Assist) , (KA1)	1097
2. Onboard supply control unit, Radio, Radio/RNS, Reversing camera, Fuse holder A	1098
080 - Air conditioning system , (9AB)	1099-1105
1. Air conditioning system , (9AB)	1099
2. Radiator fan 2nd speed relay, Air conditioning system switch-off relay, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	1100
3. Pressure sensor, Fresh air blower and radiator fan relay	1101
4. Onboard supply control unit, Fuse holder A	1102
5. Air conditioning system control unit, Fresh air and air recirculation flap control motor	1103
6. Fresh air blower switch. Fresh air blower series resistor with overheating fuse. Fuses in fuse	1104

holder, Fresh air blower	
7. Air conditioner compressor	1105
081 - Coming Home , (9C2)	1106-1120
1. Coming Home , (9C2)	1106
2. Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Front left headlight, Front left turn signal bulb	1107
3. Onboard supply control unit, Right headlight twin filament bulb, Front right headlight, Right side light bulb, Front right turn signal bulb	1108
4. Headlight main beam relay, Dipped beam relay, Onboard supply control unit	1109
5. Rotary light switch, Light switch, Onboard supply control unit	1110
6. Light switch, Rotary light switch, Onboard supply control unit	1111
7. Headlight dipper and flasher switch, Onboard supply control unit, Steering column electronics control unit	1112
8. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left tail light cluster	1113
2, Right tail light cluster 2, Left reversing light bulb, Right reversing light bulb	
9. Onboard supply control unit	1114
10. Left tail light cluster, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Left brake and tail light bulb	1115
11. Right tail light bulb, Right tail light cluster, Rear right turn signal bulb, Right brake light bulb, Right brake and tail light bulb	1116
12. Rev counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	1117
13. Voltage supply relay 1, Fuse holder A	1118
14. Fuse holder A	1119
15. Headlight range control regulator, Fuse holder A	1120
082 - Fog light , (8WD)	1121-1124
1. Fog light , (8WD)	1121
2. Onboard supply control unit, Left fog light bulb, Right fog light bulb	1122
3. Rotary light switch, Light switch, Onboard supply control unit	1123
4. Headlight dipper and flasher switch, Steering column electronics control unit, Fuse holder A	1124
083 - Fog light and rear fog light , (8TC),(8WD),(8WH)	1125-1132
1. Fog light and rear fog light , (8TC),(8WD),(8WH)	1125
2. Onboard supply control unit, Left fog light bulb, Right fog light bulb	1126
3. Rotary light switch, Light switch, Onboard supply control unit	1127
4. Onboard supply control unit, Switch-off relay for additional main beam, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	1128
5. Fog light relay, Onboard supply control unit	1129
6. Onboard supply control unit, Rear left fog light bulb, Left tail light cluster, Rear left turn signal bulb, Left reversing light bulb, Left brake and tail light bulb	1130
7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Rear fog light warning lamp	1131
8. Headlight dipper and flasher switch, Steering column electronics control unit, Fuse holder A	1132
084 - Dual headlight , (8JQ)	1133-1142
1. Dual headlight , (8JQ)	1133
2. Ignition/starter switch, Onboard supply control unit	1134
3. Onboard supply control unit, Front left headlight, Left side light bulb, Front right headlight, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	1135
4. Onboard supply control unit	1136
5. Headlight dipper and flasher switch, Headlight main beam relay, Dipped beam relay, Onboard supply control unit, Steering column electronics control unit	1137
6. Rotary light switch, Light switch, Onboard supply control unit	1138
7. Light switch, Rotary light switch, Onboard supply control unit	1139
8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	1140
9. Voltage supply relay 1, Fuse holder A	1141
10. Fuse holder A	1142
085 - 1.6l engine , CNXD,(7GX),(D7Z),(TG5)	1143-1162
1. 1.6l engine , CNXD,(7GX),(D7Z),(TG5)	1143
2. Battery, Starter, Fuses in fuse holder, Terminal 30 wiring junction	1144
3. Ignition/starter switch, Onboard supply control unit	1145
4. Oil pressure switch, Onboard supply control unit	1146
5. Alternator with voltage regulator, Onboard supply control unit	1147
6. X-contact relief relay, Onboard supply control unit	1148
7. Coolant temperature sender. Enaine/motor control unit. Injector. cylinder 1. Injector. cylinder 2.	1149

Injector, cylinder 3, Injector, cylinder 4	
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	1150
9. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	1151
10. Engine speed sender, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	1152
11. Cruise control system switch, Cruise control system (CCS) SET button, Steering column electronics control unit, Engine/motor control unit	1153
12. Fuel pump relay, Engine/motor control unit, Voltage supply relay 1	1154
13. Driving program button, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1	1155
14. Throttle valve module, Pressure sensor, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	1156
15. Brake light switch, Clutch pedal switch, Knock sensor 1, Engine/motor control unit	1157
16. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit	1158
17. Glow plug relay, Glow plug activation control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3, Fuel preheating element 4	1159
18. Fuel gauge sender, Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp, Electronic power control fault lamp	1160
19. Fuse holder A	1161
20. Fuse holder A	1162
086 - 1.0l engine , CSEB,(M7B),(TJ9),(7GX)	1163-1181
1. 1.0l engine , CSEB,(M7B),(TJ9),(7GX)	1163
2. Battery, Starter, Fuses in fuse holder, Terminal 30 wiring junction	1164
3. Ignition/starter switch, Onboard supply control unit	1165
4. Onboard supply control unit	1166
5. Alternator with voltage regulator, Oil pressure switch, Engine/motor control unit	1167
6. Engine/motor control unit	1168
7. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	1169
8. Fuel pump relay, X-contact relief relay, Engine/motor control unit, Voltage supply relay 1	1170
9. Brake light switch, Clutch pedal switch, Pressure sensor, Engine/motor control unit	1171
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs	1172
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Activated charcoal filter solenoid valve 2, Camshaft control valve 1	1173
12. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	1174
13. Throttle valve module, Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit	1175
14. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	1176
15. Glow plug relay, Glow plug activation control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3	1177
16. Fuel gauge sender, Fuel gauge, Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert	1178
17. Handbrake warning switch, Brake fluid level warning contact, Coolant temperature gauge, Rev counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp	1179
18. Fuse holder A	1180
19. Fuse holder A	1181
801 - -Setup places - Mass points - 3	1182-1190
1. Mass Points	1182-1190
1.1 Engine compartment mass points	1182-1184
1.2 Mass points inside the vehicle	1185-1187
1.3 Mass points at the rear of the vehicle	1188-1190
802 - -Setup places: Fuses - 3	1191-1198
1. Fuses	1191-1198
1.1 Fuse location	1191
1.2 Batterv s fuse holder S-	1191-1192

1.2.1 Battery fuse holder, from May 2012	1192
1.3 Fuse Holder SA-	1193-1198
1.3.1 Fuse holder -SA , from May, 2012	1194-1198
803 - -Setup places: Relays - 3	1199-1202
1. Relays	1199-1202
1.1 Relay board on the left behind the panel	1199-1200
1.1.1 Relays description:	1199-1200
1.2 Relays on the right behind the panel	1201-1202
1.2.1 Relays description:	1201-1202
804 - -Setup places: Control Units - 3	1203-1228
1. Control units	1203-1228
1.1 Control unit with indicator on combined instrument -J285-	1205-1206
1.1.1 Setup place:	1205
1.1.2 Connector description:	1205-1206
1.2 Onboard network control unit -J519-	1207
1.2.1 Setup place:	1207
1.2.2 Connector description:	1207
1.3 Motor control unit -J623-	1208-1209
1.3.1 Setup place:	1208
1.3.2 Connector description:	1209
1.4 Motor control unit -J623-	1210-1211
1.4.1 Setup place:	1210
1.4.2 Connector description:	1211
1.5 Motor control unit -J623-	1212-1213
1.5.1 Setup place:	1212
1.5.2 Connector description:	1213
1.6 ABS control unit -J104-	1214-1215
1.6.1 Setup place:	1214
1.6.2 Connector description:	1215
1.7 Airbag control unit -J234-	1216-1217
1.7.1 Setup place:	1216
1.7.2 Connector description:	1217
1.8 Air conditioning control unit -J301-	1218-1219
1.8.1 Setup place:	1218
1.8.2 Connector description:	1219
1.9 Central control unit for command of the windows -J1015-	1220-1221
1.9.1 Setup place:	1220
1.9.2 Connector description:	1221
1.10 Parking aid control unit -J446-	1222-1223
1.10.1 Setup place:	1222
1.10.2 Connector description:	1223
1.11 Automatic transmission control unit -J217-	1224-1225
1.11.1 Setup place:	1224
1.11.2 Connector description:	1225
1.12 Selector lever sensors control unit -J587-	1226-1228
1.12.1 Setup place:	1226
1.12.2 Connector description:	1227-1228
811 - Fitting locations - Earth points - 3	1229-1230
1. Earth points	1229-1230
1.1 Engine compartment earth points	1229
1.2 Vehicle interior earth points	1230
812 - Setup place - Fuses - 3	1231-1243
1. Fuse Location	1231-1243
1.1 Battery s fuse holder - S -, from April, 2014	1231-1232
1.1.1 Battery s fuse holder S-	1232
1.2 Fuse holder SA-	1233-1243
1.2.1 Fuse holder - SA -, from April, 2014	1234-1237
1.2.2 Fuse holder - SA -, from December, 2015	1238-1243
813 - Fitting Locations f Relays - 3	1244-1253
1. Relays	1244-1253
1.1 Relay on the left in the engine compartment, as of April 2014	1245
1.1.1 Relay description, as of April 2014:	1245
1.2 Relay to the left, behind the dashboard	1246
1.2.1 Relay descriptions, as of April 2014:	1246
1.3 Relay to the left, behind the dashboard	1247-1248
1.3.1 Relav descriptions. as of April 2014:	1247-1248

1.4 Relay to the left, behind the dashboard	1249-1250
1.4.1 Relay descriptions, as of December 2015:	1249-1250
1.5 Relay to the right, behind the dash panel	1251-1253
1.5.1 Relay description: According to model	1252
1.5.2 Relay description: According to model	1253
814 - Setup places - Control units at the front of the vehicle - 3	1254-1271
1. Control units	1254-1271
1.1 ABS control unit -J104-	1255-1257
1.1.1 Setup place:	1255
1.1.2 Connector description: ABS control unit -J104-	1256-1257
1.2 Control unit for automated transmission -J514-	1258-1261
1.2.1 Setup place:	1258
1.2.2 Connector Description: Control unit for automated transmission -J514-	1259-1261
1.3 Motor control unit -J623-	1262
1.3.1 Setup place:	1262
1.4 Motor control unit -J623-	1263
1.4.1 Setup place:	1263
1.5 Control unit for glow plugs activation -J370-	1264-1265
1.5.1 Setup place:	1264
1.5.2 Connector description:Control unit for glow plugs activation -J370-	1265
1.6 Control unit for automated transmission -J514-	1266-1267
1.6.1 Setup place:	1266
1.6.2 Connector Description: Control unit for automated transmission -J514-.1).	1267
1.7 Automatic transmission control unit -J217-	1268-1271
1.7.1 Setup place:	1268
1.7.2 Connector Description: Automatic transmission control unit -J217-	1268-1271
815 - Fitting Locations - Vehicle mid section control units - 3	1272-1298
1. Control units	1272-1298
1.1 Parking assist control unit -J446-	1273-1274
1.1.1 Fitting Location:	1273
1.1.2 Connector description: Parking assist control unit -J446-	1274
1.2 .Front passenger exterior mirror lowering function control unit -J1110- until December 2015.	1275-1276
1.2.1 Fitting locations:	1275
1.2.2 Connector description:Passenger side mirror folding control unit -J1110-	1276
1.3 Air conditioning control unit -J301-	1277-1278
1.3.1 Fitting Location:	1277
1.3.2 Connector description: Air conditioning control unit -J301-	1278
1.4 Selector lever sensors control unit -J587-	1279-1280
1.4.1 Fitting Location:	1279
1.4.2 Connector description: Selector lever sensors control unit -J587-	1280
1.5 Instrument cluster indicator control unit -J285-	1281-1284
1.5.1 Fitting locations:	1281
1.5.2 Connector description: Control unit with indicator in the Instrument cluster: Standard -J285-	1282
1.5.3 Fitting locations:	1283
1.5.4 Connector description: Control unit with indicator in the Instrument cluster: Comfort -J285-	1284
1.6 Voltage converter to USB charging mode -A5-	1285-1286
1.6.1 Fitting locations:	1285
1.6.2 Connector description: Voltage converter to USB charging mode -A5-	1286
1.7 Onboard network control unit: BFM -J519-	1287-1289
1.7.1 Fitting Location:	1287
1.7.2 Connector description: Onboard network control unit: BFM -J519-	1288-1289
1.8 Onboard network control unit: BCM -J519-	1290-1293
1.8.1 Fitting Location:	1290
1.8.2 Connector description: Onboard network control unit: BCM -J519-	1291-1293
1.9 Central control unit for window control -J1015-	1294-1296
1.9.1 Fitting Location:	1294
1.9.2 Connector description: Central control unit for window control -J1015-	1295-1296
1.10 Airbag control unit -J234-	1297-1298
1.10.1 Fitting Location:	1297-1298