



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Speedometer drive pinions	2
1.3 Code letters, gearbox allocation, ratios, oil capacities (up to 07.82)	2
1.4 Code letters, gearbox allocation, ratios, oil capacities (up to 07.82)	3
1.5 Code letters, gearbox allocation, ratios, oil capacities (up to 07.82)	4
1.6 Code letters, gearbox allocation, ratios, oil capacities (from 8.82) (up to 07.83)	4
1.7 Code letters, gearbox allocation, ratios, oil capacities (from 8.82 up to 07.83)	5
1.8 Code letters, gearbox allocation, ratios, oil capacities (from 8.82 up to 7.83)	6
1.9 Code letters, gearbox allocation, ratios, oil capacities (from 8.83)	7
1.10 Code letters, gearbox allocation, ratios, oil capacities (from 8.83)	8
1.11 Code letters, gearbox allocation, ratios, oil capacities (from 8.83)	8
1.12 Code letters, gearbox allocation, ratios, oil capacities (from 8.83)	9
1.13 Transmission layout	11
30 - Clutch	14
1 Clutch	14
1.1 Clutch	14
1.2 Repairs to the clutch mechanism	14
1.3 Clutch cable chafing against brake fluid reservoir	17
1.4 Repairs to clutch (190/200 mm dia.)	18
34 - Controls, Housing	24
1 Controls, Housing	24
1.1 Controls, Housing	24
1.2 Operation of shift mechanism	24
1.3 Repair shift linkage	27
1.4 Adjusting gearshift linkage	31
1.5 Adjusting selector shaft retaining screw	32
1.6 Adjusting retaining screw for 5th gear	33
1.7 Selector shaft lever self-locking nut	33
1.8 Removing and installing bonded rubber bushes for gearbox carrier	34
1.9 Removing and installing gearbox	35
1.10 General view	38
1.11 Dismantling and assembling gearbox	40
1.12 Dismantling and assembling gearbox	45
1.13 Dismantling and assembling gearbox	48
1.14 Dismantling and assembling gearbox	63
1.15 Dismantling and assembling gearbox	68
1.16 Dismantling and assembling gearbox	71
1.17 Vehicles with gearchange and consumption indicator	74
1.18 Additional bearing for output shaft	75
1.19 Gearbox breather relocation	77
1.20 TDC sensor adapter in clutch housing	77
1.21 Spring for the reverse gear relay lever	78
1.22 Modified locating and mounting of the selector shaft in the gearbox	78
1.23 Additionally securing magnet in clutch housing with sealing compound	81
1.24 Selector shaft cover modified	82
35 - Gears, Shafts	83
1 Gears, Shafts	83
1.1 Gears, Shafts	83
1.2 Dismantling and assembling input shaft	83



1.3	Dismantling and assembling output shaft	93
1.4	Adjusting output shaft	101
1.5	Synchronizer hub for 5th gear with retaining ring for locking keys	104
1.6	Dismantling and assembling output shaft (pinion shaft)	106
39	- Final drive, Differential	107
1	Final drive, Differential	107
1.1	Final drive, Differential	107
1.2	Removing and installing drive flange oil seal	107
1.3	Dismantling and assembling differential	109
1.4	Adjustment table	116
1.5	Adjusting differential	116
1.6	Play free location of drive flange shafts	118
1.7	Differential with cones: dismantling and assembling	119
1.8	Differential bevel gear shaft secured with extended rivets	123