



Contents

01 - Self-diagnosis, Electrical check	1
1 Electrical check of the regulated exhaust system (engine code: JH)	1
1.1 Electrical check of the regulated exhaust system (engine code: JH)	1
1.2 Test table - Golf	2
1.3 Test table - Scirocco	3
25 - Mixture preparation, Injection	5
1 K-jetronic injection system	5
1.1 K-jetronic injection system	5
1.2 Fitting locations - overview (engine code: JH)	5
1.3 Servicing K-Jetronic injection system	8
1.4 Technical data	24
1.5 Safety measures	27
1.6 Rules for cleanliness	27
1.7 Idling adjustment (engine code: DX, EG, JJ, KT, and JH without catalyst)	28
1.8 Idling adjustment (engine code: JH with catalyst)	30
1.9 Checking idling speed boost (09.84 >)	33
1.10 Checking adjusting lever and control plunger	35
1.11 Checking and adjusting air flow meter plate position (engine code: DX and KT >02.86, EG, JH, JJ)	35
1.12 Checking/adjusting rest position and free travel of air glow meter plate (engine code: DX and KT 03.86 >)	36
1.13 Removing and installing control plunger (engine code: DX and KT 03.86>)	39
1.14 Checking cold start valve and thermo time switch	39
1.15 Cold acceleration enrichment: Retrofitting (engine code: DX and KT >07.84, JH with vacuum switch 08.87>)	41
1.16 Checking cold acceleration enrichment (engine code: DX and KT 08.84 >)	45
1.17 Checking diaphragm pressure switch (engine code: DX and KT 08.84 >)	46
1.18 Checking and adjusting idling switch (engine code: DX and KT 08.84 >)	46
1.19 Checking and adjusting full throttle switch (engine code: JH)	47
1.20 Checking auxiliary air valve	48
1.21 Checking warm-up valve	49
1.22 Checking and adjusting system pressure	50
1.23 Checking Holding pressure	51
1.24 Comparing injection delivery	52
1.25 Basic throttle valve setting	54
1.26 Checking regulated exhaust system (engine code: JH)	54
1.27 Vacuum connections (engine code: EG)	62
1.28 Vacuum connections (engine code: DX 11.90 >)	64
28 - Ignition system	65
1 Servicing ignition system	65
1.1 Servicing ignition system	65
1.2 Servicing contact breaker controlled ignition system (engine code: EG > 07.79)	66
1.3 Adjustment data, spark plug	71
1.4 Distributor data	71
1.5 Installing distributor	72
1.6 Checking and adjusting dwell angle ignition timing	73
1.7 Checking ignition timing control	74
1.8 Servicing TDI-H ignition system (engine code: EG 08.79 >, DX, JH, JJ, KT)	77
1.9 Dismantling and assembling distributor (engine code: EG 08.79 >, DX, JH, JJ, KT)	81
1.10 Adjustment data, spark plugs	85
1.11 Distributor data	87
2 Safety measures for TCI-H system	88
2.1 Safety measures for TCI-H system	88



**Golf, Jetta, Scirocco >
K-Jetronic/Ignition system**

2.2	Installing distributor	89
2.3	Checking and adjusting ignition timing	90
2.4	Checking ignition timing control	91
2.5	Checking TCI-H switch unit and Hall sender	95
2.6	Checking DIS switch unit	97