



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine summary	1
<b>10 - Removing and installing engine</b>	<b>4</b>
<b>1 Engine removal and installation</b>	<b>4</b>
1.1 Engine removal and installation	4
1.2 Notes on engine removal	4
1.3 Notes on installation	5
1.4 Tightening torques	6
1.5 Additional installation procedures and notes for vehicles with air conditioning	6
<b>13 - Crankshaft group</b>	<b>8</b>
<b>1 Dismantling and assembling engine</b>	<b>8</b>
1.1 Dismantling and assembling engine	8
1.2 Installing toothed belt	19
1.3 Adjusting alternator V-belt tension	21
<b>2 Dismantling and assembling cylinder block, crankshaft and flywheel</b>	<b>22</b>
2.1 Dismantling and assembling cylinder block, crankshaft and flywheel	22
2.2 Installing release plate retaining ring	29
2.3 Renewing crankshaft oil seal -pulley end	30
2.4 Crankshaft dimensions	31
2.5 Installing drive plate	32
2.6 Marking flywheel with ignition timing notch	32
<b>3 Dismantling and assembling pistons and conrods</b>	<b>34</b>
3.1 Dismantling and assembling pistons and conrods	34
3.2 Piston and cylinder dimensions	42
<b>15 - Cylinder head, Valve gear</b>	<b>44</b>
<b>1 Removing and installing cylinder head</b>	<b>44</b>
1.1 Removing and installing cylinder head	44
1.2 Installing cylinder head	48
1.3 Testing compression	49
<b>2 Servicing valve gear</b>	<b>50</b>
2.1 Servicing valve gear	50
2.2 Reworking valve seats	58
2.3 Checking hydraulic tappets	60
2.4 Renewing camshaft oil seal	61
2.5 Removing and installing camshaft	61
2.6 Checking valve guides	62
2.7 Renewing valve guides	63
2.8 Renewing valve stem oil seal -with cylinder head installed	63
2.9 Checking and adjusting valve clearance	64
<b>17 - Lubrication</b>	<b>67</b>
<b>1 Removing and installing lubrication system components</b>	<b>67</b>
1.1 Removing and installing lubrication system components	67
1.2 Oil cooler	74
1.3 Checking oil pressure switch and oil pressure (engine codes: DX, JH, JJ, KT, 2H)	78
1.4 Checking oil pressure switch and oil pressure (engine code: EG)	79
<b>19 - Cooling system</b>	<b>81</b>



<b>1</b>	<b>Removing and installing cooling system components</b> . . . . .	<b>81</b>
1.1	Removing and installing cooling system components . . . . .	81
1.2	Draining and refilling with coolant . . . . .	89
1.3	Fan run-on for cooling injectors . . . . .	90
1.4	Repair air deflector installation . . . . .	90
<b>20</b>	<b>Fuel supply system</b> . . . . .	<b>91</b>
<b>1</b>	<b>Removing and installing fuel system components</b> . . . . .	<b>91</b>
1.1	Removing and installing fuel system components . . . . .	91
1.2	Removing and installing fuel tank with ancillary components (> 1/84, 40-litre fuel tank) . . . . .	91
1.3	Removing and installing fuel tank with ancillary components (2/84 >, 55-litre fuel tank) . . . . .	98
1.4	Removing and installing fuel pump, fuel filter, and pressure accumulator (engine codes: DX and KT > 1/84, EG JJ) . . . . .	103
1.5	Removing and installing fuel pump, fuel filter, and pressure accumulator (engine codes: DX and KT 2/84 >, JH) . . . . .	105
1.6	Removing and installing fuel pump and fuel filter (engine code: 2H) . . . . .	107
1.7	Rules of cleanliness . . . . .	108
1.8	Connecting remote control V.A.G 1348/3A . . . . .	111
1.9	Checking fuel pumps (engine codes: DX, EG, JH, JJ, KT) . . . . .	111
1.10	Checking fuel pump (engine code: 2H) . . . . .	114
1.11	Checking fuel pump non-return valve (engine codes: DX, EG, JH, JJ, KT) . . . . .	117
1.12	Checking fuel pump relay (engine codes: DX, EG, JH, JJ, KT) . . . . .	118
1.13	Checking fuel pump relay (engine code: 2H) . . . . .	119
1.14	Retrotitting adapter plate for fuel pump relay (engine code: EG > 7/82) . . . . .	120
1.15	Removal and installation of fuel gauge sender, fuel lift pump . . . . .	121
1.16	Renewing fuel gauge sender, fuel lift pump (engine codes: DX and KT 2.84 >, JH) . . . . .	121
1.17	Removing and installing fuel tank (> 1/84, 40- litre fuel tank) . . . . .	123
1.18	Removing and installing fuel tank (2/84 >, 55- litre fuel tank) . . . . .	125
1.19	Checking fuel system for leaks (> 1/84, 40-litre fuel tank) . . . . .	126
<b>2</b>	<b>Servicing activated charcoal filter unit</b> . . . . .	<b>128</b>
2.1	Servicing activated charcoal filter unit . . . . .	128
2.2	Engine code: JH > 7/86 . . . . .	128
2.3	Engine code: JH 8/86 > . . . . .	130
2.4	Engine code: 2H . . . . .	132
<b>3</b>	<b>Throttle-mechanism</b> . . . . .	<b>134</b>
3.1	Throttle-mechanism . . . . .	134
3.2	Throttle cable adjustment, manual gearbox . . . . .	134
3.3	Servicing throttle controls, automatic gearbox (engine codes: JH, 2H) . . . . .	135
3.4	Adjusting throttle controls . . . . .	136
<b>26</b>	<b>Exhaust system</b> . . . . .	<b>139</b>
<b>1</b>	<b>Removing and installing exhaust system components</b> . . . . .	<b>139</b>
1.1	Removing and installing exhaust system components . . . . .	139
1.2	Engine Codes: DX, EG JJ KT . . . . .	139
1.3	Engine Code: JH . . . . .	142
1.4	Engine Code: 2H . . . . .	145
1.5	Removing and installing spring clips (engine codes: DX 8/83 >, JH, KT) . . . . .	148
1.6	Tensioning and relaxing spring clips (engine codes: DX 8/83 >, JH, KT) . . . . .	148
<b>2</b>	<b>Checking exhaust gas recirculation (EGR) (engine code: JJ)</b> . . . . .	<b>149</b>
2.1	Checking exhaust gas recirculation (EGR) (engine code: JJ) . . . . .	149