



## Contents

<b>1</b>	<b>Engine list</b> .....	<b>1</b>
<b>2</b>	<b>Service work</b> .....	<b>6</b>
2.1	Service tables .....	6
2.2	Oil change service .....	7
2.3	Inspection service every 12 months .....	11
2.4	Inspection service every 30,000 km .....	13
2.5	Time or distance dependent additional work .....	15
2.6	Delivery inspection .....	17
<b>3</b>	<b>General</b> .....	<b>20</b>
3.1	Raising vehicle with lifting platform and trolley jack .....	20
3.2	Sticker .....	21
3.3	Connecting fault reader .....	22
3.4	Vehicle identification number .....	24
3.5	Countries with elevated sulphur content in diesel fuel .....	24
3.6	Engine code and engine number .....	25
3.7	RME fuel (biodiesel) for vehicles 1996 ▶ .....	26
3.8	Type plate .....	27
<b>4</b>	<b>Descriptions of work</b> .....	<b>28</b>
4.1	Battery: Check battery terminal clamps for secure seating .....	29
4.2	Battery: Check .....	30
4.3	Wheel securing bolts: Tighten to correct torque setting .....	30
4.4	Clock: Set to correct time .....	31
4.5	Climatronic: Set temperature to 22 °C .....	32
4.6	Radio: Activate anti-theft coding .....	32
4.7	Engine oil level: Check, replenish if necessary .....	33
4.8	Driver and front passenger airbags: Visual check of airbag units .....	34
4.9	Windscreen wash/wipe system and headlight washer system: Check function, if necessary adjust spray jets .....	34
4.10	Windscreen wiper blades: Check park position, adjust if necessary; if wiper blades "judder": check setting angle, adjust if necessary .....	38
4.11	Self-diagnosis: Read fault memories of all systems .....	40
4.12	Service interval display: Reset .....	41
4.13	Door arrester and securing pins: Grease .....	43
4.14	Sunroof: Check function, clean and grease guide rails .....	44
4.15	Engine (from above and below): Perform visual check for leaks and damage .....	44
4.16	Cooling system: Check frost protection and coolant level .....	44
4.17	Spark plugs: Renew .....	47
4.18	Power assisted steering: Check oil level .....	48
4.19	Fuel filter: Renew (diesel engine) .....	48
4.20	Fuel filter: Drain water (diesel engine) .....	49
4.21	Dust and pollen filter: Renew filter element .....	49
4.22	Poly V-belt: Adjust tension .....	51
4.23	Poly V-belt: Renew .....	51
4.24	Checking V-belt condition and V-belt tension, if necessary tension V-belt (power-assisted steering vane pump) .....	51
4.25	Checking poly V-belt condition and tension poly V-belt (alternator) .....	52
4.26	Camshaft drive toothed belt (diesel engine): Check condition and tension, tension if necessary .....	53
4.27	Camshaft drive toothed belt (petrol engine): Check condition and tension, tension if necessary .....	55
4.28	Toothed belt and toothed belt tensioning roller: Renew (SDI / TDI engines) .....	56
4.29	Engine oil: Drain or extract and top-up; renew oil filter .....	56
4.30	Toothed belt: Check for wear (SDI/TDI engines) .....	59
4.31	Constant velocity joint bellows: Perform visual check .....	59



4.32	Manual gearbox/final drive: Check oil level (for vehicles with four-wheel drive the gearbox oil level in rear final drive must also be checked) .....	59
4.33	Automatic gearbox: Check oil level of final drive .....	60
4.34	Brake system: Perform visual check for leaks and damage .....	60
4.35	Front and rear brake pads/linings: Check thickness .....	61
4.36	Underbody protection: Perform visual check for damage .....	63
4.37	Track rod ends: Check play, security and boots .....	63
4.38	Swivel joints: Visual check .....	64
4.39	Tyres (including spare): Check condition and wear pattern .....	64
4.40	Tyre tread depth (including spare wheel): Check .....	65
4.41	Tyre pressures (including spare): Check, correct if necessary .....	65
4.42	Automatic gearbox: Change ATF .....	71
4.43	Automatic gearbox: Check ATF level .....	71
4.44	Changing brake fluid .....	72
4.45	Brake fluid level (dependent upon lining/pad wear): Check .....	73
4.46	Checking idling speed, adjust if necessary (diesel engines with engine codes AAZ and 1Y) .....	74
4.47	Headlight adjustment: Check, adjust if necessary .....	74
4.48	Performing road test .....	77
<b>5</b>	<b>Exhaust emissions test</b> .....	<b>79</b>
5.1	Exhaust emissions test for petrol engines .....	79
5.2	Exhaust emissions test for diesel engines .....	104
<b>6</b>	<b>Glossary</b> .....	<b>120</b>