



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Running gear	1
1.2 Wheels, tyres	1
1.3 Steering	1
1.4 Braking	1
<b>40 - Front suspension</b>	<b>9</b>
<b>1 Repairing front suspension (basic running gear)</b>	<b>9</b>
1.1 Removing and installing subframe, anti-roll bar and suspension link (basic running gear)	10
1.2 Allocation of anti-roll bar to Golf/Vento basic running gear	13
1.3 Checking swivel joint	14
1.4 Reworking cap nut in longitudinal member	14
1.5 Removing and installing wheel bearing, suspension strut, drive shaft (basic running gear)	15
1.6 Removing and installing drive shaft, vehicles with automatic gearbox	19
1.7 Repairing front suspension strut (basic running gear)	20
1.8 Allocation of suspension strut mounting to vehicle	22
<b>2 Repairing front suspension (Plus running gear)</b>	<b>23</b>
2.1 Removing and installing subframe, anti-roll bar and suspension link (Plus running gear)	24
2.2 Removing and installing swivel joint	26
2.3 Allocation of anti-roll bar to Golf/Vento Plus running gear	27
2.4 Removing and installing wheel bearing, suspension strut (Plus running gear)	27
2.5 Repairing front suspension strut (Plus running gear)	31
2.6 Modified suspension strut from 06.93, vehicles with Plus running gear	32
2.7 Removing and installing drive shaft (Plus running gear), vehicles with bonded drive shaft	33
2.8 Removing and installing drive shaft with triple roller joint	35
2.9 Wheel hubs with compressed splines, vehicles with Plus running gear	36
2.10 Removing and installing drive shafts on vehicles with compressed splines in the wheel hub	37
<b>3 Repairing drive shaft</b>	<b>39</b>
3.1 Checking outer constant velocity joint	44
3.2 Checking inner constant velocity joint	45
3.3 Repairing drive shaft with triple roller joint	47
3.4 Dismantling and assembling triple roller joint	48
<b>42 - Rear suspension</b>	<b>52</b>
<b>1 Repairing rear axle (front-wheel drive vehicles)</b>	<b>52</b>
1.1 Repairing rear axle	52
1.2 Removing and installing bonded rubber bush	54
1.3 Track width change on Golf/Vento from 08.93 - model year 1994	58
1.4 Modified weld studs on rear axle	59
1.5 Reworking cap nut in longitudinal member, vehicles with front-wheel drive	60
1.6 Allocation of rear axle assembly and anti-roll bar	61
1.7 Dismantling and assembling suspension strut	61
1.8 Removing and installing rear axle, Golf Variant	63
1.9 Assembly overview: Rear axle, Golf Variant	64
1.10 Removing and installing bonded rubber bush	66
1.11 Modified weld studs on rear axle, Golf Variant	71
1.12 Modified rear axle for Golf Variant	73
1.13 Removing and installing rear shock absorber, Golf Variant	74
1.14 Dismantling and assembling shock absorber, Golf Variant	75



<b>2</b>	<b>Repairing rear axle (vehicles with four-wheel drive)</b>	<b>77</b>
2.1	Assembly overview - rear axle, vehicles with four-wheel drive	77
2.2	I - Assembly overview - rear axle assembly	78
2.3	II - Assembly overview - suspension link	81
2.4	Removing and installing rear axle	83
2.5	Determining installation position with bonded rubber bush removed	85
2.6	Reworking cap nut in longitudinal member, vehicles with four-wheel drive	85
<b>3</b>	<b>Repairing wheel bearing</b>	<b>87</b>
3.1	Repairing wheel bearing, vehicles with front-wheel drive - drum brakes	87
3.2	Repairing wheel bearing, vehicles with front-wheel drive - disc brakes	90
3.3	Repairing wheel bearings, vehicles with four-wheel drive - drum brakes	94
3.4	Repairing wheel bearing, vehicles with four-wheel drive - disc brakes	97
<b>44</b>	<b>- Wheels, tyres, vehicle geometry</b>	<b>101</b>
<b>1</b>	<b>Wheel alignment</b>	<b>101</b>
1.1	Test prerequisites:	101
1.2	Specifications for wheel alignment, vehicles with front and four-wheel drive	101
1.3	Adjusting front wheel camber	103
1.4	Calculating the direction of travel:	103
<b>45</b>	<b>- Anti-lock brake system</b>	<b>104</b>
<b>1</b>	<b>Anti-lock brake system (ABS) and anti-lock brake system with electronic differential lock (ABS/EDL) Teves 04</b>	<b>104</b>
1.1	Notes for repairs on ABS, ABS/EDL	104
1.2	Removing and installing control unit	105
1.3	Removing and installing speed sensor and speed sensor rotor	105
<b>2</b>	<b>Assembly overview - hydraulic unit, brake servo/brake master cylinder Teves 04 - LHD</b>	<b>107</b>
2.1	Assembly overview - hydraulic unit, brake servo/brake master cylinder, LHD	107
2.2	Modified Teves 04 ABS/EDL units	108
2.3	Removing and installing hydraulic unit, LHD	109
2.4	Removing and installing brake pedal position sender, LHD	110
<b>3</b>	<b>Assembly overview - hydraulic unit, brake servo/brake master cylinder Teves 04, RHD</b>	<b>112</b>
3.1	Assembly overview - hydraulic unit, brake servo/brake master cylinder, RHD	112
3.2	Removing and installing hydraulic unit, RHD	115
3.3	Removing and installing brake pedal position sender, RHD	116
<b>4</b>	<b>Anti-lock brake system (ABS) and anti-lock brake system with electronic differential lock (ABS/EDL), Teves 20 GI</b>	<b>118</b>
4.1	General information on this ABS	118
4.2	Notes for repairs on ABS, ABS/EDL	118
4.3	Removing and installing control unit and hydraulic unit	119
<b>5</b>	<b>Assembly overview - hydraulic unit, brake servo/brake master cylinder Teves 20 GI - LHD</b>	<b>122</b>
5.1	Assembly overview - hydraulic unit, brake servo/brake master cylinder, LHD	122
<b>6</b>	<b>Assembly overview - hydraulic unit Teves 20 GI, RHD</b>	<b>123</b>
6.1	Assembly overview - hydraulic unit Teves 20 GI, RHD	123
<b>7</b>	<b>Initiating basic setting, vehicles with ABS/EDL</b>	<b>125</b>
<b>46</b>	<b>- Brakes - mechanism</b>	<b>126</b>
<b>1</b>	<b>Repairing front brakes</b>	<b>126</b>
1.1	Repairing front brakes, brake caliper VW II	126
1.2	Removing and installing brake pads/brake calipers	128
1.3	Removing and installing brake pads/brake calipers as of model year 1996 (T)	129
1.4	Repairing front brakes, Girling brake caliper	130
1.5	Removing and installing brake pads or linings	132
1.6	Repairing front brakes, Teves/ATE	133



1.7	Removing and installing brake pads or linings	135
<b>2</b>	<b>Repairing rear brakes (drum brakes)</b>	<b>138</b>
2.1	Removing and installing rear brakes	138
2.2	Removing and installing impulse rotor	139
2.3	Repairing rear brakes	139
2.4	Removing and installing brake shoes	141
2.5	Adjusting handbrake	142
<b>3</b>	<b>Repairing rear brakes (disc brakes)</b>	<b>144</b>
3.1	Repairing rear brakes (disc brakes)	144
3.2	Modified brake caliper	146
3.3	Removing and installing brake pads or linings	146
3.4	Adjusting handbrake	148
<b>4</b>	<b>Assembly overview - handbrake lever</b>	<b>149</b>
<b>47 - Brakes - hydraulics</b>		<b>150</b>
<b>1</b>	<b>Assembly overview - brake servo/brake master cylinder</b>	<b>150</b>
1.1	Ecomatic vacuum supply	151
1.2	Assembly overview: pedal cluster, brake pedal	152
1.3	Separating brake pedal from, and clipping to, brake servo	153
1.4	Removing and installing brake pedal	154
<b>2</b>	<b>Removing and installing brake servo/brake master cylinder, RHD</b>	<b>155</b>
2.1	Removing and installing brake servo/brake master cylinder, RHD	155
<b>3</b>	<b>Repairing front brake caliper, brake caliper VW II</b>	<b>156</b>
3.1	Removing and installing front brake caliper piston	157
<b>4</b>	<b>Repairing Girling front brake calipers</b>	<b>159</b>
4.1	Assembly overview - Girling front brake calipers	159
4.2	Removing and installing front brake caliper piston	160
<b>5</b>	<b>Repairing rear brake caliper</b>	<b>162</b>
5.1	Removing and installing rear brake caliper piston	163
<b>6</b>	<b>Checking and adjusting brake pressure regulator</b>	<b>165</b>
6.1	Checking and adjusting brake pressure regulator, load-dependent	165
6.2	Specifications for load dependent brake pressure regulator	165
6.3	Checking brake pressure regulator, pressure-dependent	166
<b>7</b>	<b>Bleeding brake system on vehicles with and without ABS or ABS/EDL</b>	<b>168</b>
7.1	Bleeding brake system	168
7.2	Bleeding brake system without brake filling and bleeding unit	169
<b>48 - Steering</b>		<b>170</b>
<b>1</b>	<b>Assembly overview: steering column, column tube, steering wheel and airbag steering wheel</b>	<b>170</b>
1.1	Modified teeth on steering rack steering pinion and steering column drive shaft	172
1.2	Assembly overview: Steering wheel with airbag	173
1.3	Removing and installing airbag module	174
1.4	Removing and installing steering wheel with airbag	175
1.5	Removing and installing coil connector with slip ring	176
1.6	Removing and installing column tube for height adjustable steering wheel	177
<b>2</b>	<b>Assembly overview: mechanical steering rack</b>	<b>178</b>
2.1	Adjusting steering rack	179
2.2	Removing and installing mechanical (manual) steering rack	180
2.3	Bolting track rod onto steering rack	181
<b>3</b>	<b>Repairing power steering</b>	<b>183</b>
3.1	Checking pump delivery pressure	183
3.2	Checking function of steering hydraulics pump V119 , Ecomatic	184
3.3	Checking delivery pressure of steering hydraulics pump V119 , Ecomatic	184



3.4	Removing and installing steering hydraulics pump V119 , Ecomatic .....	185
3.5	Removing and installing power steering rack .....	186
3.6	Assembly overview - power steering rack (TRW) .....	188
3.7	Modified teeth on steering rack steering pinion and steering column drive shaft .....	190
3.8	Modified track rod ball joint for Golf Variant, Golf convertible .....	190
3.9	Removing and installing track rod (TRW and ZF power steering rack) .....	191
3.10	Checking and/or adjusting left-hand track rod length .....	192
3.11	Repairing TRW power steering .....	193
3.12	Dismantling and assembling power steering rack (TRW) .....	196
3.13	Adjusting power steering rack when installed .....	205
3.14	Adjusting power steering rack with new steering rack (TRW) .....	206
3.15	Assembly overview - power steering rack (ZF) .....	207
3.16	Repairing ZF power assisted steering rack .....	210
3.17	Dismantling and assembling power assisted steering rack (ZF) .....	212
3.18	Adjusting power steering rack (ZF) .....	222
<b>4</b>	<b>Assembly overview: vane pump, reservoir and hydraulic lines .....</b>	<b>223</b>
4.1	Assembly overview: steering hydraulics pump V119 , hydraulic lines, Ecomatic .....	224
4.2	Removing and installing power steering vane pump, vehicles with 1.4 l engine .....	227
4.3	Removing and installing poly-V belt .....	228
4.4	Removing and installing power steering vane pump, vehicles with 1.8l, 1.9l, 2.0l engine ..	229
4.5	Installing vane pump .....	230
4.6	Tensioning V-belt .....	231
4.7	Removing and installing power-assisted steering vane pump, vehicles with 128 kW engine .....	232