



Contents

50 - Body - front	1
1 Body - front	1
1.1 Removing and installing lock carrier with add-on components	1
1.2 Removing and installing front wing	2
55 - Bonnet, rear lid	4
1 Bonnet	4
1.1 Removing and installing bonnet lock cable	4
2 Rear lid	5
2.1 Removing gas strut	5
2.2 Removing gas strut (estate)	5
2.3 Releasing gas from gas strut	6
2.4 Adjusting lid (estate)	6
2.5 Removing and installing rear lid lock (estate) ▶ 07.95	7
2.6 Repairing push button (estate)	9
2.7 Removing and installing rear lid lock (estate) 08.95 ▶	10
2.8 Removing and installing lock cylinder	10
57 - Front doors, door components, central locking	12
1 Front door	12
1.1 Assembly overview - front door	12
1.2 Assembly overview - front door (only for 2 and 4-door vehicles with side airbag)	13
1.3 Installing impact padding (only for 2- and 4-door vehicles with side airbag)	14
1.4 Removing and installing door	14
1.5 Adjusting door	15
1.6 Removing door window	16
1.7 Adjusting door window	17
1.8 Removing and installing window regulator	17
1.9 Repairing electric window regulators	18
1.10 Electric window regulator with convenience function (automatic opening and closing) and force limitation mechanism	19
1.11 Overcoming resistance with excess force limitation	20
1.12 Initialising and releasing automatic closing function	21
1.13 Assembly overview - door lock with working parts	22
1.14 Removing and installing door lock	22
1.15 Removing inner release handle	23
1.16 Assembly overview - door handle	23
1.17 Removing and installing door handle	25
1.18 Maintaining single-key locking	25
2 Central locking	26
2.1 Assembly overview - central locking	26
2.2 New couplings and distributor elements for pipe connections	27
2.3 Removing and installing dual pressure pump	27
2.4 Removing and installing positioning element for fuel tank flap	28
2.5 Removing and installing front door positioning element	28
2.6 Removing and installing rear door lock positioning element	29
2.7 Removing and installing rear lid positioning element	31
2.8 Removing and installing rear lid positioning element (estate)	31
2.9 Functional check of central locking	32
58 - Rear doors, door components	34
1 Rear door	34
1.1 Assembly overview - rear door	34



1.2	Adjusting door window	35
60	Sunroof	36
1	Sunroof with glass panel	36
1.1	Assembly overview - sliding/tilting roof with glass panel	36
1.2	Removing glass panel for sliding/tilting sunroof	37
1.3	Installing glass panel for sliding/tilting sunroof	38
1.4	Adjusting sunroof glass panel height	38
1.5	Adjusting panel seal	39
1.6	Checking electric drive (0 position)	39
1.7	Checking and adjusting parallel running	40
1.8	Removing and installing sliding headliner ▶ 08.94	41
1.9	Removing and installing sliding headliner 09.94 ▶	42
1.10	Removing and installing carrier unit	43
1.11	Cleaning water drain hoses	45
63	Bumpers	48
1	Front bumper	48
1.1	Removing and installing front bumper	48
2	Rear bumper	50
2.1	Removing and installing rear bumper	50
2.2	Removing and installing rear bumper (estate)	51
64	Glazing	52
1	Flush bonded windows	52
1.1	Tools	52
1.2	Materials	54
1.3	Assembly overview - windscreen	54
1.4	Removing and installing windscreen	55
1.5	Assembly overview - rear window	56
1.6	Removing and installing rear window	57
1.7	Assembly overview - side window	59
1.8	Removing and installing side window	59
1.9	Preparing old undamaged window for glazing	61
1.10	Preparing new window for glazing	61
1.11	Preparing body flange for glazing	62
1.12	Installation instructions	62
1.13	Curing time	62
1.14	Touching up paint damage	63
1.15	Cleaning off excess adhesive sealing material	63
66	Exterior equipment	64
1	Trim	64
1.1	Removing and installing radiator grille with trim frame	64
2	Roof moulding	65
2.1	Removing and installing roof moulding	65
3	Roof railing	67
3.1	Removing and installing roof railing	67
4	Removing and installing wheel housing liner	68
5	Exterior mirror	69
6	Protective strips	70
6.1	Renewing side protective strips	70
7	Spoiler	71
7.1	Removing and installing rear spoiler (Vento)	71
7.2	Retrofitting rear spoiler (Vento)	71



8	Sill panel trim	73
8.1	Assembly overview	73
8.2	Removing and installing retaining strip	73
68	- Interior equipment	75
1	Interior mirror	75
1.1	Removing and installing interior mirror	75
1.2	Repair method using glass-to-metal adhesive	75
2	Compartments, covers and trims	77
2.1	Removing and installing centre console	77
2.2	Assembly overview - glove box	79
2.3	Removing passenger's storage compartment	80
2.4	Removing trim for dash panel insert	80
2.5	Removing sun visor	80
3	Grab handles	81
3.1	Removing roof grab handle	81
4	Sill panel trims	82
4.1	Tools	82
4.2	Removing and installing sill panel trim	82
5	Net partition	84
5.1	Retrofitting net partition	84
5.2	Installing reinforcement plates and lashing eyes	84
5.3	Widening openings for cover caps in moulded headliner	86
5.4	Hooking in net partition	86
6	Luggage compartment cover	88
6.1	Removing and installing luggage compartment cover	88
7	Glove compartment	89
7.1	Removing and installing glove compartment on vehicles with passenger airbag	89
7.2	Removing glove compartment lock cylinder on vehicles with passenger airbag	90
69	- Passenger protection	92
1	Seat belts	92
1.1	Safety regulations for belt tensioners	92
1.2	Disposal of belt tensioner units	92
1.3	Checking belt tensioner	92
1.4	Removing and installing front seat belts with belt tensioner	92
1.5	Removing and installing belt reel with tensioner unit	93
1.6	Removing and installing front seat belts without belt tensioner	96
1.7	Removing and installing belt height adjustment	97
1.8	Removing front anchorage (two-door)	97
1.9	Removing front anchorage (four-door)	98
1.10	Removing front belt buckle	98
1.11	Removing and installing rear seat belts	98
1.12	Removing and installing rear belt reel	99
1.13	Removing and installing lap belt and double buckle	100
2	Inspecting seat belts	101
2.1	Points to check	101
3	Airbag	104
3.1	Overview - installation locations	104
3.2	Safety precautions when working on the airbag	104
3.3	Disposal of airbag units	105
3.4	Deactivating the airbag	105
3.5	Renewing airbag units following an accident	105
3.6	Removing and installing driver airbag unit	106



3.7	Removing and installing steering wheel	108
3.8	Removing and installing return spring with slip ring	109
3.9	Removing and installing front passenger airbag unit	110
3.10	Removing and installing driver and front passenger side airbag	113
3.11	Removing and installing sensor for driver's/front passenger's side airbag	114
3.12	Removing and installing airbag control unit (J 234)	115
3.13	Retrofitting airbag (driver side)	116
3.14	Adapting components	119
70	- Trim, insulation	120
1	Dash panel	120
1.1	Removing and installing dash panel	120
2	Door trims	123
2.1	Tools	123
2.2	Removing and installing front door trim	123
2.3	Removing and installing rear door trim	125
2.4	Removing and installing window crank handle	126
2.5	Removing and installing door insulation film	126
3	Pillar and side trims	131
3.1	Tools	131
3.2	Removing and installing upper A-pillar trim	131
3.3	Removing and installing B-pillar trim	132
3.4	Removing and installing upper C-pillar trim (Golf)	135
3.5	Removing and installing upper C-pillar trim (Vento)	136
3.6	Removing and installing upper C-pillar trim (Estate)	137
3.7	Removing and installing lower C-pillar trim (Golf 4-door, Vento)	138
3.8	Removing and installing lower C-pillar trim (Estate)	138
3.9	Removing and installing D-pillar trim (estate)	140
3.10	Removing and installing side trim (Golf 2-door)	141
4	Luggage/load compartment trim	142
4.1	Tools	142
4.2	Removing and installing luggage compartment cover (Golf)	142
4.3	Removing and installing rear shelf (Vento)	144
4.4	Removing and installing side trim of luggage compartment (Vento)	145
4.5	Removing and installing left luggage compartment trim (Estate)	146
4.6	Removing and installing right luggage compartment trim (Estate)	147
4.7	Removing and installing luggage compartment floor trim (Estate)	148
4.8	Removing and installing load sill cover (Estate)	149
5	Rear lid trim	150
5.1	Removing and installing rear lid trim (Golf)	150
5.2	Removing and installing rear lid trim (Estate)	151
6	Roof trims	152
6.1	Repairing moulded headliner (Golf, Vento)	152
6.2	Removing and installing moulded headliner (Golf, Vento)	152
6.3	Repairing moulded headliner (Estate)	154
6.4	Removing and installing moulded headliner (estate)	155
72	- Seat frames	157
1	Front seats	157
1.1	Tools	157
1.2	Removing and installing seat	157
1.3	Removing and installing backrest	161
2	Rear seats	164
2.1	Removing and installing (split folding) bench seat and backrest	164
2.2	Removing and installing centre armrest (Vento)	165



2.3	Removing and installing ski bag (Vento)	167
74 - Seat - padding, covers		168
1	Front seat covers and padding	168
1.1	Tools	168
1.2	Removing and installing front seat cover and padding	168
1.3	Removing and installing backrest cover and padding	170
2	Rear seat covers and padding	172
2.1	Removing and installing cover and padding for (one-piece) bench seat	172
2.2	Removing and installing cover and padding for (one-piece) backrest	173
2.3	Removing and installing covers and padding for (divided) bench seat (Golf, Vento)	174
2.4	Removing and installing covers and padding for (divided) backrest (Golf, Vento)	175
2.5	Removing and installing lock (backrest) (Vento)	176
2.6	Removing and installing covers and padding for bench seat (Estate)	177
2.7	Removing and installing covers and padding for backrest (Estate)	178