



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Vehicle identification data</b>	<b>1</b>
1.1 Identification plate	1
1.2 Vehicle data plate	1
1.3 Vehicle identification number	1
<b>2 Body dimensions</b>	<b>2</b>
2.1 Floor group, front	2
2.2 Floor group, centre	4
2.3 Floor group, rear (Golf)	5
2.4 Floor group, rear (Vento)	6
2.5 Floor group, rear (Variant)	7
2.6 Body - front	10
2.7 Body, centre (2-door)	13
2.8 Body, centre (4-door)	14
2.9 Body, rear (Golf)	18
2.10 Body, rear (Vento)	20
2.11 Body, rear (Variant)	22
<b>3 Straightening jig</b>	<b>25</b>
3.1 Overview, Golf	25
3.2 Overview, Vento	32
3.3 Overview, Golf syncro	34
3.4 Overview, Golf Variant	37
3.5 Overview, Golf Variant syncro	40
<b>4 Galvanized body parts</b>	<b>46</b>
<b>50 - Body - front</b>	<b>47</b>
<b>1 Renewing support for suspension link</b>	<b>47</b>
1.1 Removing	47
<b>2 Renewing front wheel housing</b>	<b>49</b>
2.1 Removing	49
<b>3 Renewing front wheel housing - partial renewal</b>	<b>52</b>
3.1 Removing	52
<b>4 Front longitudinal member - partial renewal in front of auxiliary link mounting</b>	<b>54</b>
4.1 Removing	54
<b>5 Front longitudinal member - partial renewal behind auxiliary link mounting</b>	<b>56</b>
5.1 Removing	56
<b>6 Renewing front part of longitudinal member</b>	<b>58</b>
6.1 Removing	58
<b>51 - Body - centre</b>	<b>61</b>
<b>1 Renewing roof</b>	<b>61</b>
1.1 Removing	61
<b>2 Renewing roof (Vento)</b>	<b>63</b>
2.1 Removing	63
<b>3 Renewing roof (Variant)</b>	<b>65</b>
3.1 Removing	65
<b>4 Renewing T-pins for roof strip</b>	<b>68</b>
4.1 T-pin position dimensions (Golf, 2-door)	68
4.2 Welding in T-pins (Golf, 2-door)	69
4.3 T-pin position dimensions (Golf, 4-door)	70
4.4 Welding in T-pins (Golf, 4-door)	71



4.5	T-pin position dimensions (Vento)	72
4.6	Welding in T-pins (Vento)	73
<b>5</b>	<b>Renewing inner side panel (Variant)</b>	<b>74</b>
5.1	Removing	74
<b>6</b>	<b>Renewing inner side panel - partial renewal (Variant)</b>	<b>78</b>
6.1	Removing	78
<b>7</b>	<b>Renewing lower A-pillar- partial renewal</b>	<b>81</b>
7.1	Removing	81
<b>8</b>	<b>Renewing upper A-pillar- partial renewal</b>	<b>83</b>
8.1	Removing	83
<b>9</b>	<b>Renewing B-pillar- partial renewal</b>	<b>85</b>
9.1	Removing	85
<b>10</b>	<b>Renewing outer side member</b>	<b>87</b>
10.1	Removing	87
<b>11</b>	<b>Renewing floor panel - partial renewal</b>	<b>89</b>
11.1	Removing	89
<b>53 - Body - rear</b>		<b>91</b>
<b>1</b>	<b>Renewing rear cross panel</b>	<b>91</b>
<b>2</b>	<b>Renewing rear cross panel</b>	<b>92</b>
2.1	Removing	92
<b>3</b>	<b>Renewing rear cross panel - partial renewal</b>	<b>95</b>
3.1	Removing	95
<b>4</b>	<b>Renewing rear cross panel (syncro)</b>	<b>97</b>
4.1	Removing	97
<b>5</b>	<b>Renewing rear cross panel (Vento)</b>	<b>100</b>
5.1	Removing	100
<b>6</b>	<b>Renewing rear cross panel (Variant)</b>	<b>102</b>
6.1	Removing	102
<b>7</b>	<b>Renewing rear cross panel (Variant)</b>	<b>105</b>
7.1	Includes: Lock carrier	105
<b>8</b>	<b>Renewing rear cross panel (Variant syncro)</b>	<b>109</b>
8.1	Includes: Lock carrier	109
<b>9</b>	<b>Renewing tail light mounting (Variant)</b>	<b>113</b>
9.1	Removing	113
<b>10</b>	<b>Renewing intermediate piece (Vento)</b>	<b>115</b>
10.1	Removing	115
<b>11</b>	<b>Renewing luggage compartment floor, part section</b>	<b>117</b>
11.1	Removing	117
<b>12</b>	<b>Renewing luggage compartment floor (syncro)</b>	<b>119</b>
12.1	Removing	119
<b>13</b>	<b>Renewing rear luggage compartment floor (Variant)</b>	<b>122</b>
13.1	Removing	122
13.2	Part section	123
<b>14</b>	<b>Renewing rear pillar, partial renewal (Variant)</b>	<b>126</b>
14.1	Removing	126
<b>15</b>	<b>Renewing cover plate (Vento)</b>	<b>128</b>
15.1	Removing	128
<b>16</b>	<b>Rear longitudinal member - part section</b>	<b>130</b>
16.1	Removing	130
<b>17</b>	<b>Rear longitudinal member - part section (syncro)</b>	<b>132</b>



17.1	Removing .....	132
<b>18</b>	<b>Renewing rear longitudinal member - partial renewal (Variant) .....</b>	<b>135</b>
18.1	Removing .....	135
<b>19</b>	<b>Renewing rear longitudinal member (Vento) .....</b>	<b>138</b>
19.1	Removing .....	138
<b>20</b>	<b>Renewing rear longitudinal member - partial renewal (Variant syncro) .....</b>	<b>140</b>
20.1	Removing .....	140
<b>21</b>	<b>Renewing side panel - partial renewal (2-door) .....</b>	<b>144</b>
21.1	Removing .....	144
<b>22</b>	<b>Renewing side panel - partial renewal (4-door) .....</b>	<b>146</b>
22.1	Removing .....	146
<b>23</b>	<b>Renewing side panel (Vento) .....</b>	<b>148</b>
23.1	Removing .....	148
<b>24</b>	<b>Renewing side panel (Variant) .....</b>	<b>151</b>
24.1	Removing .....	151
<b>25</b>	<b>Renewing lower part of side panel (4-door) .....</b>	<b>153</b>
25.1	Removing .....	153
<b>26</b>	<b>Renewing side panel, partial renewal (Variant) .....</b>	<b>155</b>
26.1	Removing .....	155
<b>27</b>	<b>Renewing side panel, partial renewal (2-door) .....</b>	<b>157</b>
27.1	Removing .....	157
<b>28</b>	<b>Renewing rear wheel housing .....</b>	<b>159</b>
28.1	Removing .....	159
<b>29</b>	<b>Renewing rear wheel housing (Variant) .....</b>	<b>162</b>
29.1	Removing .....	162
<b>30</b>	<b>Renewing outer wheel housing liner .....</b>	<b>164</b>
30.1	Removing .....	164
<b>31</b>	<b>Renewing wheel housing liner (Variant) .....</b>	<b>166</b>
31.1	Removing .....	166
<b>32</b>	<b>Renewing rear cross member (Variant) .....</b>	<b>168</b>
32.1	Removing .....	168
<b>33</b>	<b>Renewing rear cross member (Variant syncro) .....</b>	<b>170</b>
33.1	Includes: Left and right cross members and cover plate .....	170