



Contents

01 - Self-diagnosis	1
1 Self-diagnosis of airbag system ▶ 08.94	1
1.1 Function	1
1.2 Deactivating and activating driver side airbag unit ▶ 08.84	7
2 Airbag system self-diagnosis 09.94 ▶	10
2.1 Tools	10
2.2 Function	10
2.3 Coding airbag control unit J234 with fault reader V.A.G 1551	18
2.4 Reading measured value block	20
2.5 Deactivating and activating front passenger airbag unit (adapting) 09.94 ▶	24
2.6 Auxiliary airbag tester VAS 5056	30