



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification of gearbox</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Code letters, allocation, ratios, capacities	2
<b>2 Overview - power transmission</b>	<b>12</b>
<b>3 Calculating overall gear ratio "i"</b>	<b>14</b>
<b>4 General repair instructions</b>	<b>15</b>
4.1 Components	15
<b>30 - Clutch</b>	<b>18</b>
<b>1 Repairing clutch mechanism</b>	<b>18</b>
1.1 Repairing clutch mechanism in Ecomatic vehicles	18
1.2 Assembly overview - pedals - hydraulic and mechanical clutch mechanism	19
1.3 Removing and installing over-centre spring	20
1.4 Removing and installing clutch pedal	21
1.5 Assembly overview - hydraulic system	23
1.6 Removing and installing master cylinder	25
1.7 Bleeding clutch system	27
1.8 Assembly overview - mechanics	28
1.9 Removing and installing clutch cable	29
1.10 Checking function of clutch cable	30
<b>2 Repairing clutch mechanism - Ecomatic</b>	<b>33</b>
2.1 Assembly overview - Ecomatic	33
2.2 Removing and installing clutch actuator	35
2.3 Clutch mechanism/servo-assistance vacuum system	38
2.4 Checking clutch mechanism/servo-assistance vacuum system for leaks	40
<b>3 Repairing clutch</b>	<b>46</b>
3.1 Removing and installing clutch	47
<b>34 - Controls, housing</b>	<b>51</b>
<b>1 Repairing selector mechanism</b>	<b>51</b>
1.1 Installation position of selector mechanism	51
1.2 Assembly overview - selector housing and gear lever	53
1.3 Removing and installing gear shift switch F191	55
1.4 Assembly overview - gear selector relay points on gearbox	56
1.5 Adjusting selector mechanism	59
1.6 Removing and installing selector lever and selector rod	61
<b>2 Removing and installing gearbox</b>	<b>63</b>
2.1 Removing gearbox	63
2.2 Install gearbox	69
<b>3 Checking or topping up gear oil</b>	<b>73</b>
3.1 Checking gear oil	73
<b>4 Dismantling and assembling gearbox</b>	<b>74</b>
4.1 Overview - gearbox	74
4.2 Assembly overview	75
4.3 Part I - Removing and installing cover for gearbox housing and 5th gear	76
4.4 Part II - Dismantling and assembling gearbox housing and selector mechanism	77
4.5 Part III - Removing and installing input shaft, output shaft, differential and selector forks	78
4.6 Assembly sequence	80
<b>5 Repairing clutch housing</b>	<b>97</b>
<b>6 Repairing gearbox housing and selector shaft</b>	<b>103</b>



7	Repairing gearbox housing cover .....	108
<b>35 - Gears, shafts</b>	.....	<b>114</b>
1	Dismantling and assembling input shaft .....	114
2	Dismantling and assembling output shaft .....	122
2.1	Allocation/output shafts .....	129
3	Output shaft .....	130
3.1	Adjusting output shaft .....	130
<b>39 - Final drive - rear differential</b>	.....	<b>134</b>
1	Removing and installing drive flange seals (gearbox installed) .....	134
1.1	Removing .....	135
1.2	Installing .....	136
2	Differential .....	137
2.1	Dismantling and assembling differential .....	137
2.2	Adjusting differential .....	144