



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, assembly allocation, ratios, capacities	2
2 Rear final drive identification	3
2.1 Rear final drive identification	3
2.2 Code letters, assembly allocation, ratios, capacities	4
3 Transmission layout	5
3.1 Transmission layout	5
4 Calculating overall ratio (i)	7
4.1 Calculating overall ratio (i)	7
4.2 Notes on brake and performance tests and towing	7
5 General repair instructions	7
5.1 General repair instructions	7
30 - Clutch	9
1 Servicing clutch control	9
1.1 Servicing clutch control	9
1.2 Assembly overview - pedal cluster	10
1.3 Removing and installing over-centre spring	14
1.4 Removing and installing clutch pedal	15
1.5 Assembly overview - hydraulic system	17
1.6 Removing and installing master cylinder	20
1.7 Bleeding clutch system	22
2 Servicing clutch release mechanism	24
2.1 Servicing clutch release mechanism	24
3 Servicing clutch	27
3.1 Servicing clutch	27
34 - Controls, Housing	32
1 Servicing gear selector mechanism	32
1.1 Servicing gear selector mechanism	32
1.2 Installation position of gear selector mechanism	32
1.3 Removing and installing gear selector cables	35
1.4 Removing and installing gear stick housing	41
1.5 Servicing gear stick	43
1.6 Adjusting gear selector mechanism	46
2 Removing and installing gearbox	48
2.1 Removing and installing gearbox	48
2.2 Removing and installing gearbox and bevel box (Vehicles with 4 cylinder engine)	48
2.3 Removing and installing gearbox and bevel box (Vehicles with 6 cylinder fuel injection engine)	59
3 Removing and installing bevel box	70
3.1 Removing and installing bevel box	70
3.2 Removing and installing bevel box (Vehicles with 4-cylinder engine)	70
3.3 Removing and installing bevel box (Vehicles with 6-cylinder injection engine)	75
4 Checking oil in manual gearbox with bevel box	80
4.1 Checking oil in manual gearbox with bevel box	80
5 Dismantling and assembling gearbox	82
5.1 Dismantling and assembling gearbox	82
5.2 Removing and installing cover for gearbox housing and 5th gear	83
5.3 Removing and installing gearbox housing and selector mechanism	86



5.4	Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	88
5.5	Dismantling and assembling sequence	90
6	Servicing gearbox housing and clutch housing	107
6.1	Servicing gearbox housing and clutch housing	107
7	Dismantling and assembling gearbox selector mechanism	116
7.1	Dismantling and assembling gearbox selector mechanism	116
8	Dismantling and assembling selector forks	121
8.1	Dismantling and assembling selector forks	121
35 - Gears, Shafts		127
1	Dismantling and assembling input shaft	127
1.1	Dismantling and assembling input shaft	127
2	Adjusting input shaft	138
2.1	Adjusting input shaft	138
2.2	Table of adjustment shims	139
2.3	Carrying out check measurement	141
3	Dismantling and assembling output shaft (pinion shaft)	142
3.1	Dismantling and assembling output shaft (pinion shaft)	142
4	Adjusting output shaft	166
4.1	Adjusting output shaft	166
5	Dismantling and assembling reverse shaft	169
5.1	Dismantling and assembling reverse shaft	169
39 - Final drive, Differential rear		173
1	Renewing left-hand flange shaft or right-hand drive flange oil seals (gearbox installed)	173
1.1	Renewing left-hand flange shaft or right-hand drive flange oil seals (gearbox installed)	173
1.2	Renewing left-hand flange shaft oil seal	173
1.3	Renewing right-hand drive flange oil seal	174
2	Renewing bevel box output flange oil seal (bevel box removed)	175
2.1	Renewing bevel box output flange oil seal (bevel box removed)	175
3	Dismantling and assembling differential	177
3.1	Dismantling and assembling differential	177
4	Adjustment overview	189
4.1	Adjustment overview	189
5	Adjusting differential	189
5.1	Adjusting differential	189
6	Dismantling and assembling bevel box	191
6.1	Dismantling and assembling bevel box	191
6.2	Assembly overview	192
6.3	Dismantling and assembling sequence	201
7	Adjusting shaft bevel gear and bevel gear (gear set)	212
7.1	Adjusting shaft bevel gear and bevel gear (gear set)	212
7.2	General notes	212
7.3	Adjusting and marking of gear sets	212
7.4	Position of shims	213
7.5	Adjustment overview (bevel box)	213
7.6	Recommended sequence for adjusting gear set	214
7.7	Determining shim "S4" thickness when replacing output flange	214
7.8	Adjusting shaft bevel gear	215
7.9	Adjusting bevel gear	221
8	Removing and installing propshaft	224
8.1	Removing and installing propshaft	224
9	Servicing propshaft	228



9.1	Servicing propshaft	228
10	Checking function of viscous coupling	236
10.1	Checking function of viscous coupling	236
11	Removing and installing viscous coupling	236
11.1	Removing and installing viscous coupling	236
12	Removing and installing viscous coupling seal	238
12.1	Removing and installing viscous coupling seal	238
13	Removing and installing drive flange oil seal (rear final drive)	238
13.1	Removing and installing drive flange oil seal (rear final drive)	238
14	Functional check of free-wheel	240
14.1	Functional check of free-wheel	240
15	Functional check of free-wheel lock	240
15.1	Functional check of free-wheel lock	240
16	Removing and installing rear final drive	241
16.1	Removing and installing rear final drive	241
17	Checking rear final drive oil	244
17.1	Checking rear final drive oil	244
18	Dismantling and assembling rear final drive	245
18.1	Dismantling and assembling rear final drive	245
18.2	Removing viscous coupling and rear axle housing from bevel gear housing	257
18.3	Servicing shaft bevel gear bearings	259
18.4	Pressing bevel gear off and on input shaft	263
18.5	Servicing bevel gear/input shaft bearings	264
18.6	Servicing differential bearings	268
18.7	Installing rear axle housing on bevel gear housing and building on viscous coupling	270
19	Dismantling and assembling differential and freewheel (assembly overview)	275
19.1	Dismantling and assembling differential and freewheel (assembly overview)	275
20	Dismantling and assembling differential (sequence)	279
20.1	Dismantling and assembling differential (sequence)	279
21	Removing and installing freewheel (sequence)	280
21.1	Removing and installing freewheel (sequence)	280
22	Dismantling and assembling freewheel (sequence)	281
22.1	Dismantling and assembling freewheel (sequence)	281
23	Adjusting bevel gear and shaft bevel gear (gear set)	282
23.1	Adjusting bevel gear and shaft bevel gear (gear set)	282
23.2	General notes	282
23.3	Adjusting and marking of gear sets	283
23.4	Position of shims	284
23.5	Adjustment overview (rear final drive)	284
23.6	Recommended sequence for adjusting gear set	285
23.7	Adjusting shaft bevel gear	285
23.8	Adjusting bevel gear	289