



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
2 Information on "Automatic gearbox 01M"	2
2.1 Information on "Automatic gearbox 01M"	2
3 Code letters, gearbox allocation, ratios, equipment	2
3.1 Code letters, gearbox allocation, ratios, equipment	2
4 Capacities	9
4.1 Capacities	9
5 Repair instructions	10
5.1 Repair instructions	10
32 - Torque converter	13
1 Torque converter	13
1.1 Torque converter	13
1.2 Identification of torque converter	13
1.3 Torque converter allocation	14
1.4 Removing and installing torque converter oil seal	16
1.5 Draining torque converter	17
37 - Controls, Housing	19
1 Servicing shift mechanism	19
1.1 Servicing shift mechanism	19
1.2 Checking shift mechanism	19
1.3 Checking and adjusting selector lever cable	19
1.4 Checking ignition key removal lock (vehicles with ignition key removal lock)	20
1.5 Dismantling and assembling selector mechanism	20
1.6 Dismantling and assembling shift mechanism (vehicles with ignition key removal lock)	29
1.7 Dismantling and assembling selector lever (vehicles with ignition key removal lock)	37
1.8 Removing and installing locking cable (vehicles with ignition key removal lock)	43
1.9 Adjusting locking cable (vehicles with ignition key removal lock)	46
2 Checking gearbox	46
2.1 Checking gearbox	46
2.2 Checking shift points	47
2.3 Checking stall speed	47
2.4 Measuring main pressure	47
2.5 Fault finding table for "4-speed automatic gearbox"	47
3 Removing and installing gearbox	47
3.1 Removing and installing gearbox	47
3.2 Removing and installing starter bush	53
4 Checking and topping up ATF level	55
4.1 Checking and topping up ATF level	55
4.2 Checking ATF level	56
4.3 Topping up ATF	58
4.4 Renewing ATF	59
5 Gearbox with selector elements	60
5.1 Gearbox with selector elements	60
5.2 Position of selector elements	61
6 Dismantling and assembling gearbox	63
6.1 Dismantling and assembling gearbox	63
6.2 Removing and installing ATF cooler and ATF filler tube	63
6.3 Dismantling and assembling planetary gearbox -Overview-	65



6.4	I - Removing and installing ATF pump to supporting tube	66
6.5	II - Removing and installing reverse gear clutch -K2- to large sun wheel	70
6.6	III - Removing and installing freewheel and reverse gear brake -B1-	73
6.7	IV - Planet carrier and gearbox housing with input gear and cover	75
6.8	Dismantling and assembling planetary gearbox	77
6.9	Overview of all planetary gearbox adjustments	94
6.10	Adjusting planet carrier	95
6.11	Adjusting reverse gear brake -B1-	101
6.12	Adjusting clutch play between -K1- and -K2-	106
6.13	Adjusting 2nd and 4th gear brake -B2-	111
38	- Gears, Hydraulic controls	124
1	Dismantling and assembling ATF pump	124
1.1	Dismantling and assembling ATF pump	124
2	Dismantling and assembling freewheel with -B1- piston	127
2.1	Dismantling and assembling freewheel with -B1- piston	127
3	Dismantling and assembling 1st to 3rd gear clutch -K1-	129
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1-	129
4	Dismantling and assembling reverse gear clutch -K2-	134
4.1	Dismantling and assembling reverse gear clutch -K2-	134
5	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	137
5.1	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	137
6	Removing and installing valve chest	141
6.1	Removing and installing valve chest	141
7	Dismantling and assembling parking lock	150
7.1	Dismantling and assembling parking lock	150
39	- Final drive, Differential	157
1	Checking oil in final drive	157
1.1	Checking oil in final drive	157
2	Removing and installing oil seal for drive flange	157
2.1	Removing and installing oil seal for drive flange	157
3	Dismantling and assembling final drive	160
3.1	Dismantling and assembling final drive	160
3.2	Repair overview of final drive	160
3.3	Removing and installing input gear	162
3.4	Removing and installing drive pinion	166
3.5	Removing and installing differential	173
3.6	Dismantling and assembling differential	181
4	Adjusting final drive	187
4.1	Adjusting final drive	187
4.2	Overview of adjustments	187
4.3	Adjustments to be completed after replacing individual components	188
4.4	Adjusting drive pinion	189
4.5	Adjusting input gear	191
4.6	Adjusting differential	192