



## Contents

<b>01 - Self diagnosis . . . . .</b>	<b>1</b>
1 <b>Self diagnosis . . . . .</b>	<b>1</b>
1.1    Self diagnosis . . . . .	1
1.2    Function . . . . .	1
1.3    Technical data of self diagnosis . . . . .	1
1.4    Connecting fault reader V.A.G 1551 and selecting engine electronics control unit . . . . .	2
1.5    Interrogating fault memory . . . . .	4
1.6    Fault table . . . . .	5
1.7    Erasing fault memory . . . . .	7
1.8    Final control diagnosis . . . . .	8
1.9    Erasing values learnt by engine electronics control unit . . . . .	12
1.10   Read measured value block and basic settings . . . . .	12
1.11   Display group overview . . . . .	13
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>16</b>
1 <b>Mono-Motronic injection and ignition system . . . . .</b>	<b>16</b>
1.1    Mono-Motronic injection and ignition system . . . . .	16
1.2    Fitting locations overview . . . . .	16
1.3    Servicing injection part . . . . .	19
1.4    Dismantling and assembling intake manifold . . . . .	26
1.5    Dismantling and assembling wheel housing mounted air cleaner and intake elbow . . . . .	28
1.6    Dismantling and assembling round air cleaner . . . . .	30
1.7    Servicing injection unit . . . . .	32
1.8    Safety precautions . . . . .	42
1.9    Rules for cleanliness . . . . .	42
1.10   Technical data . . . . .	43
1.11   Idling speed check . . . . .	43
1.12   Checking Lambda probe and Lambda control . . . . .	45
1.13   Checking Lambda probe heating . . . . .	48
1.14   Checking engine operating mode . . . . .	49
1.15   Checking overrun cut-off . . . . .	50
1.16   Checking throttle valve positioner . . . . .	51
1.17   Checking and adjusting idling switch . . . . .	53
1.18   Checking sender for throttle valve positioner . . . . .	58
1.19   Checking throttle valve potentiometer . . . . .	59
1.20   Checking coolant temperature sender . . . . .	61
1.21   Checking intake air temperature sender . . . . .	64
1.22   Checking injector . . . . .	68
1.23   Checking speed signal . . . . .	71
1.24   Checking control unit voltage supply . . . . .	72
1.25   Matching engine electronic control unit to electronic immobilizer . . . . .	73
1.26   Checking fuel pressure regulator and holding pressure . . . . .	74
1.27   Adapting idling speed . . . . .	77
1.28   Checking intake air system for leaks (unmetered air) . . . . .	78
1.29   Checking intake air preheating . . . . .	79
1.30   Wire routing engine wiring loom . . . . .	81
<b>28 - Ignition system . . . . .</b>	<b>84</b>
1 <b>Mono-Motronic injection and ignition system . . . . .</b>	<b>84</b>
1.1    Mono-Motronic injection and ignition system . . . . .	84
1.2    Servicing ignition part . . . . .	84
1.3    Dismantling and assembling distributor . . . . .	88
1.4    Safety precautions . . . . .	89
1.5    Adjustment data, Spark plugs . . . . .	89



Golf 1992 , Vento 1992 >  
Mono Motronic injection and ignition system - Edition 11.1994

---

1.6	Checking and adjusting ignition timing . . . . .	89
1.7	Checking ignition timing control . . . . .	91
1.8	Checking Hall sender . . . . .	91
1.9	Checking ignition transformer . . . . .	93
1.10	Checking ignition transformer output stage . . . . .	93
1.11	Checking knock sensor . . . . .	95